

Table Of Contents

RAKE:

Exposed Fastener Roof System

R01 – Sheeted endwall.....	Page 1
R02 – Extension with “PBR” soffit.....	Page 2
R03 – Extension W/out soffit.....	Page 3
R04 – Peak box.....	Page 4
R05 – Extension with “PBU” soffit.....	Page 5
R06 – Masonry endwall	Page 6
R07 – Masonry endwall peak box.....	Page 7
R08 – Future endwall masonry	Page 8
R09 – Extension with “PBU” soffit.....	Page 9
R10 – Open endwall.....	Page 10

Trapezoidal Roof System

R11 – On module start detail – Fixed	Page 11
R12 – On module end detail – Fixed	Page 12
R13 – Off module start detail – Fixed	Page 13
R14 – Off module end detail – Fixed	Page 14
R15 – On module start detail – Floating	Page 15
R16 – On module end detail – Floating	Page 16
R17 – Off module start detail – Floating	Page 17
R18 – Off module end detail – Floating	Page 18

Vertical Leg 180° or 90° Roof System

R19 – On module start detail – Fixed	Page 19
R20 – On module end detail – Fixed	Page 20
R21 – Off module start detail – Fixed	Page 21
R22 – Off module end detail – Fixed	Page 22
R23 – On module start detail – Floating	Page 23
R24 – On module end detail – Floating	Page 24
R25 – Off module start detail – Floating	Page 25
R26 – Off module end detail – Floating	Page 26

EAVE:

Exposed Fastener Roof System

E01 – Gutter.....	Page 1
E02 – Simple eave.....	Page 2
E03 – Gutter with simple eave trim	Page 3
E04 – Roof overhang – open wall with gutter	Page 4
E05 – Roof overhang – open wall with eave	Page 5
E06 – Gutter stand-off.....	Page 6
E07 – High side eave closure	Page 7
E08 – Sculptured eave.....	Page 8
E09 – Gutter stand-off for future brick.....	Page 9
E10 – Gutter with masonry wall	Page 10
E11 – Open wall with gutter and downspout	Page 11
E12 – Open wall with gutter and downspout	Page 12
E13 – Open wall with gutter and “PBU” soffit	Page 13
E14 – Jamb brace.....	Page 14

Table Of Contents

EAVE continued:

Trapezoidal Roof System

E15 – Gutter – Fixed or floating	Page 15
E16 – Sculptured eave – Fixed or floating	Page 16
E17 – Simple eave – Fixed or floating	Page 17
E18 – High side eave closure – Fixed or floating	Page 18

Vertical Leg 180° or 90° Roof System

E19 – Gutter – Fixed or floating	Page 19
E20 – Sculptured eave – Fixed or floating	Page 20
E21 – Simple eave – Fixed or floating	Page 21
E22 – High side eave closure – Fixed or floating	Page 22

RIDGE:

Exposed Fastener Roof System

R101 – Ridge cap / panel end lap	Page 1
R102 – Sculptured ridge flashing	Page 2
R103 – Flat ridge/hip flashing	Page 3
R104 – Vent material (coming soon)	Page 4
R105 – Low profile vent (Cor-A-Vent)	Page 5
R106 – Ridge vent 9"x10'	Page 6
R107 – Ridge vent 12"x10'	Page 7

Trapezoidal Roof System

R108 – Ridge	Page 8
R109 – Hip	Page 9
R110 – Low profile vent (Cor-A-Vent) – Low system	Page 10
R111 – Low profile vent (Cor-A-Vent) – High system	Page 11
R112 – Low profile vent (Vent Material)	Page 12
R113 – Low profile vent (Perforated)	Page 13
R114 – Ridge vent 9"x10'	Page 14
R115 – Ridge vent 12"x10'	Page 15

Vertical Leg 180° or 90° Roof System

R116 – Ridge - Fixed or floating	Page 16
R117 – Hip	Page 17
R118 – Low profile vent (Cor-A-Vent) – Low system	Page 18
R119 – Low profile vent (Cor-A-Vent) – High system	Page 19
R120 – Low profile vent (Vent Material)	Page 20
R121 – Low profile vent (Perforated)	Page 21
R122 – Ridge vent 9"x10'	Page 22
R123 – Ridge vent 12"x10'	Page 23

ENDLAP:

Exposed Fastener Roof System

EL01 – Standard endlap	Page 1
------------------------------	--------

Trapezoidal Roof System

EL02 – Standard endlap	Page 2
EL03 – Mid Fixed condition	Page 3

Vertical Leg 180° or 90° Roof System

EL04 – Standard endlap	Page 4
EL05 – Mid Fixed condition	Page 5

Table Of Contents

TIE-IN:

Exposed Fastener Roof System

TI01 – High side eave to sheeted wall	Page 1
TI02 – High side eave to open wall	Page 2
TI03 – Endwall to sheeted wall	Page 3
TI04 – Endwall to endwall – same eave height	Page 4
TI05 – High side eave to wall	Page 5
TI06 – High side eave to wall with soffit	Page 6
TI07 – Sidewall girt to exist. Bldg.	Page 7

Trapezoidal Roof System

TI08 – High side eave to sheeted wall	Page 8
TI09 – High side eave to brick wall	Page 9
TI10 – High side eave to block wall	Page 10

Vertical Leg 180° or 90° Roof System

TI11 – High side eave to sheeted wall	Page 11
TI12 – High side eave to brick wall	Page 12
TI13 – High side eave to block wall	Page 13

PARAPET:

Exposed Fastener Roof System

PR01 – Low sidewall	Page 1
PR02 – High sidewall	Page 2
PR03 – Endwall	Page 3

Trapezoidal Roof System

PR04 – Low Sidewall	Page 4
PR05 – High Sidewall	Page 5
PR06 – Endwall - Fixed	Page 6
PR07 – Endwall - Floating	Page 7

Vertical Leg 180° or 90° Roof System

PR08 – Low sidewall	Page 8
PR09 – High sidewall	Page 9
PR10 – Endwall - 180° Fixed	Page 10
PR11 – Endwall - 180° Floating	Page 11
PR12 – Endwall - 90° Fixed	Page 12
PR13 – Endwall - 90° Floating	Page 13

CORNER:

C01 – Outside “PBR” panel	Page 1
C02 – Inside “PBR” panel	Page 2
C03 – Outside “A” panel	Page 3
C04 – Inside “A” panel	Page 4
C05 – Outside “PBU” panel	Page 5
C06 – Inside “PBU” panel	Page 6
C07 – Masonry outside “PBR” panel	Page 7
C08 – Outside “Rev U” panel	Page 8
C09 – Inside “Rev U” panel	Page 9

Table Of Contents

FRAMED OPENING:

FO01 – Head & jamb	Page 1
FO02 – 3070 Head & jamb	Page 2
FO03 – Angle / head & jamb	Page 3
FO04 – Sill	Page 4
FO05 – Angle sill	Page 5
FO06 – Channel Cover	Page 6
FO07 – Head & Jamb (Rev. PBU)	Page 7
FO12 – Channel Cover (Rev. PBU)	Page 8

BASE:

B01 – Angle attachment	Page 1
B02 – Channel attachment	Page 2
B03 – Base girt condition	Page 3
B04 – Angle attachment with base trim	Page 4
B05 – Angle attachment with base trim – no notch	Page 5
B06 – Masonry angle attachment	Page 6

SCREW SPACING:

SSP01 – Roof “PBR” panel	Page 1
SSP02 – Roof “PBR” panel (UL90)	Page 2
SSP03 – Wall “PBR” panel	Page 3
SSP04 – Wall “PBA” panel	Page 4
SSP05 – Wall “PBU” panel	Page 5
SSP06 – Wall “REV PBU” panel	Page 6
SSP07 – Roof “PBU” panel	Page 7

LINER:

L01 – Base	Page 1
L02 – Cap	Page 2
L03 – Termination (flush girts)	Page 3
L04 – Termination (bypass girts)	Page 4
L05 – Jamb @ overhead door	Page 5
L06 – Jamb @ overhead door (full height liner)	Page 6
L07 – Head @ overhead door (full height liner)	Page 7
L08 – Head @ personnel door	Page 8
L09 – Eave (full height liner)	Page 9
L10 – Rake (full height liner)	Page 10
L11 – Inside corner	Page 11

PARTITION:

P01 – Transverse	Page 1
P02 – Longitudinal	Page 2
P03 – Corner	Page 3

LIGHT PANEL:

LP01 – Roof	
LP02 – Sidewall R panel	Page 1
LP03 – Endwall R panel	Page 2
LP04 – Sidewall U panel	Page 3


Table Of Contents

STRAPPING:

S01 – Gable roof	Page 1
S02 – Single slope	Page 2
S03 – Lean-to.....	Page 3
S04 – Endwall	Page 4
S05 – Sidewall	Page 5
S06 – Endwall (base girt)	Page 6
S07 – Sidewall (base girt)	Page 7
S08 – Endwall (partial wall).....	Page 8
S09 – Sidewall (partial wall).....	Page 9
S10 – Endwall (partial wall).....	Page 10
S11 – Sidewall (partial wall).....	Page 11
S12 – Gable roof (insul-banding system).....	Page 12

Rake

R01 - SHEETED ENDWALL

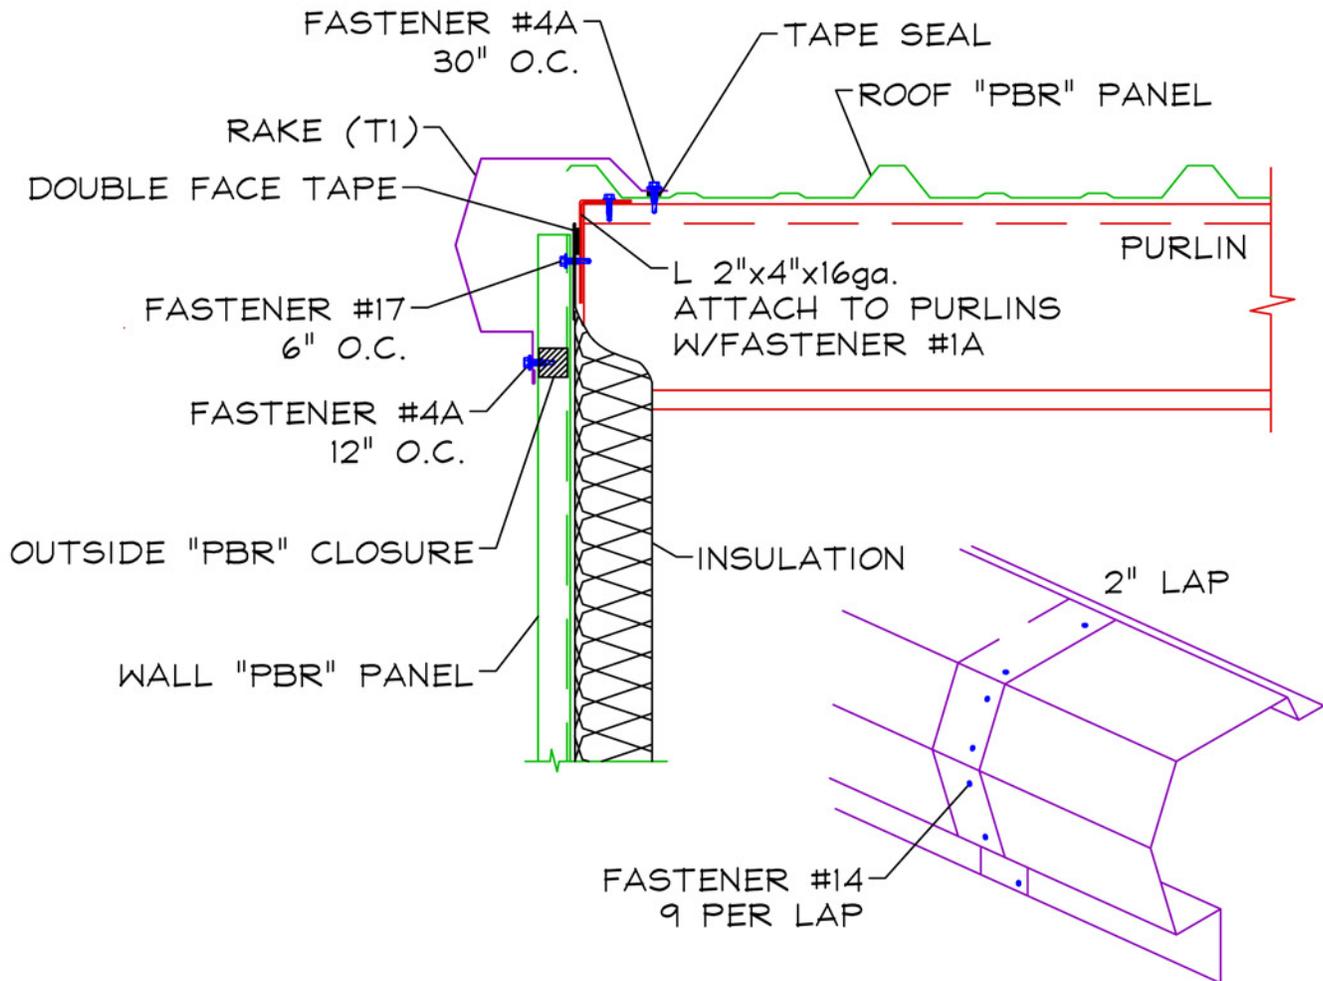


NOTES:

- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) INSTALL TAPE SEAL TO BOTTOM SIDE OF RAKE TRIM LEG CONTINUOUS.

Rake

R02 - EXTENSION WITH "PBR" SOFFIT

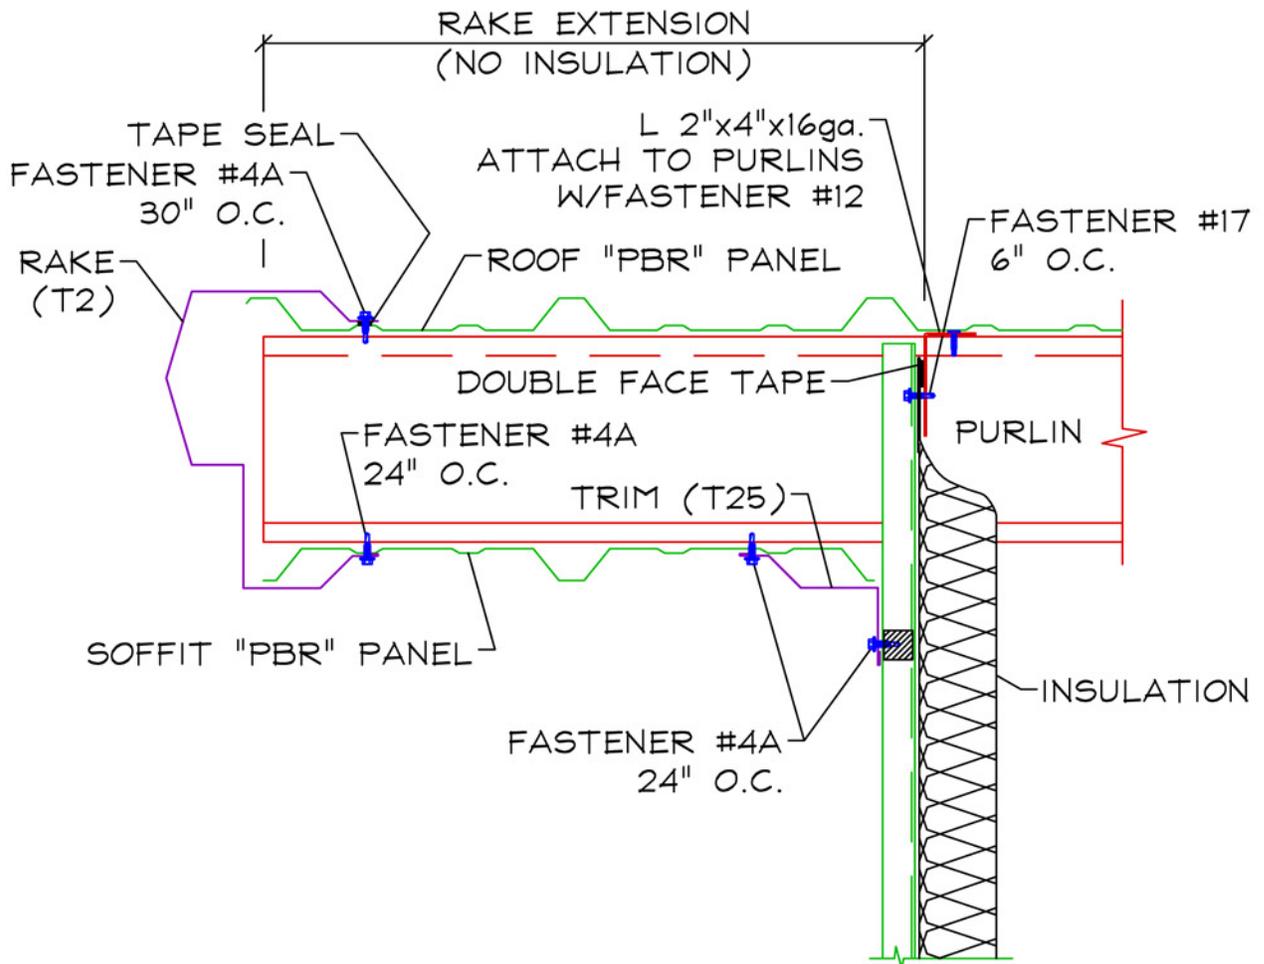


NOTES:

- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) INSTALL TAPE SEAL TO BOTTOM SIDE OF RAKE TRIM LEG CONTINUOUS.

Rake

R03 - EXTENSION W/OUT SOFFIT


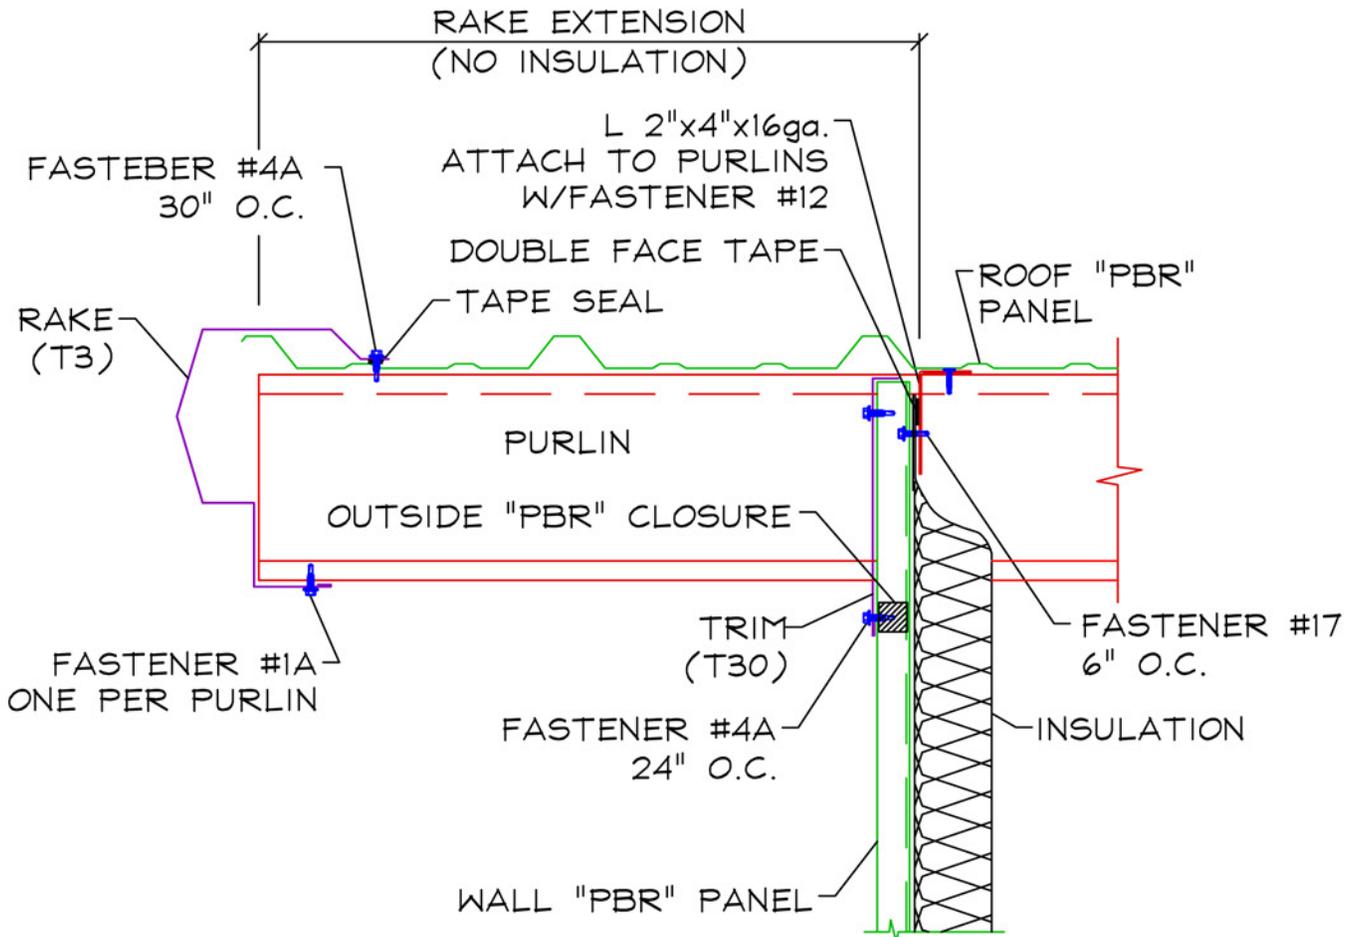


NOTES:

- 1) SHEETING ANGLE MUST BE NOTCHED AROUND PURLINS.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) INSTALL TAPE SEAL TO BOTTOM SIDE OF RAKE TRIM LEG CONTINUOUS.


Rake

R04 - PEAK BOX

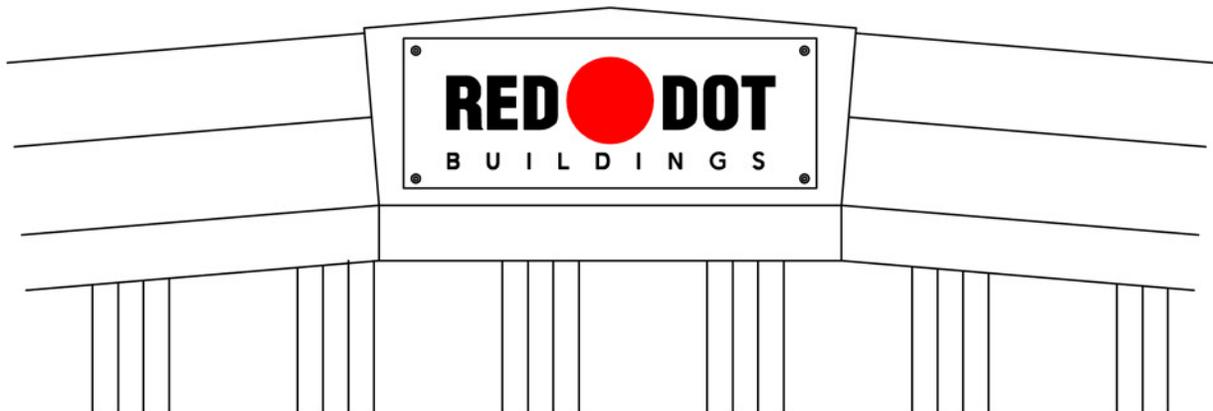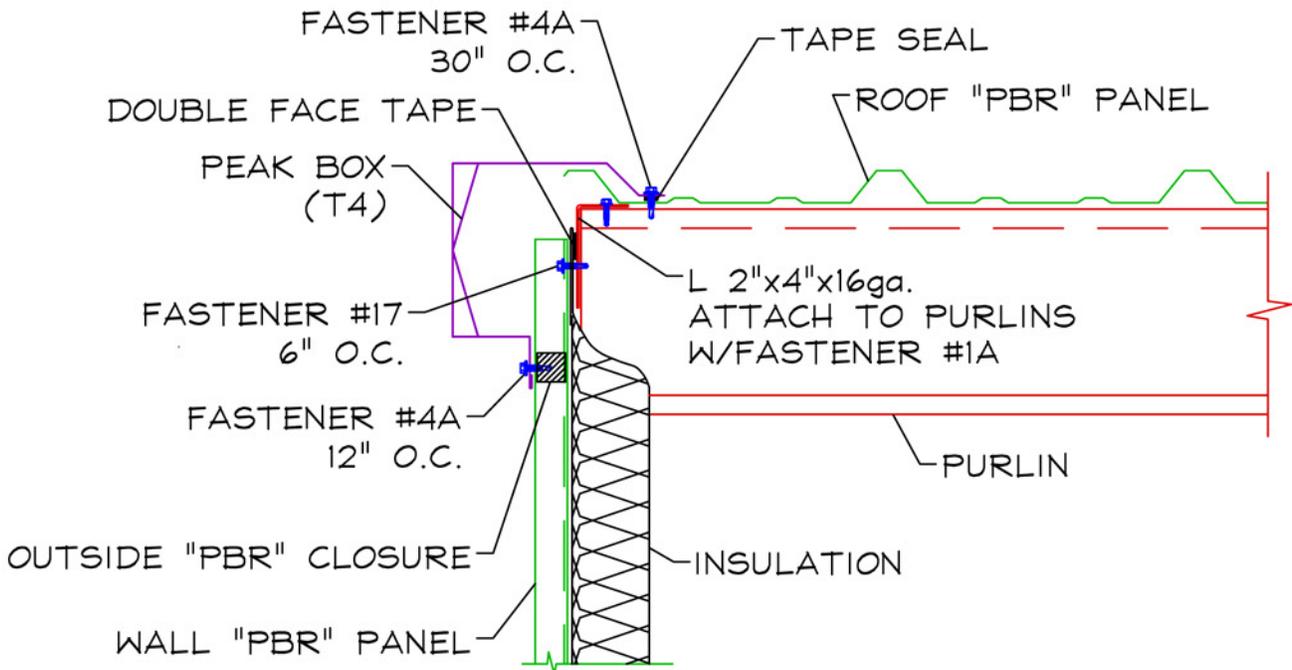

Rake

R05 - EXTENSION WITH "PBU" SOFFIT

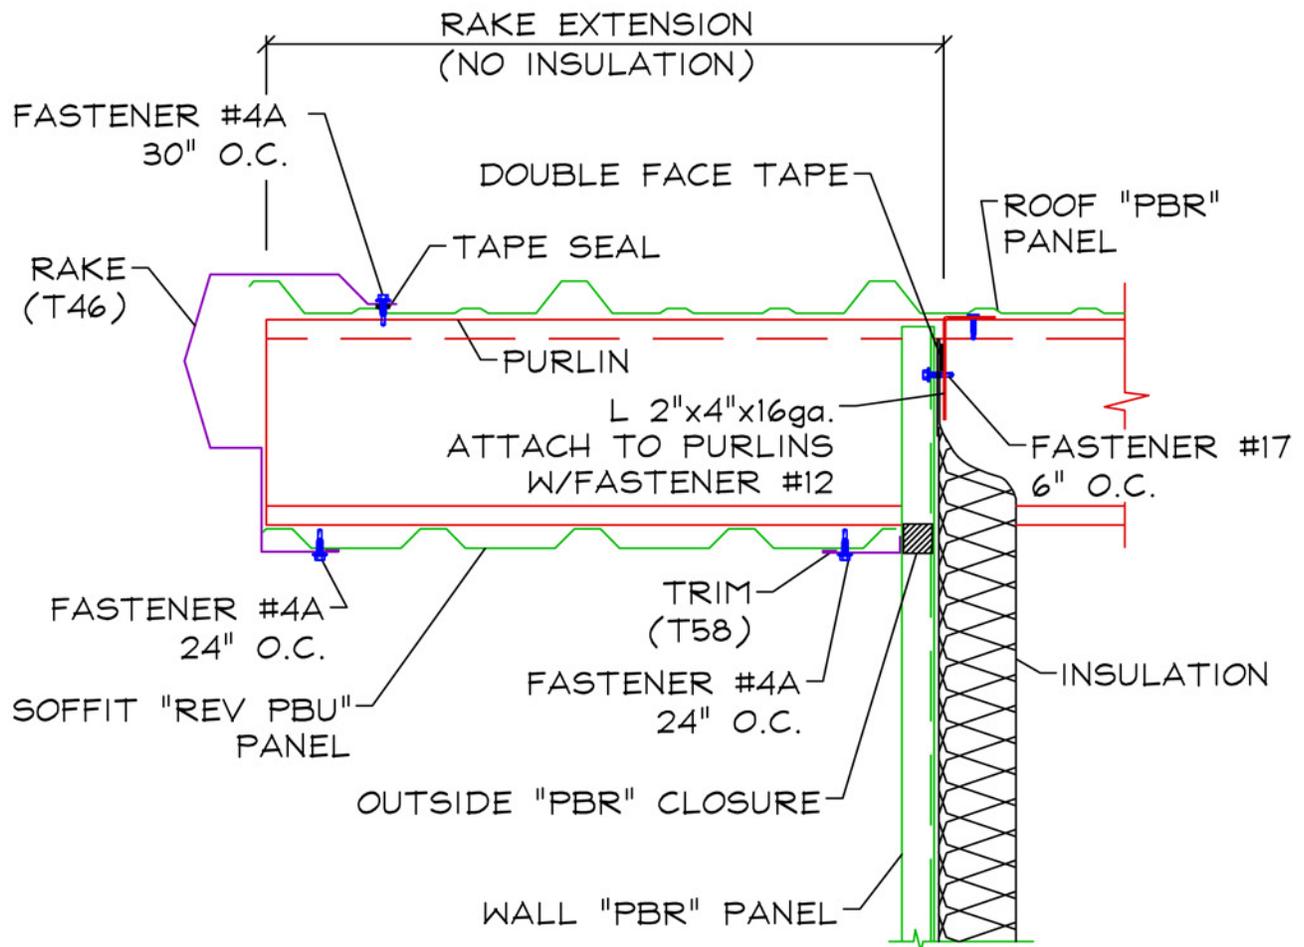


NOTES:

- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) INSTALL TAPE SEAL TO BOTTOM SIDE OF RAKE TRIM LEG CONTINUOUS.

Rake

R06 - MASONRY ENDWALL


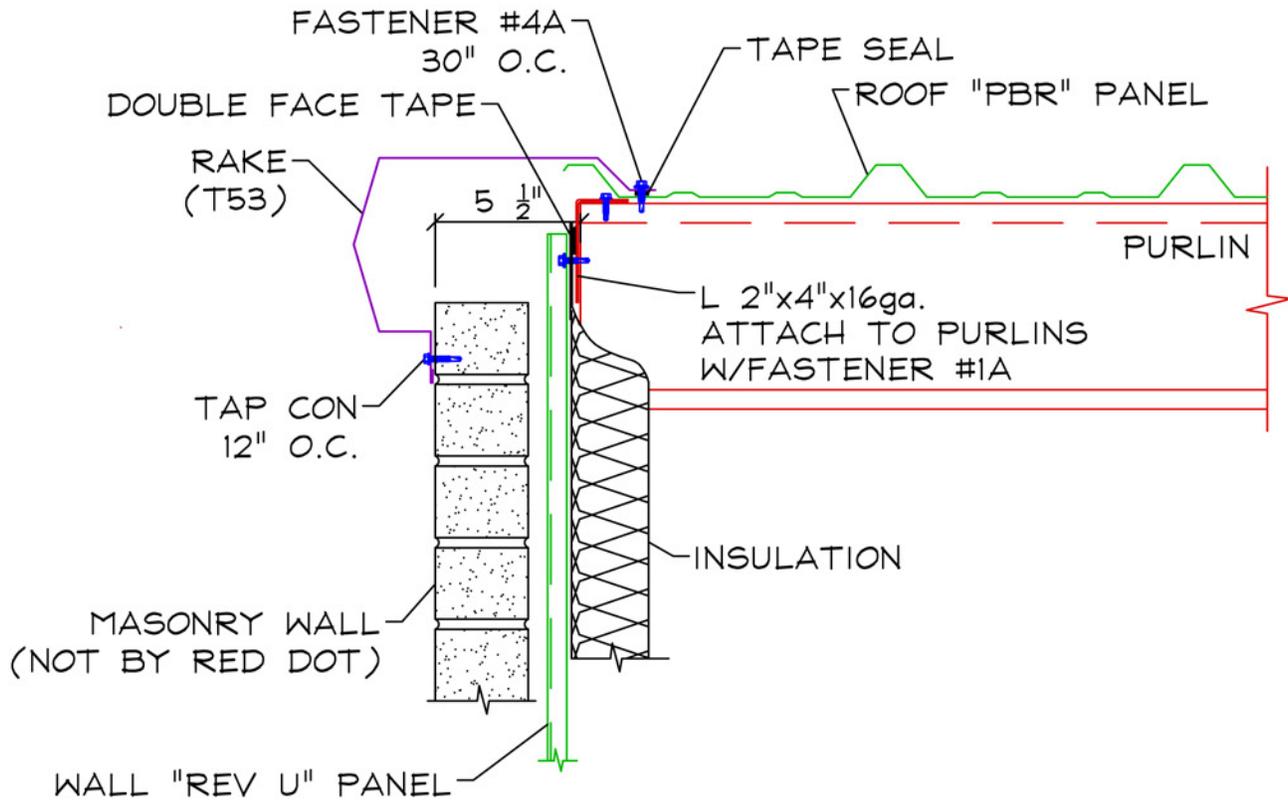


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION SUPPLIER.


Rake

R07 - MASONRY ENDWALL PEAK BOX

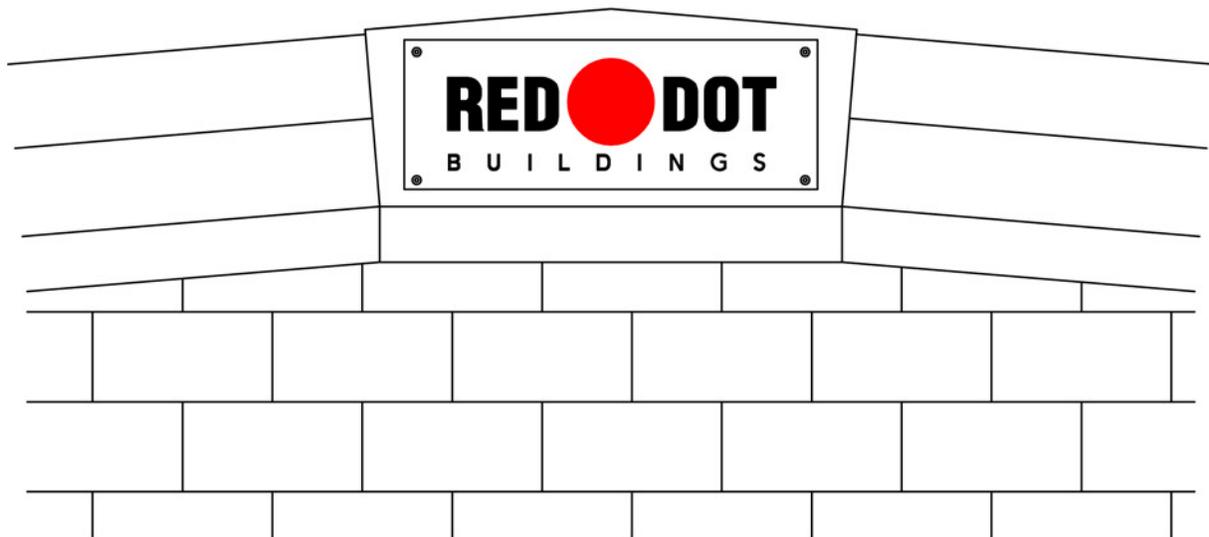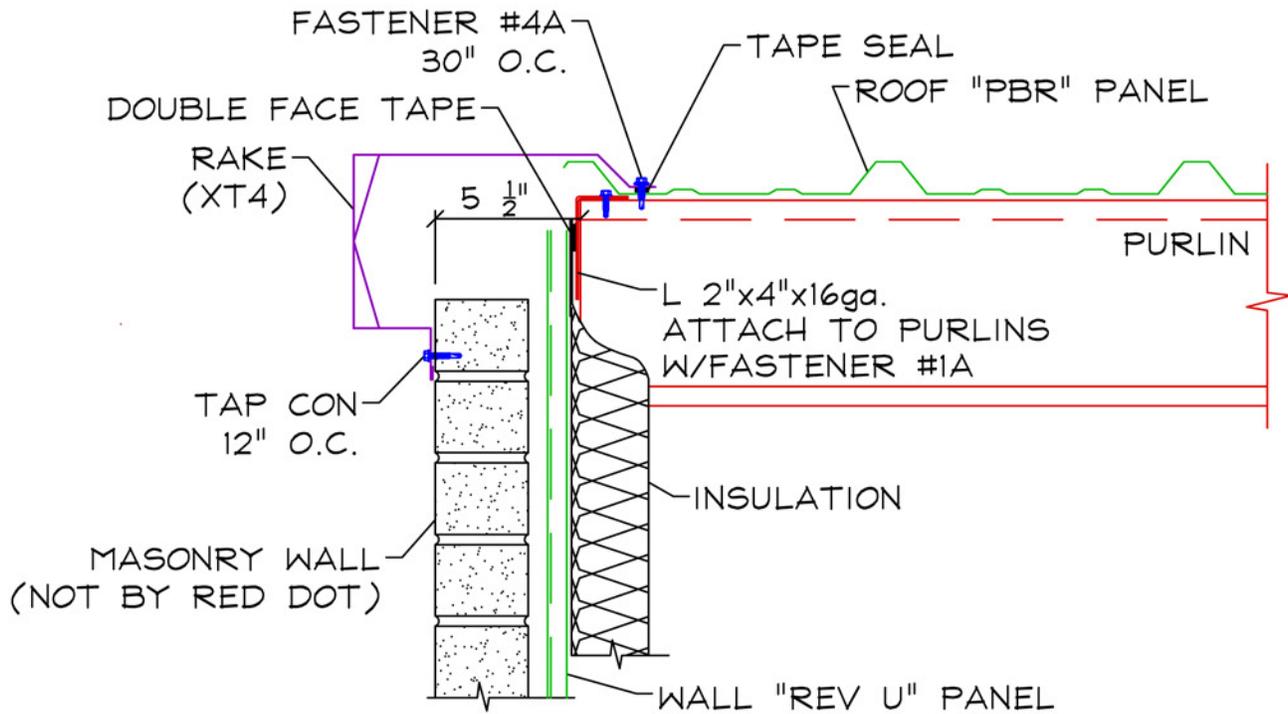

Rake

R08 - FUTURE ENDWALL MASONRY

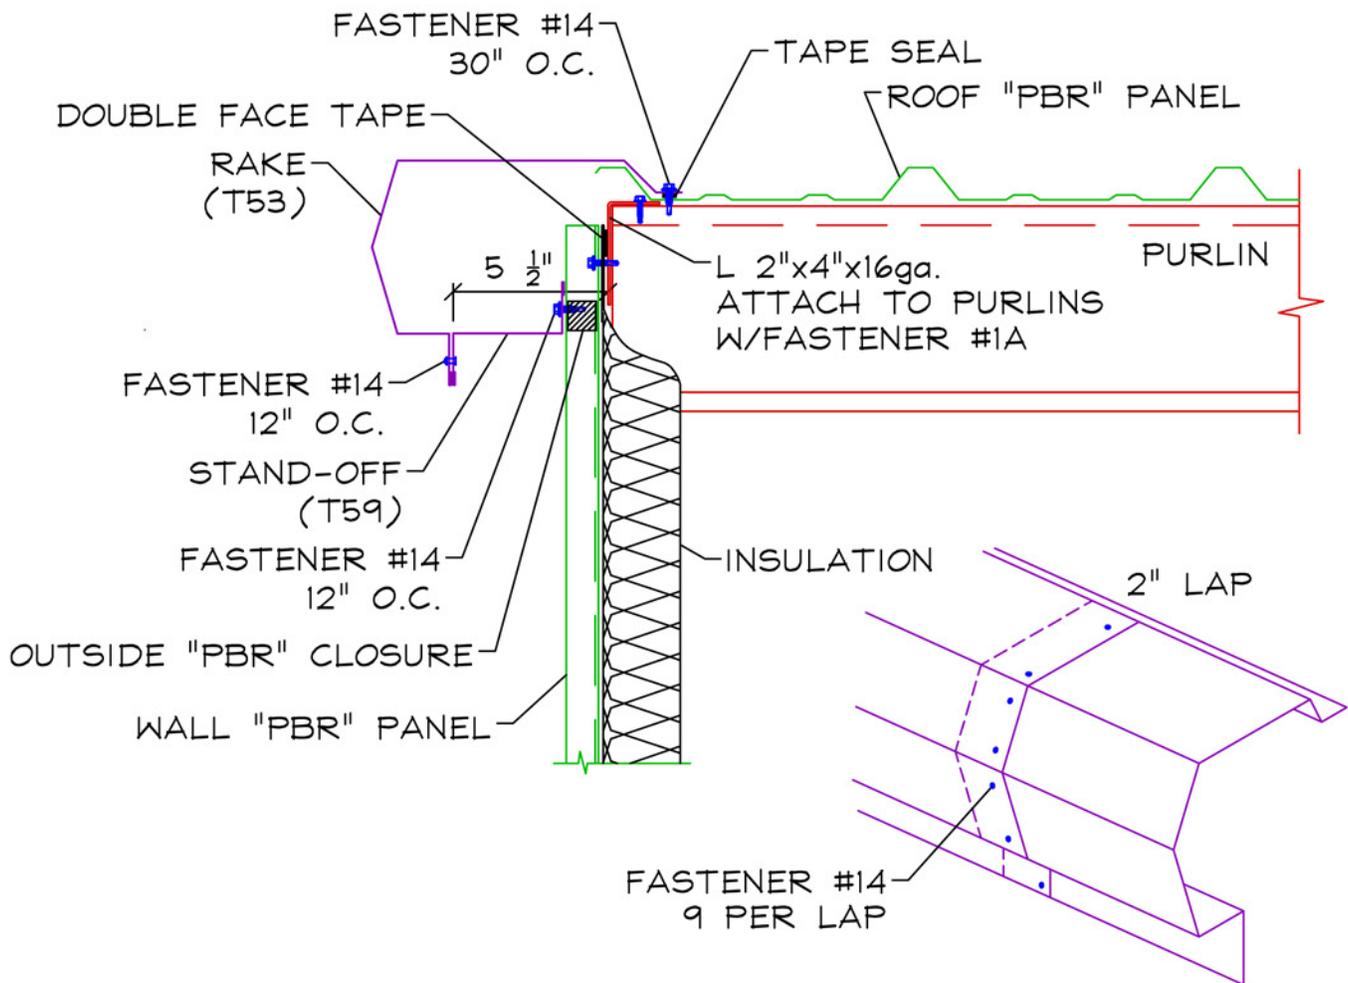


NOTES:

- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) INSTALL TAPE SEAL TO BOTTOM SIDE OF RAKE TRIM LEG CONTINUOUS.

Rake

R09 - EXTENSION WITH "PBU" SOFFIT

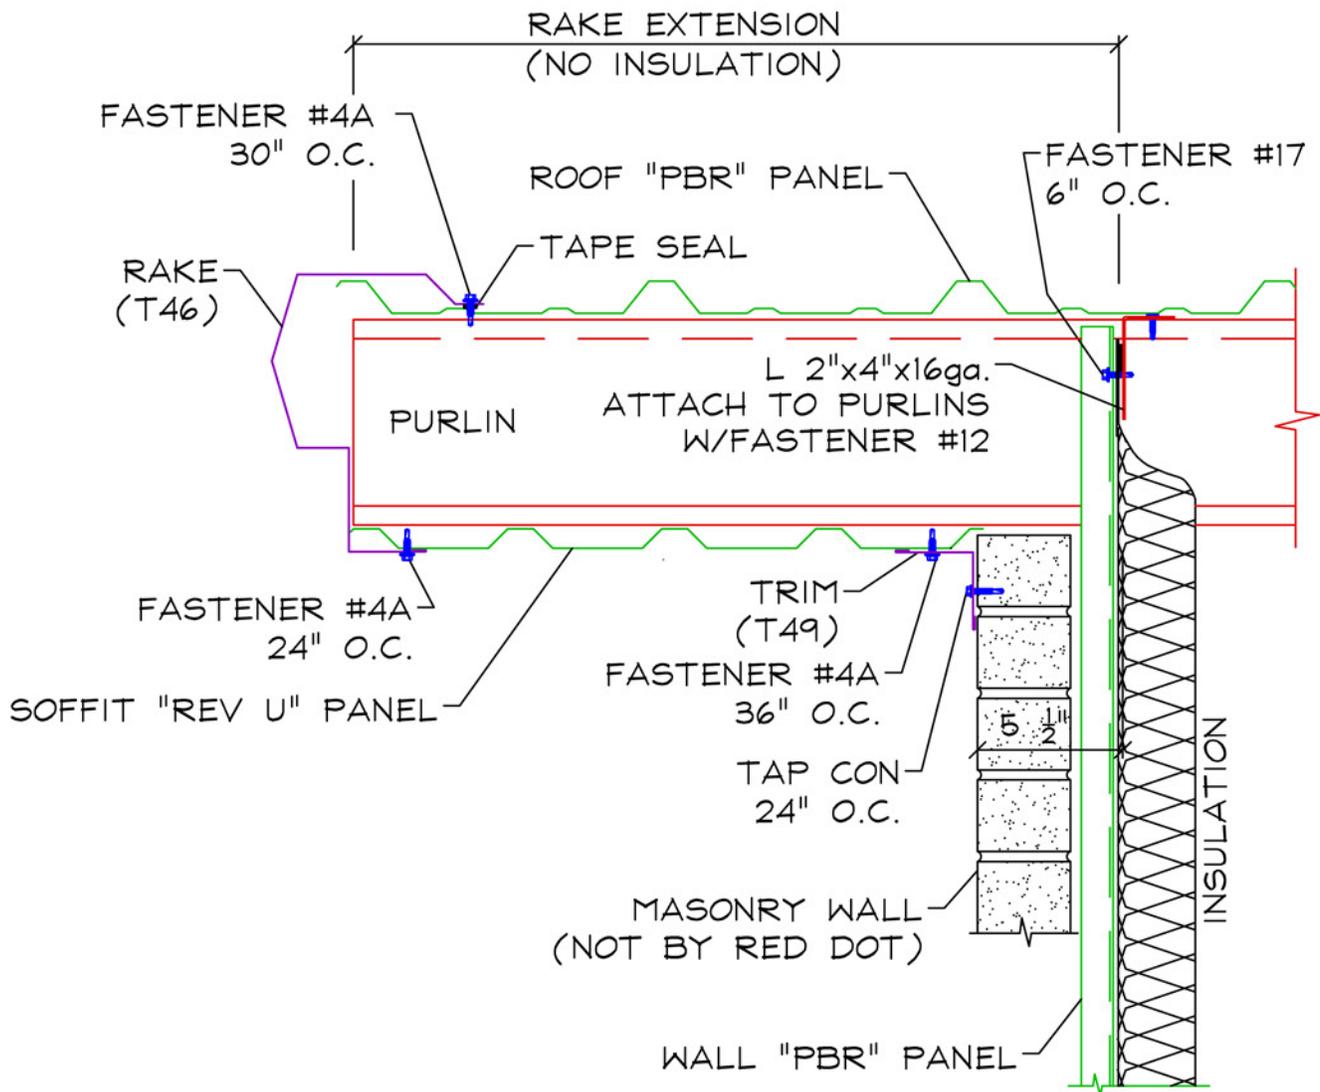


NOTES:

- 1) INSTALL TAPE SEAL TO BOTTOM SIDE OF RAKE TRIM LEG CONTINUOUS.

Rake

R10 - OPEN ENDWALL

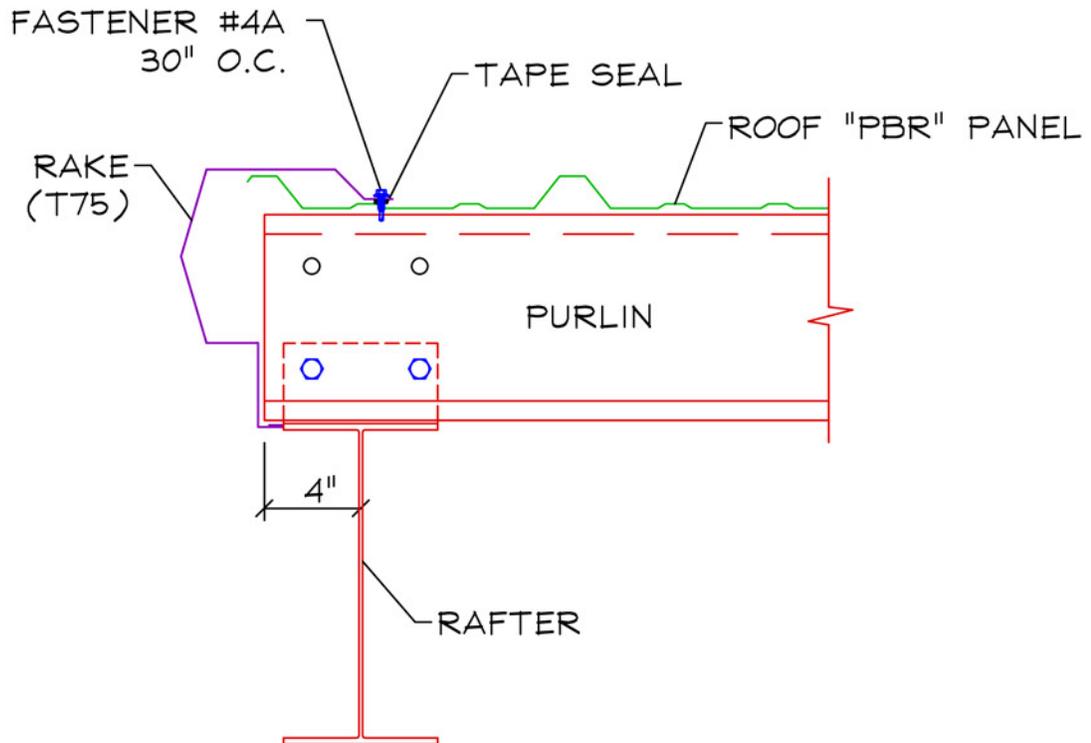

NOTES:


- 1) INSTALL TAPE SEAL TO BOTTOM SIDE OF RAKE TRIM LEG CONTINUOUS.

Rake

R11 - START DETAIL - TRAPEZOIDAL ROOF PANEL (FIXED)

ON MODULE

INSULATION NOT SHOWN

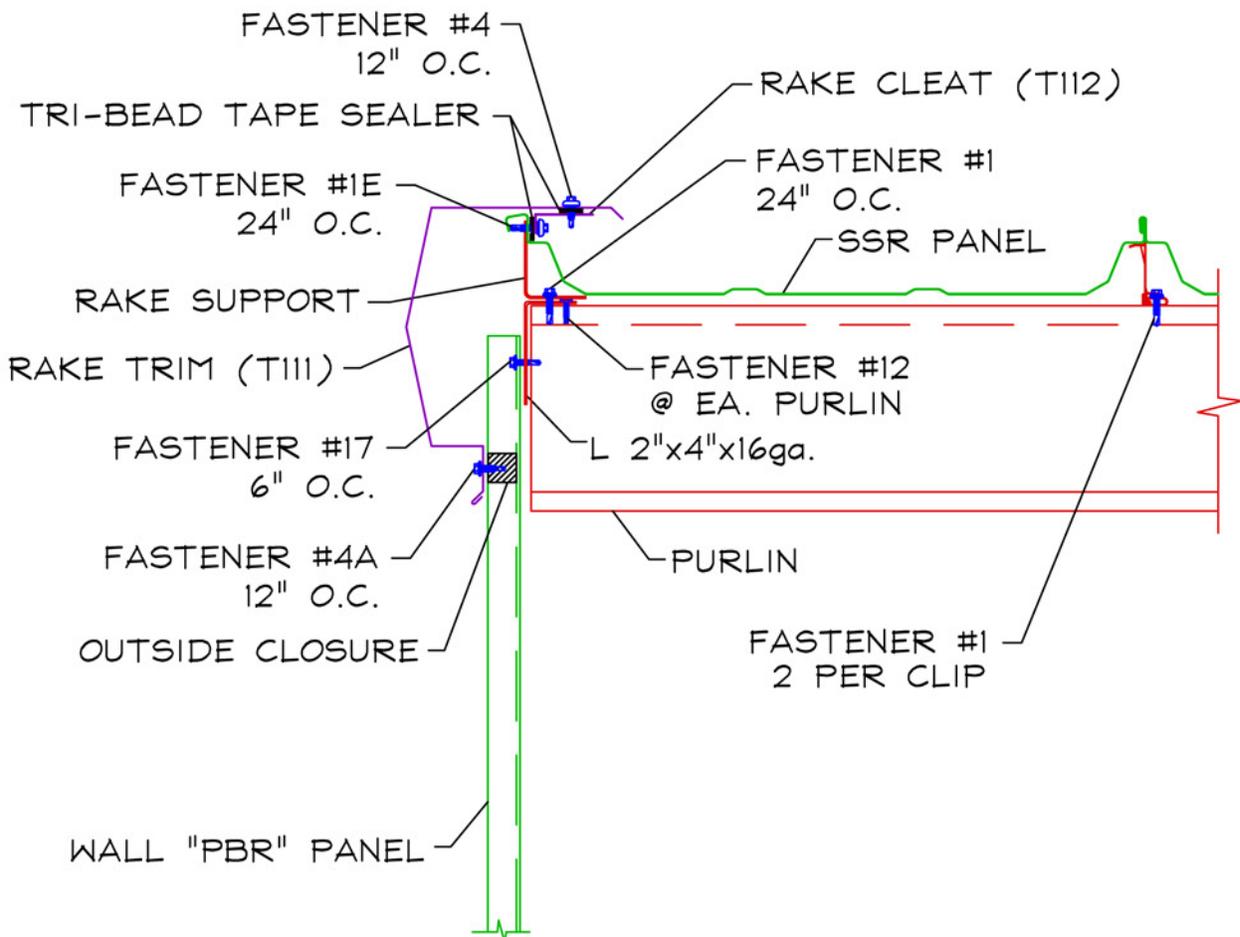

NOTES:


- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R12 - END DETAIL - TRAPEZOIDAL ROOF PANEL (FIXED)

ON MODULE

INSULATION NOT SHOWN

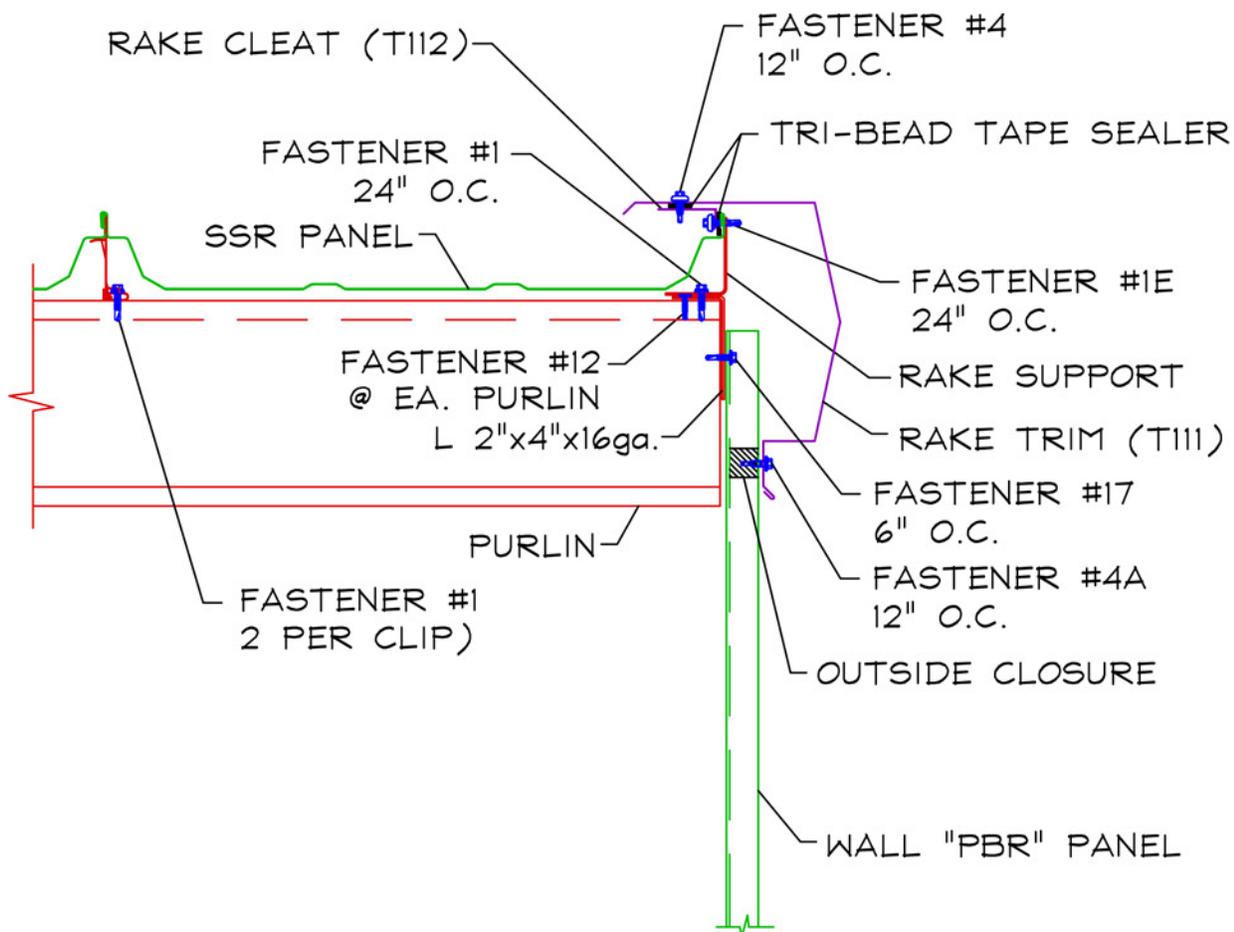

NOTES:


- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R13 - START DETAIL - TRAPEZOIDAL ROOF PANEL (FIXED)

OFF MODULE $\frac{1}{2}$ "-6"

INSULATION NOT SHOWN

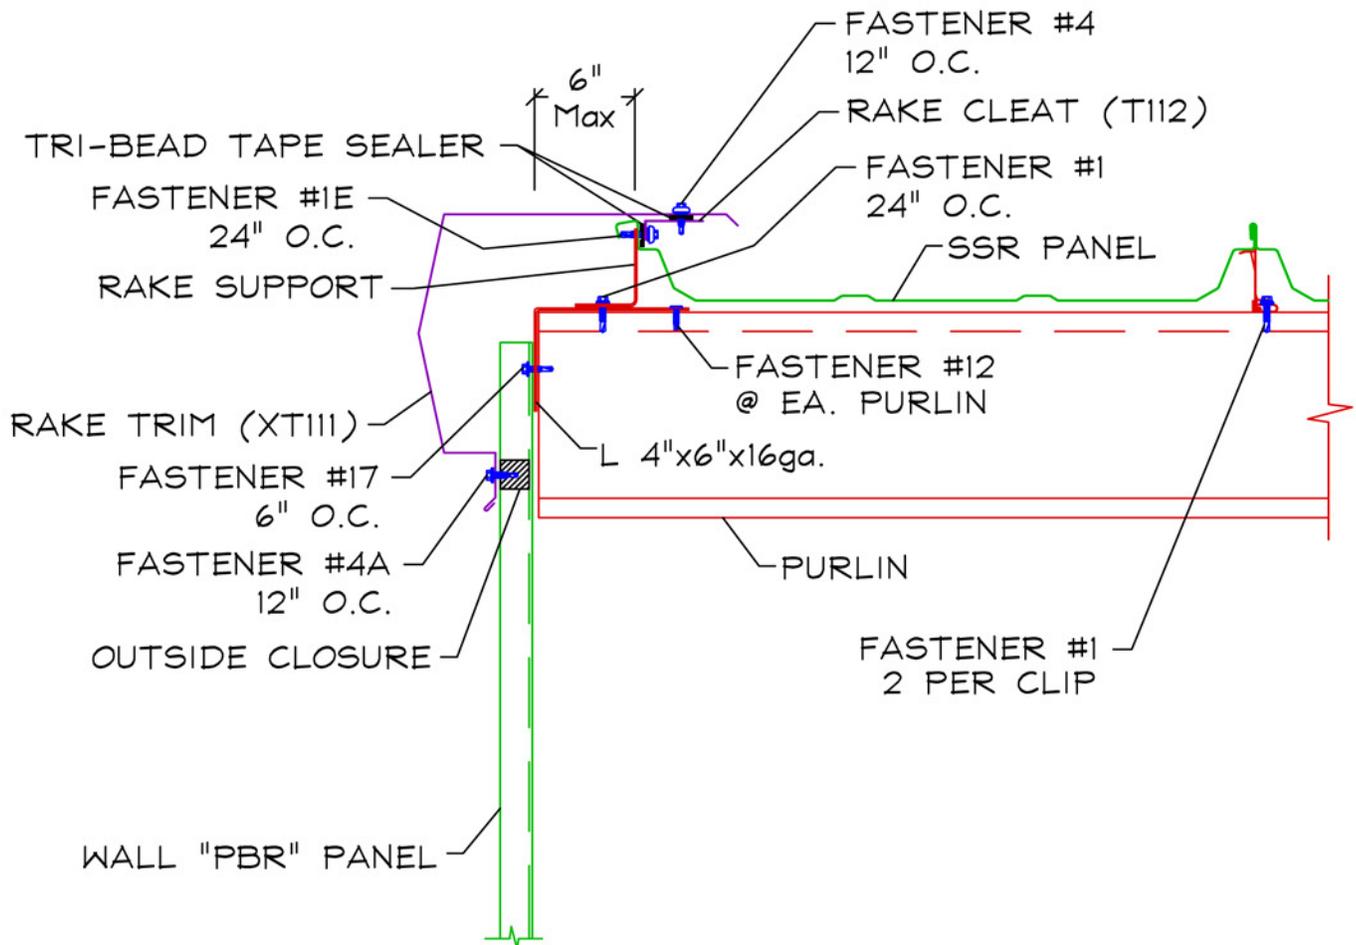


NOTES:

- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R14 - END DETAIL - TRAPEZOIDAL ROOF PANEL (FIXED)

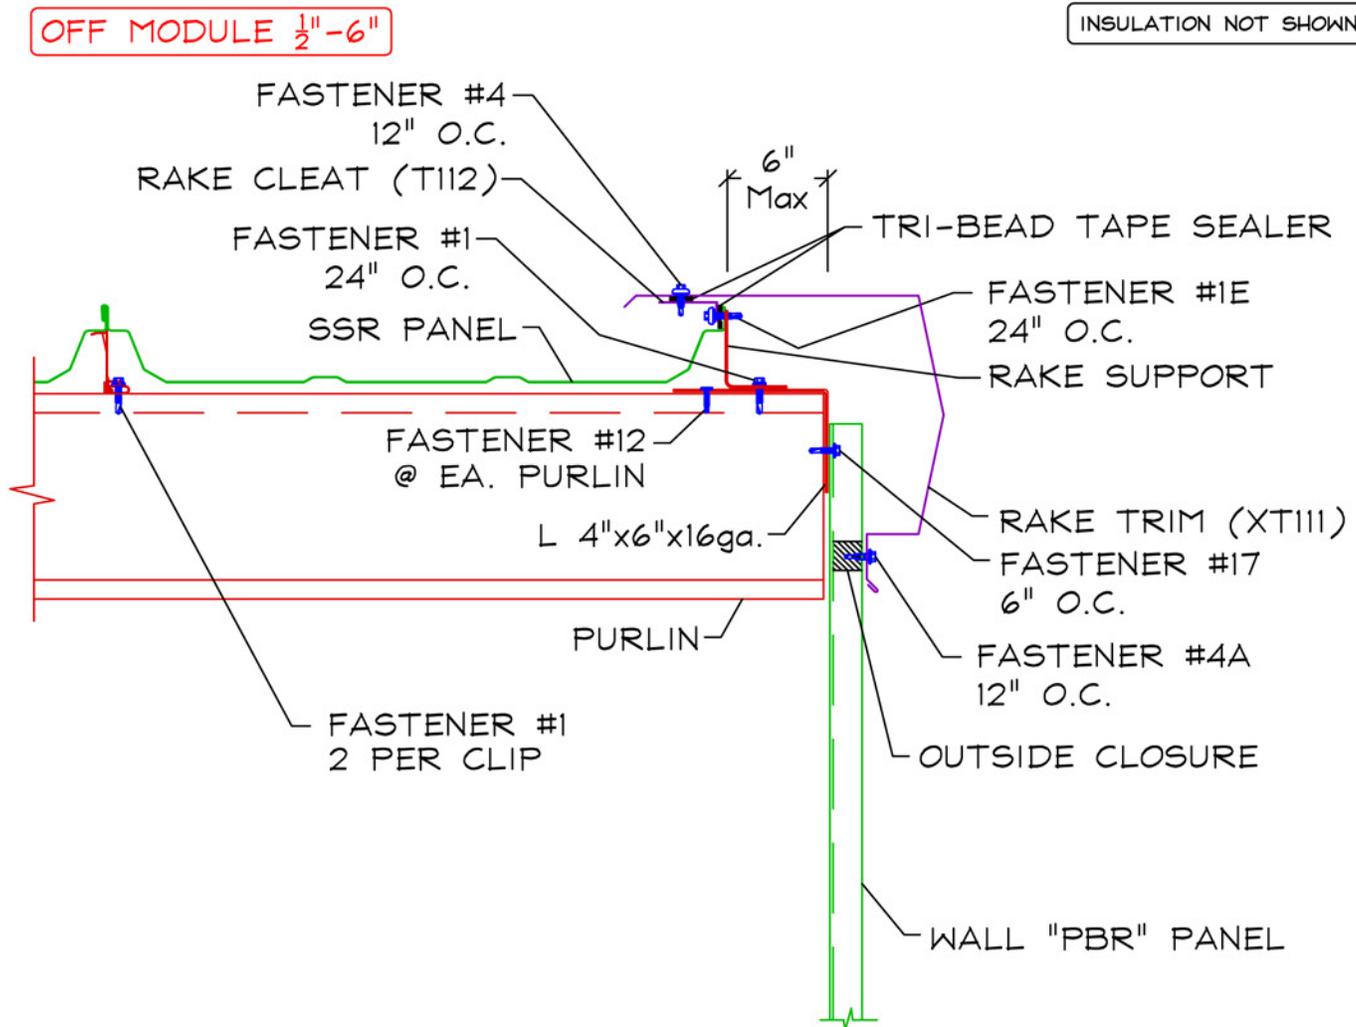

NOTES:


- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R15 - START DETAIL - TRAPEZOIDAL ROOF PANEL (FLOATING)

ON MODULE

INSULATION NOT SHOWN

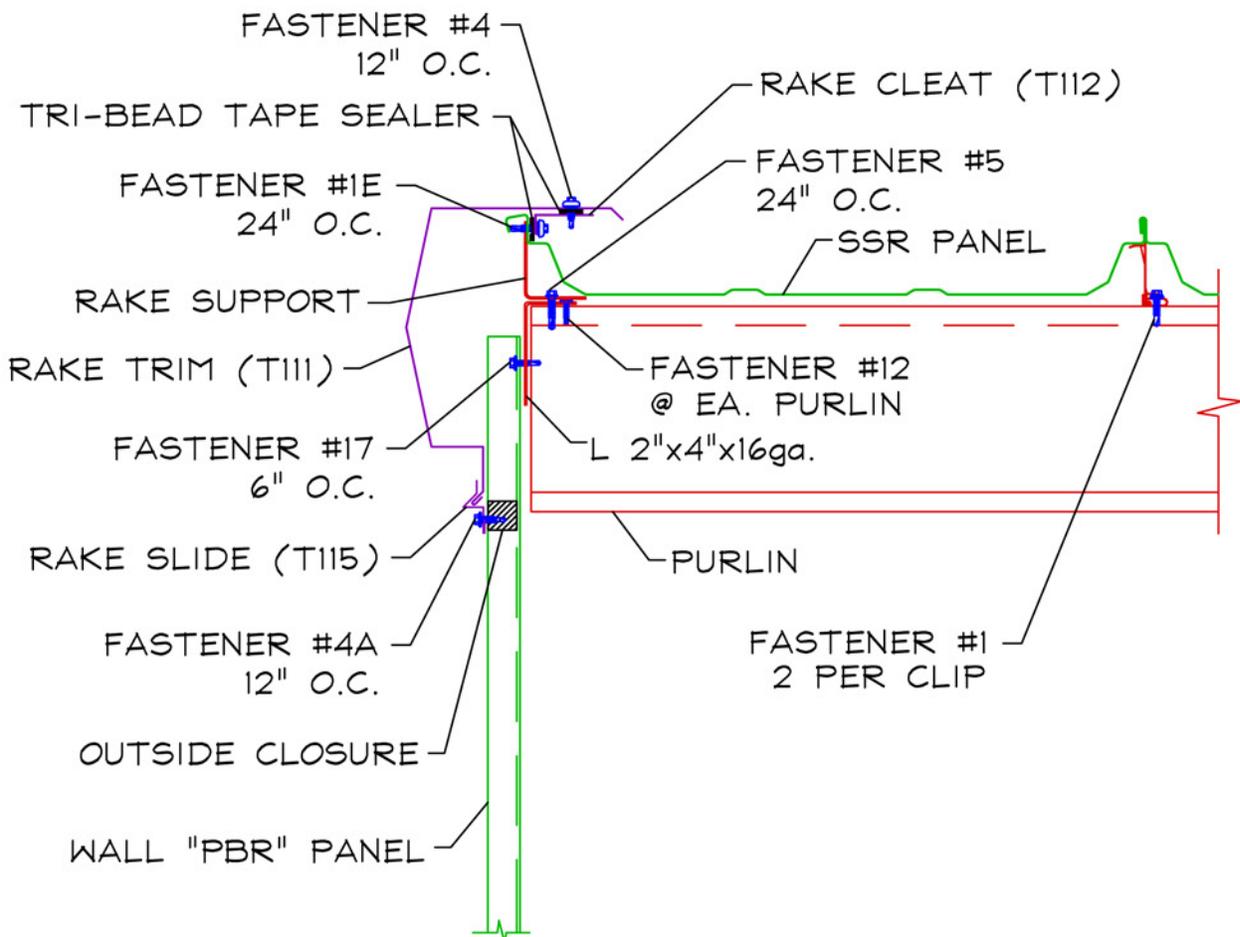

NOTES:


- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R16 - END DETAIL - TRAPEZOIDAL ROOF PANEL (FLOATING)

ON MODULE

INSULATION NOT SHOWN

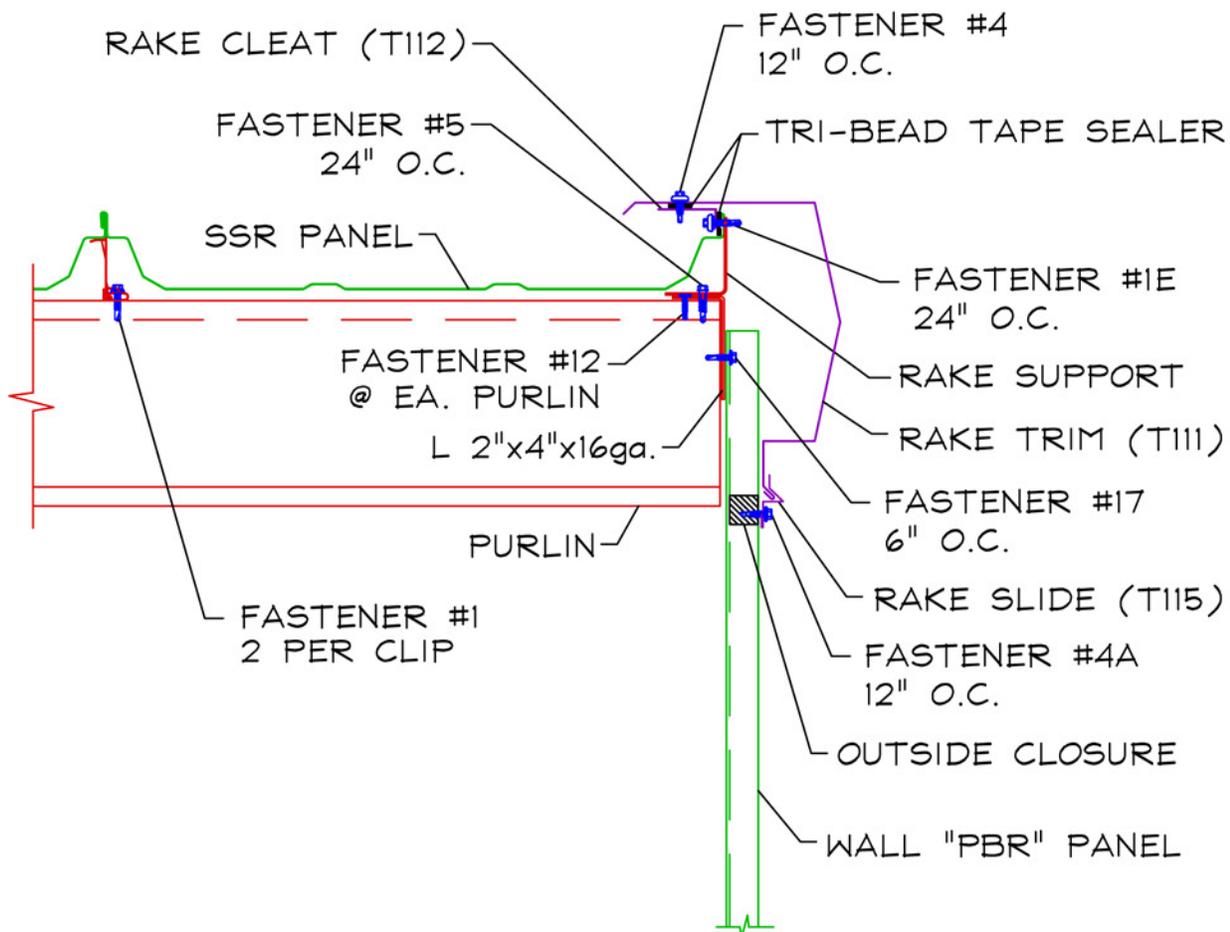

NOTES:


- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R17 - START DETAIL - TRAPEZOIDAL PROOF PANEL (FLOATING)

OFF MODULE $\frac{1}{2}$ "-6"

INSULATION NOT SHOWN

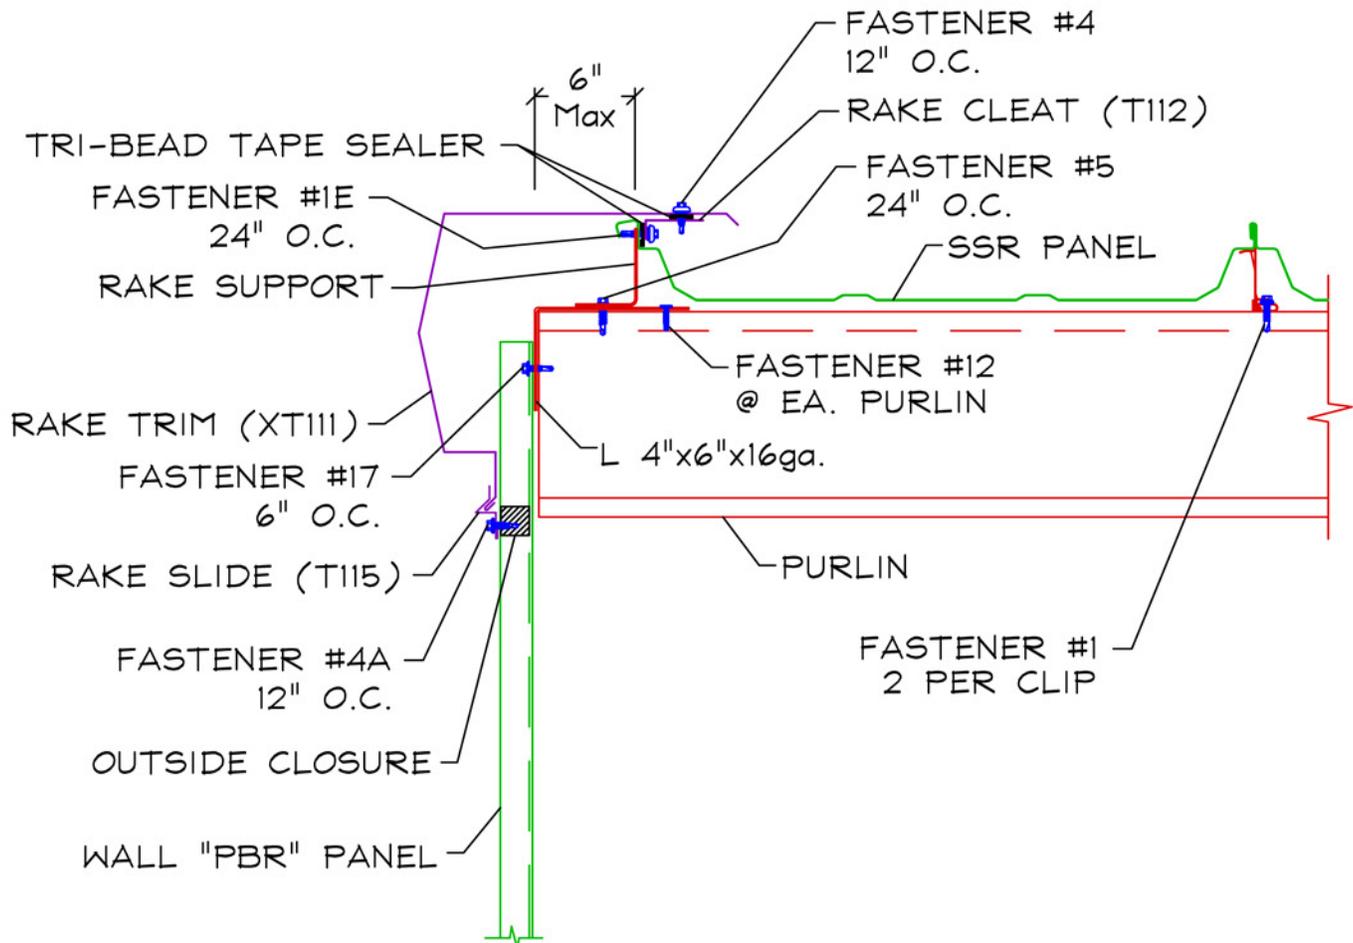


NOTES:

- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R18 - END DETAIL - TRAPEZOIDAL ROOF PANEL (FLOATING)

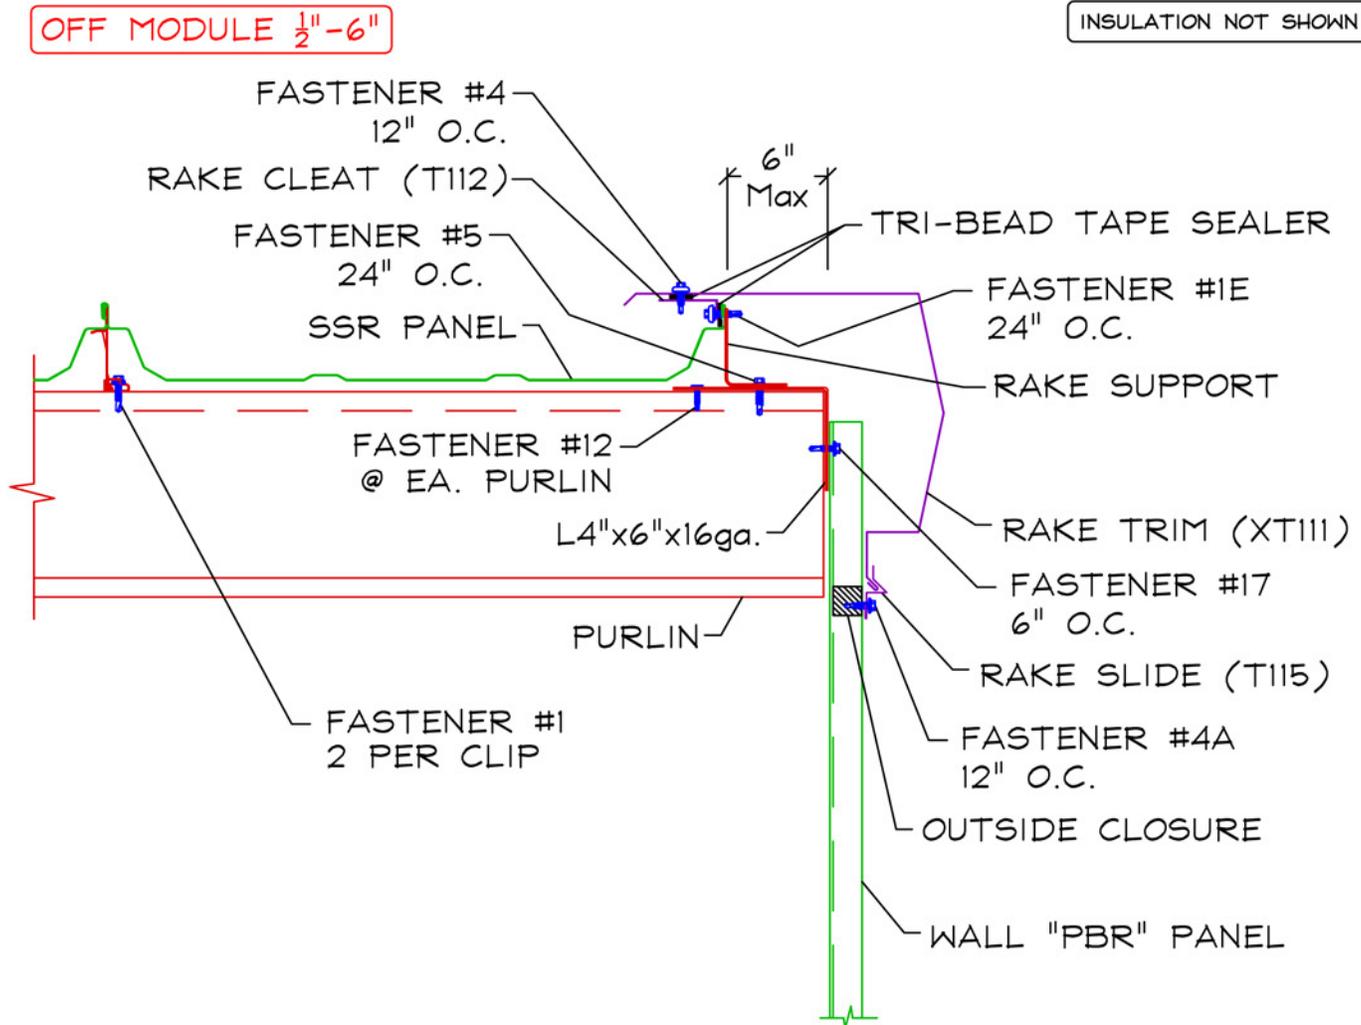

NOTES:


- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R19 - START DETAIL - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED)

ON MODULE

INSULATION NOT SHOWN

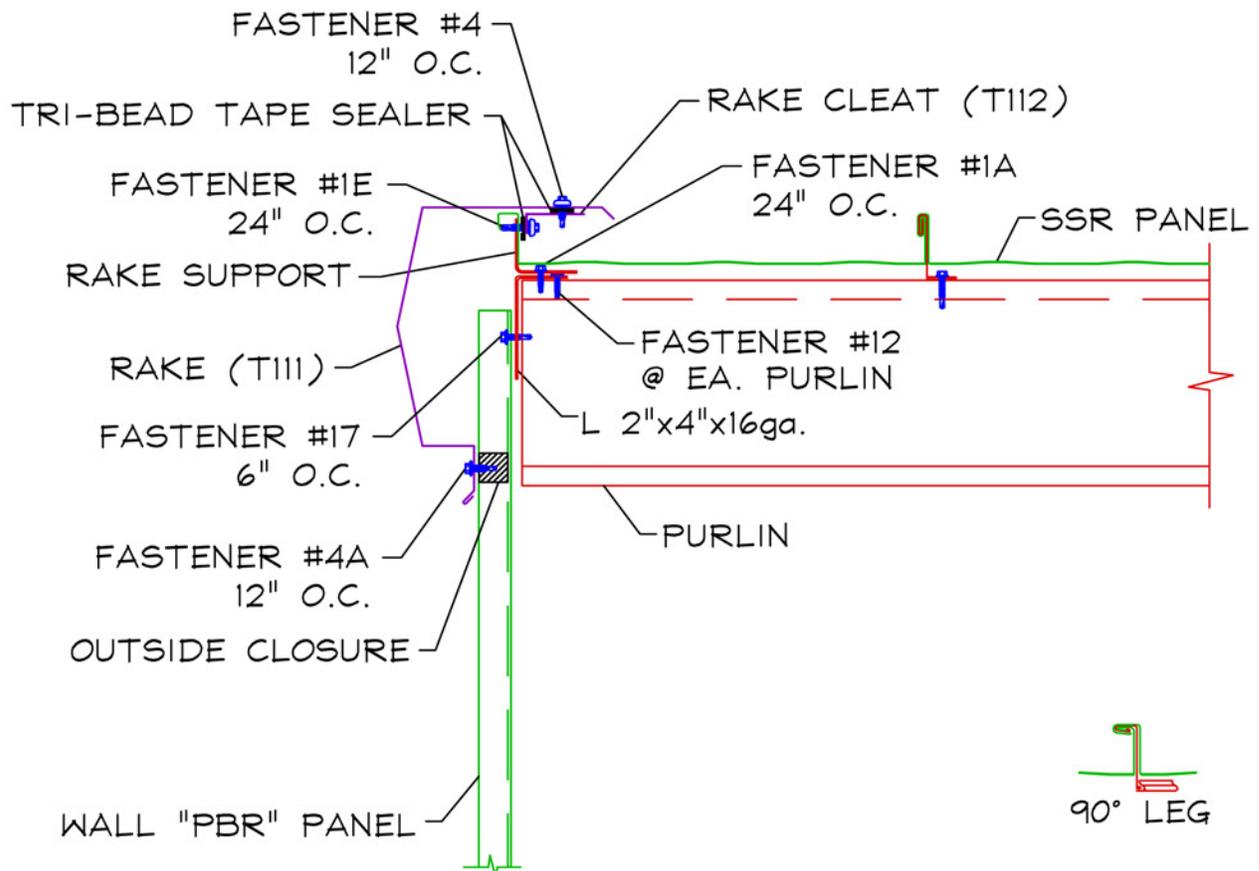

NOTES:


- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R20 - END DETAIL - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED)

ON MODULE

INSULATION NOT SHOWN

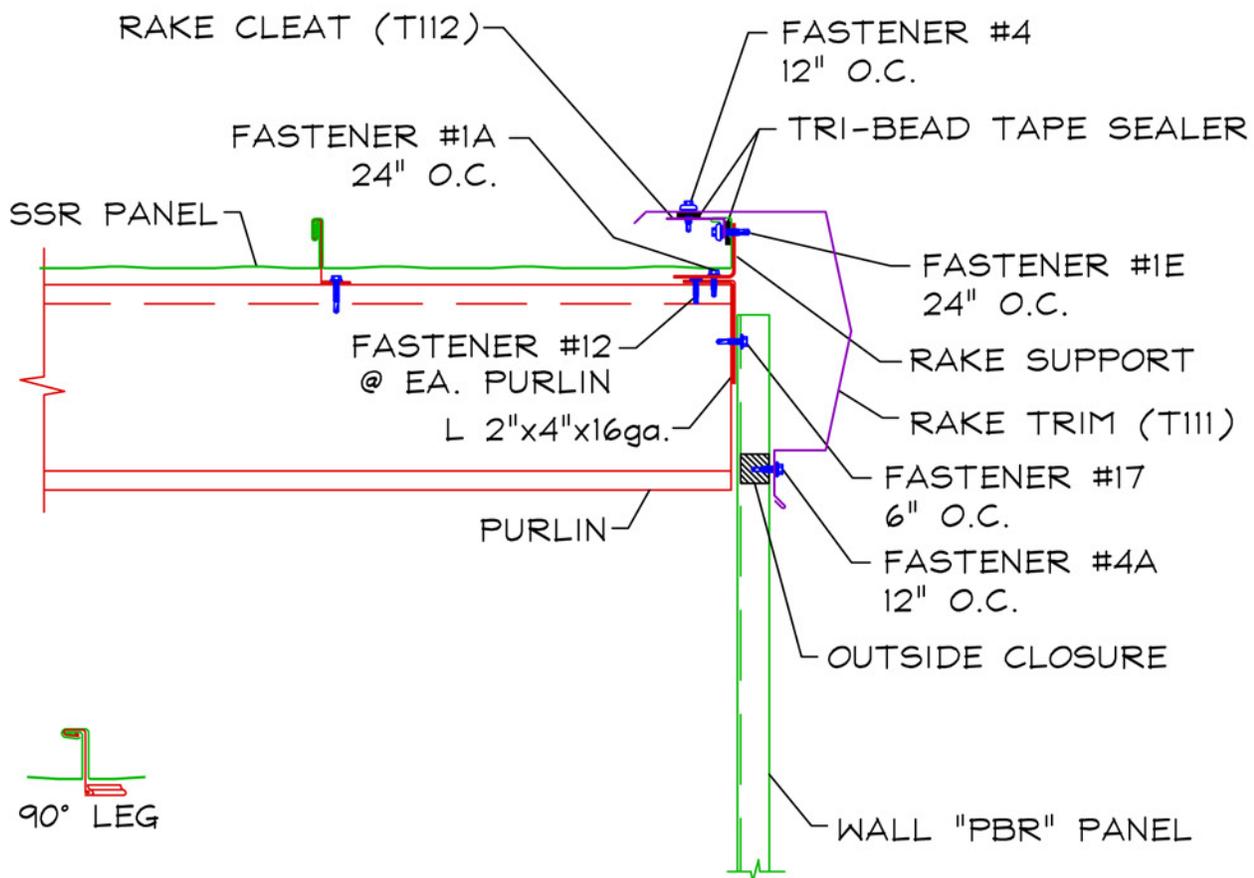

NOTES:


- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R21 - START DETAIL - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED)

OFF MODULE $\frac{1}{2}$ "-6"

INSULATION NOT SHOWN

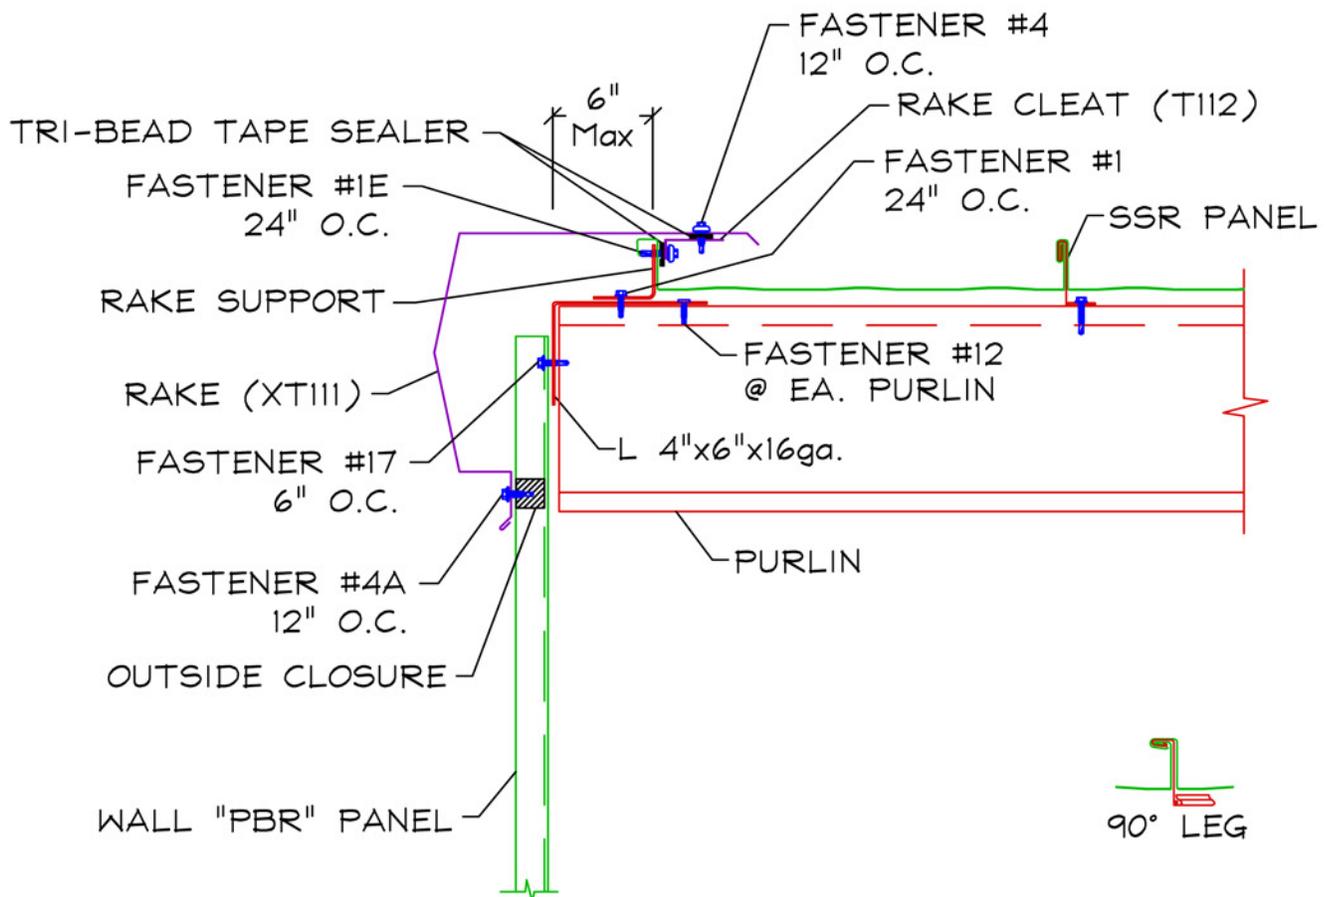


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R22 - END DETAIL - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED)

INSULATION NOT SHOWN

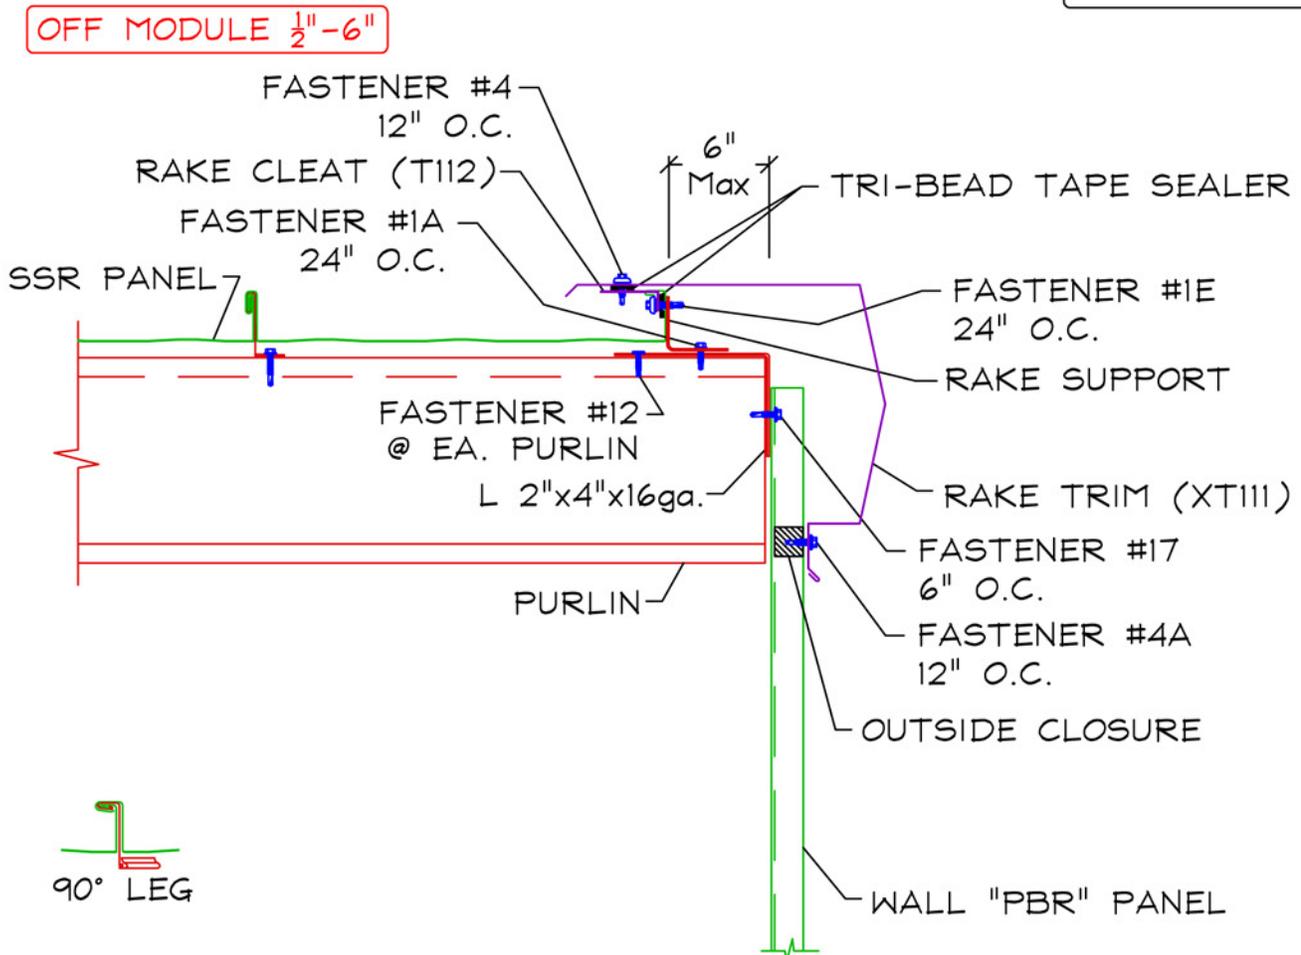

NOTES:


- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R23 - START DETAIL - VERTICAL LEG 180° OR 90° ROOF PANEL (FLOATING)

ON MODULE

INSULATION NOT SHOWN

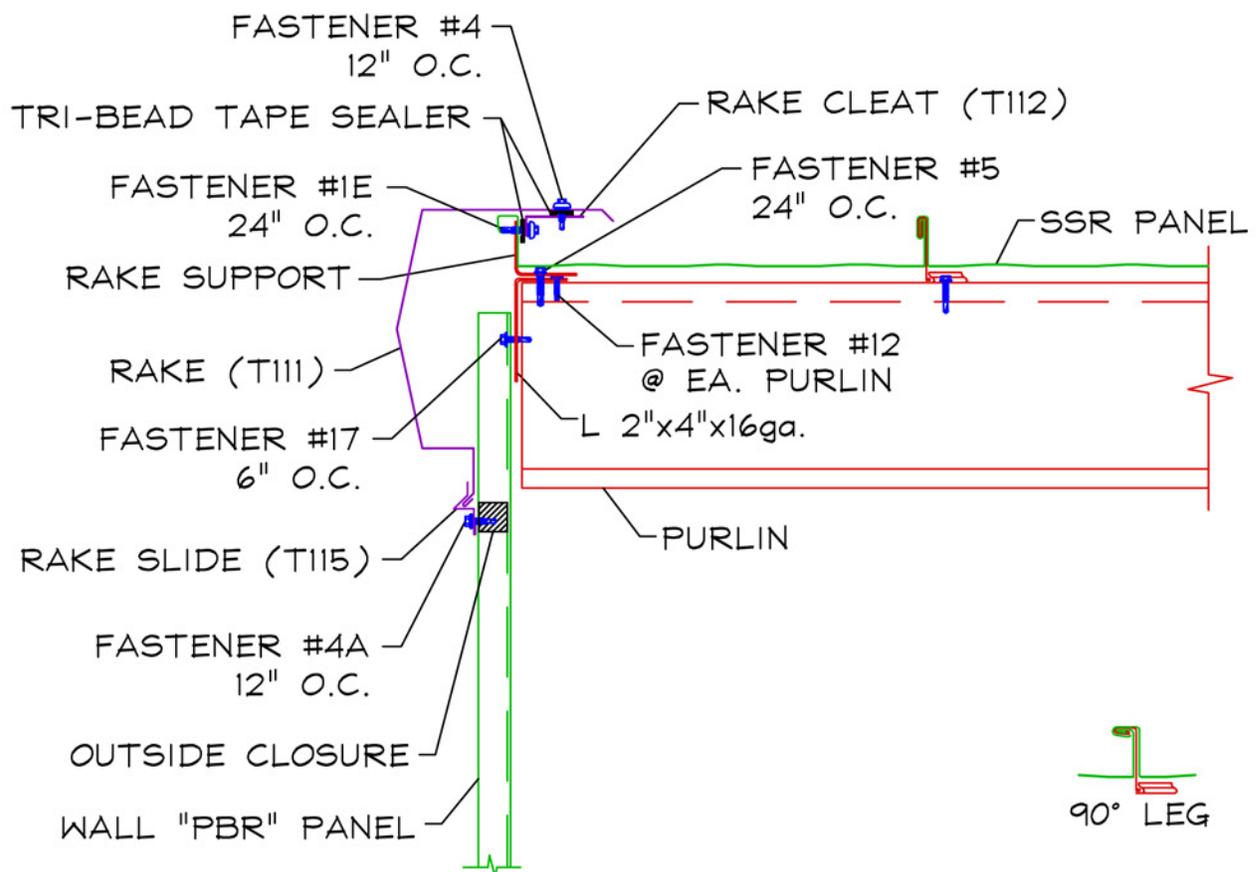


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R24 - END DETAIL - VERTICAL LEG 180° OR 90° ROOF PANEL (FLOATING)

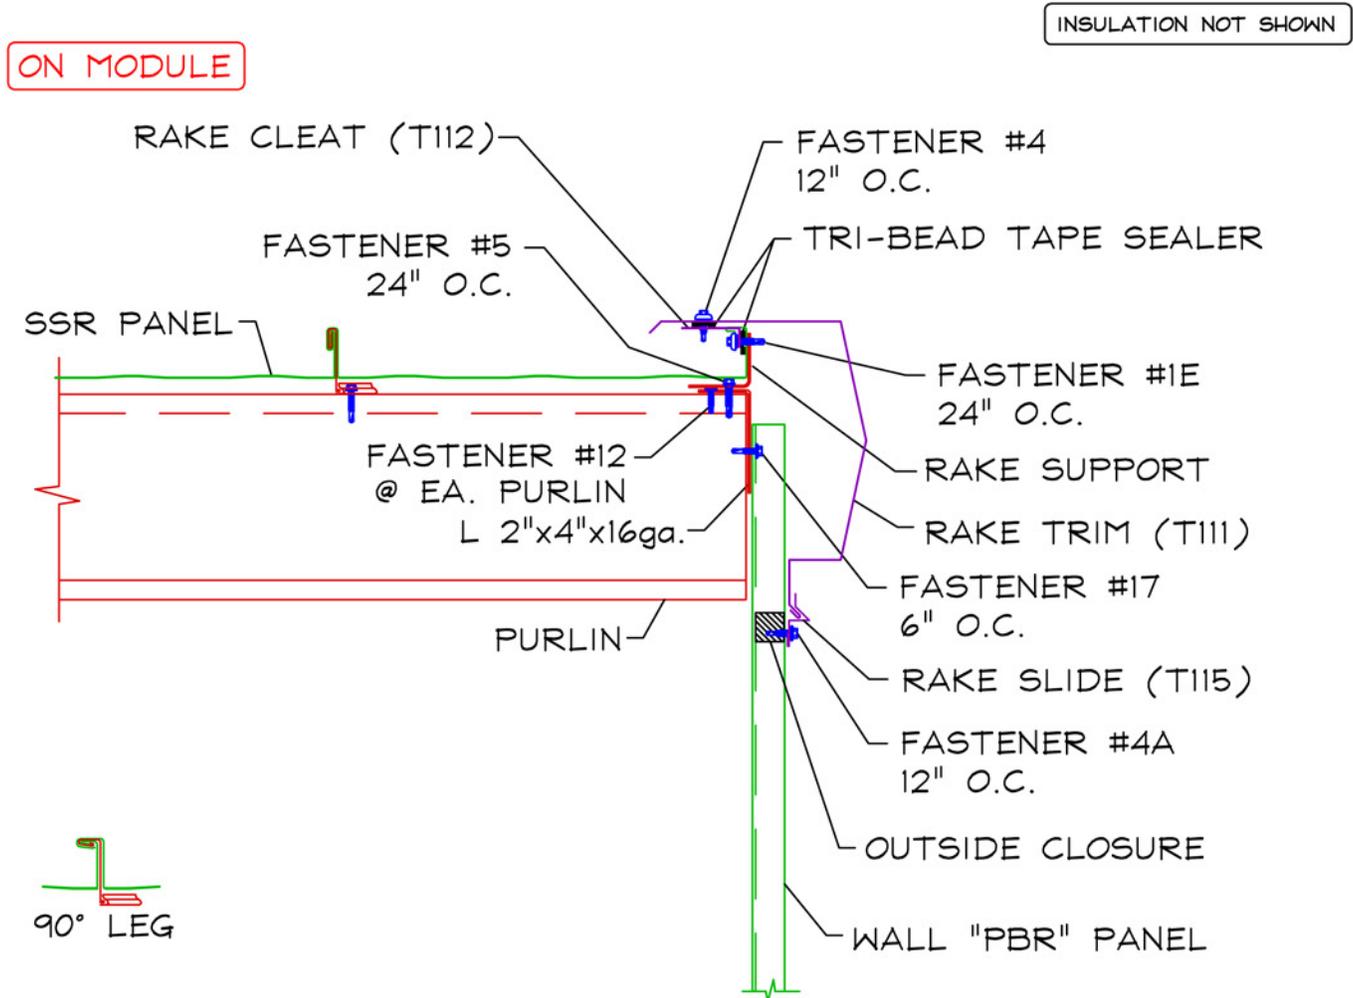

NOTES:


- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R25 - START DETAIL - VERTICAL LEG 180° OR 90° ROOF PANEL (FLOATING)

OFF MODULE $\frac{1}{2}$ "-6"

INSULATION NOT SHOWN

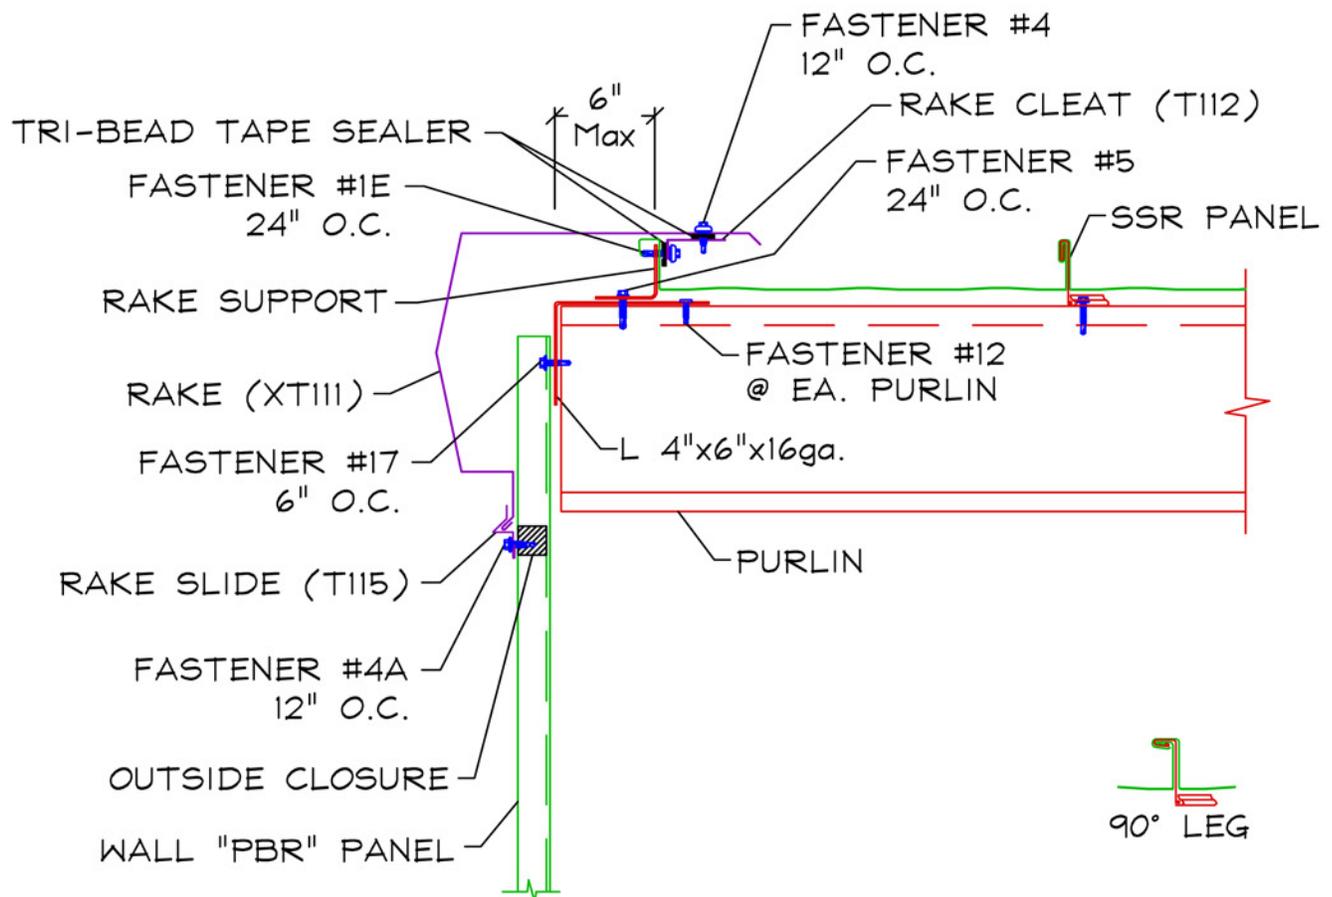


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Rake

R26 - END DETAIL - VERTICAL LEG 180° OR 90° ROOF PANEL (FLOATING)

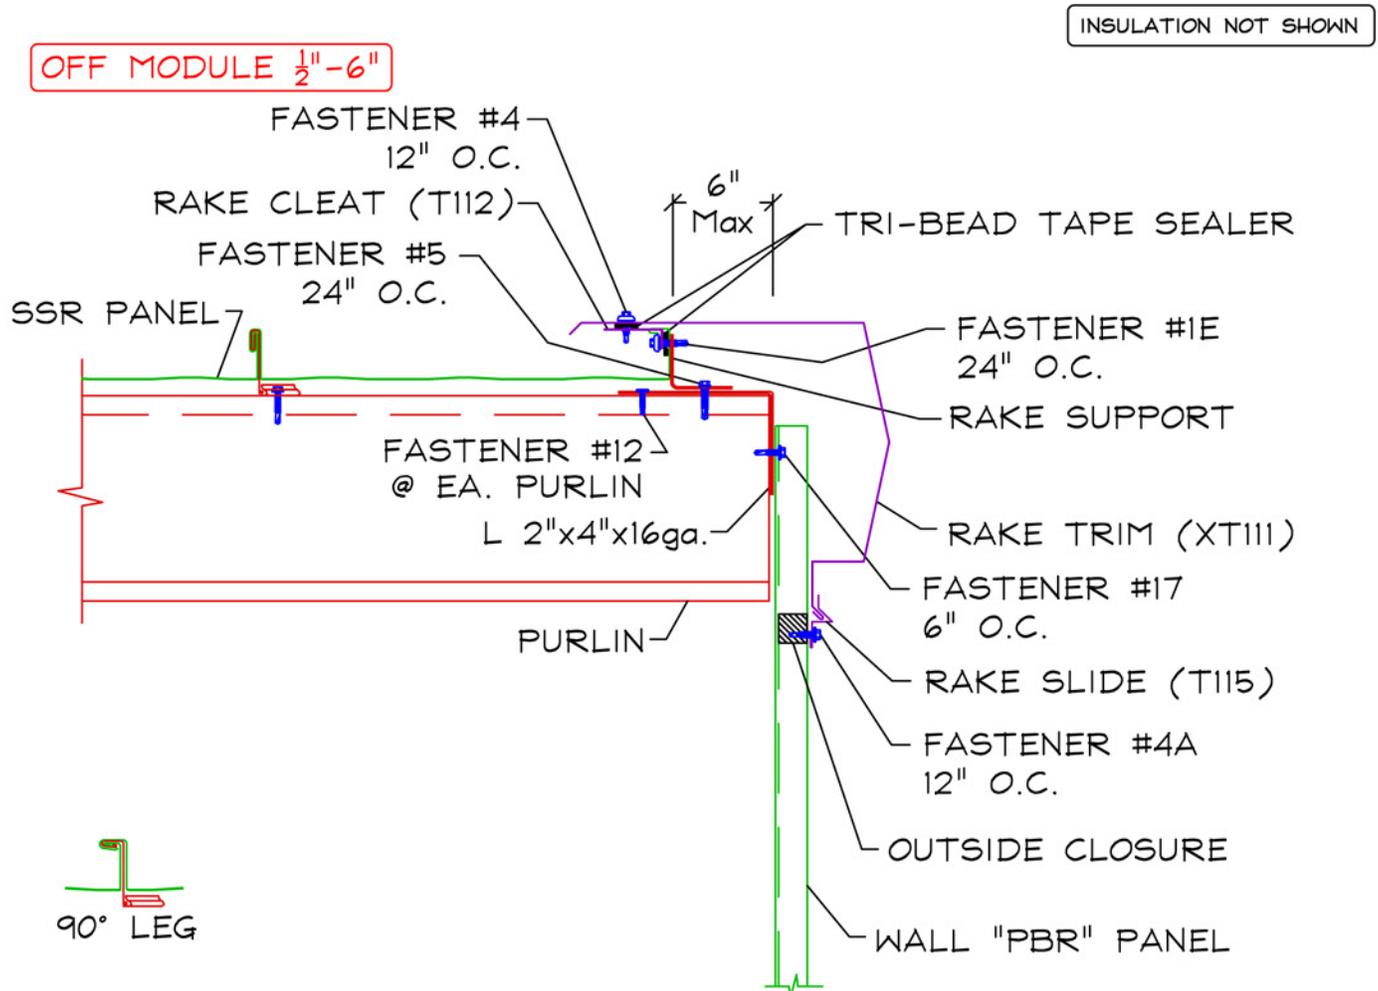


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Eave

E01 - GUTTER

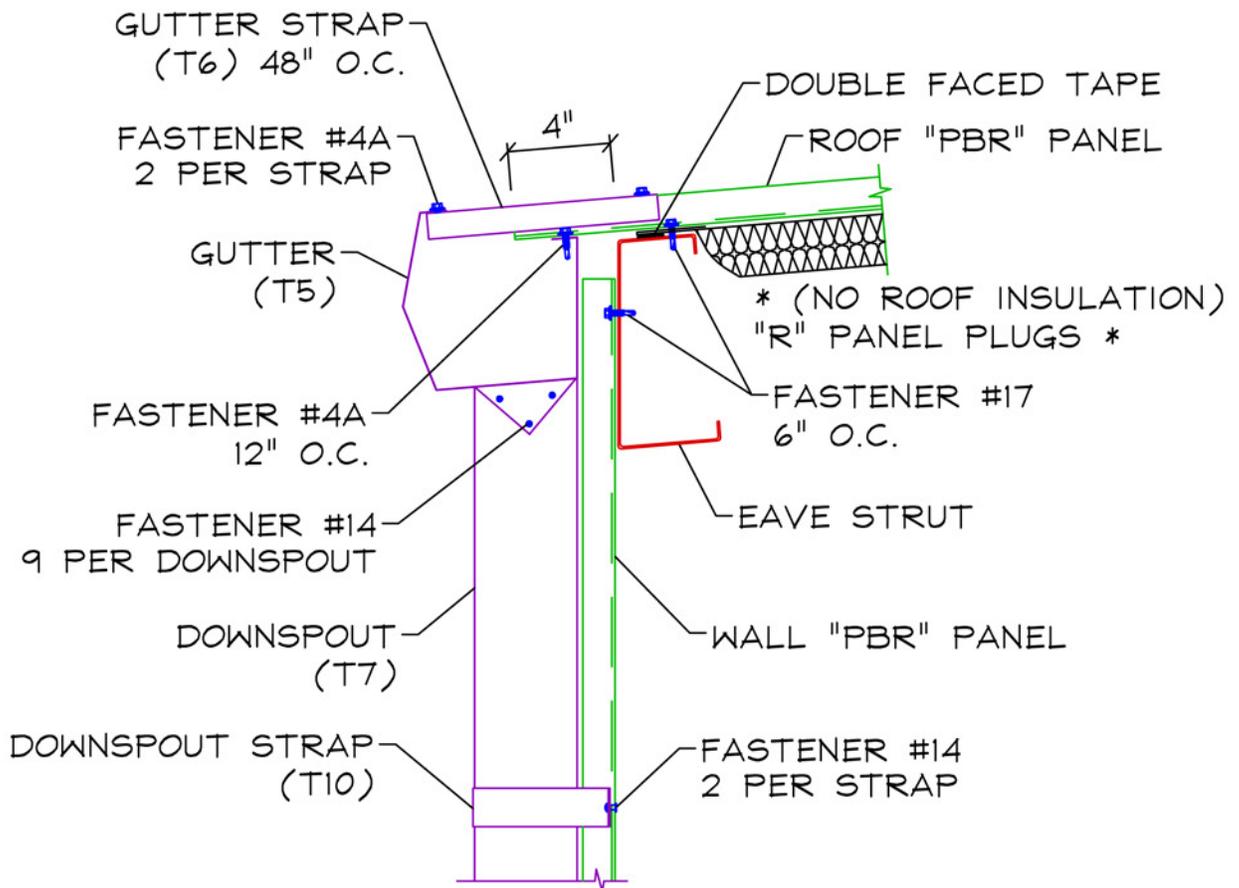


NOTES:

- 1) INSTALL "R" PANEL PLUGS WHEN ROOF INSULATION IS NOT PRESENT.
- 2) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 3) GUTTER LAPS SHOULD BE APPROXIMATELY 3" WITH A BEAD OF URETHANE SEALANT IN BETWEEN.

Eave

E02 - SIMPLE EAVE

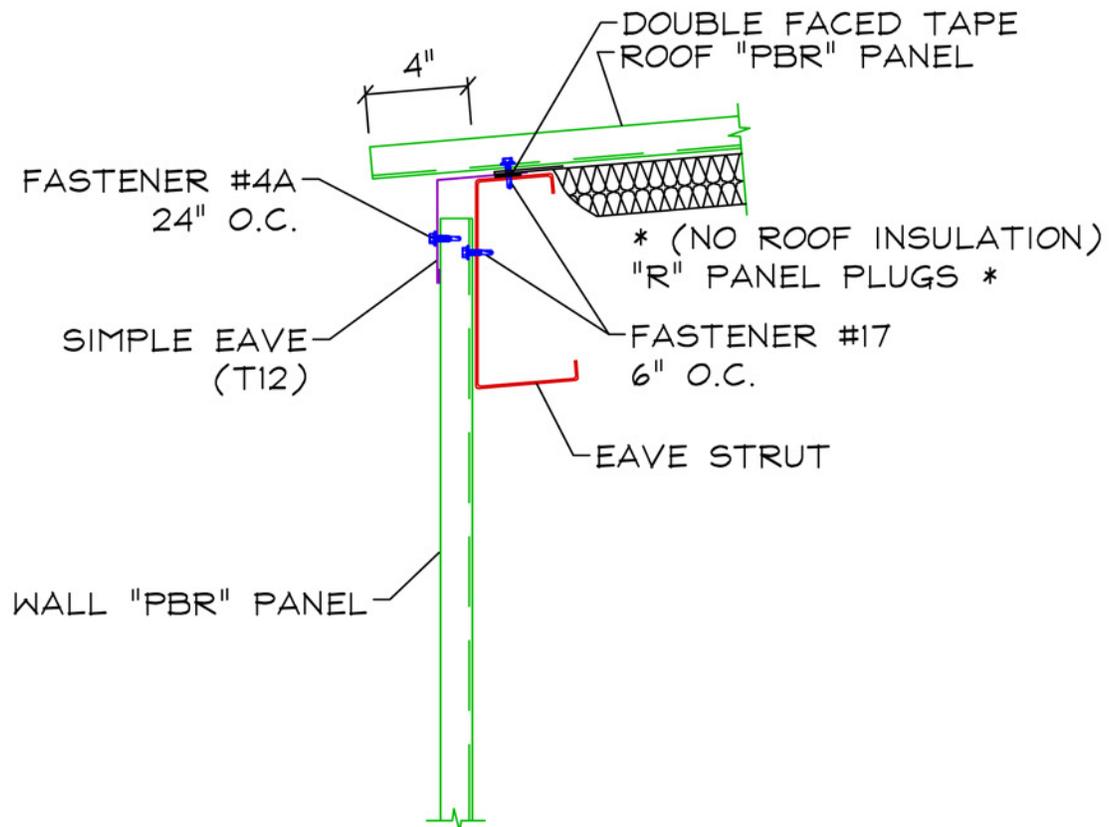


NOTES:

- 1) INSTALL "R" PANEL PLUGS WHEN ROOF INSULATION IS NOT PRESENT.
- 2) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.

Eave

E03 - GUTTER WITH SIMPLE EAVE TRIM

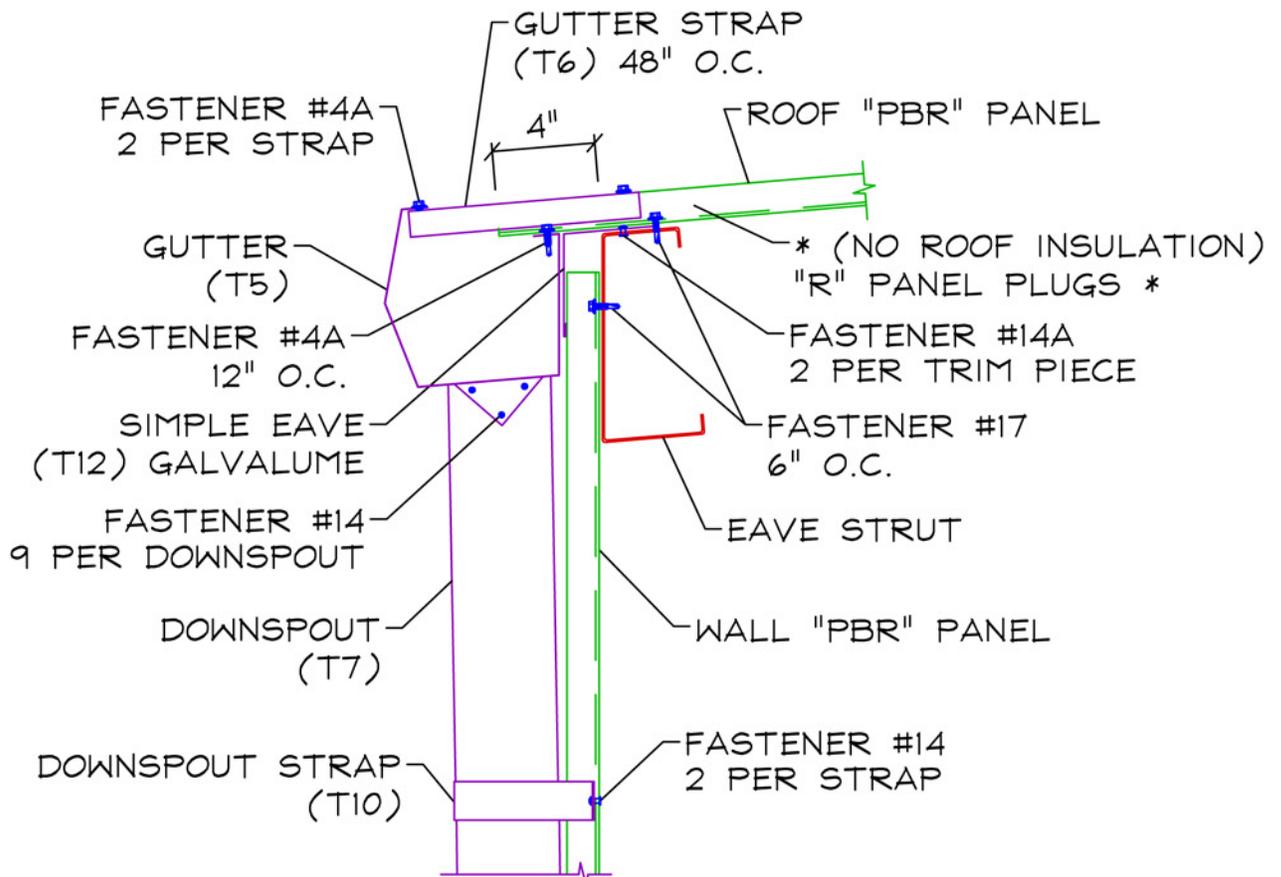


NOTES:

1) INSTALL "R" PANEL PLUGS WHEN ROOF INSULATION IS NOT PRESENT.


Eave

E04 - ROOF OVERHANG - OPEN WALL WITH GUTTER

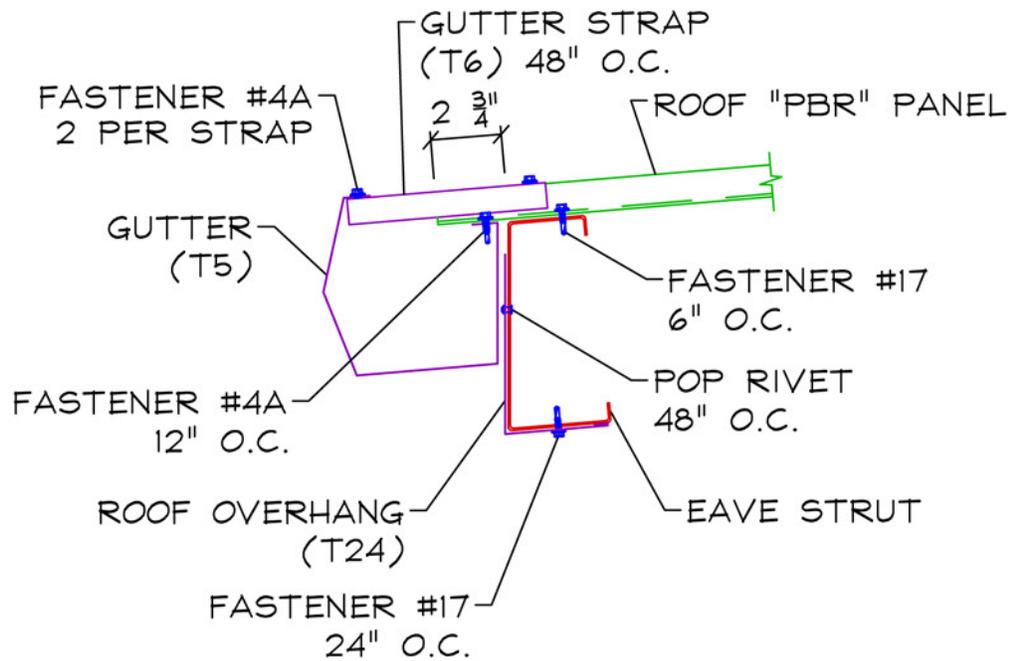

Eave

E05 - ROOF OVERHANG - OPEN WALL WITH EAVE

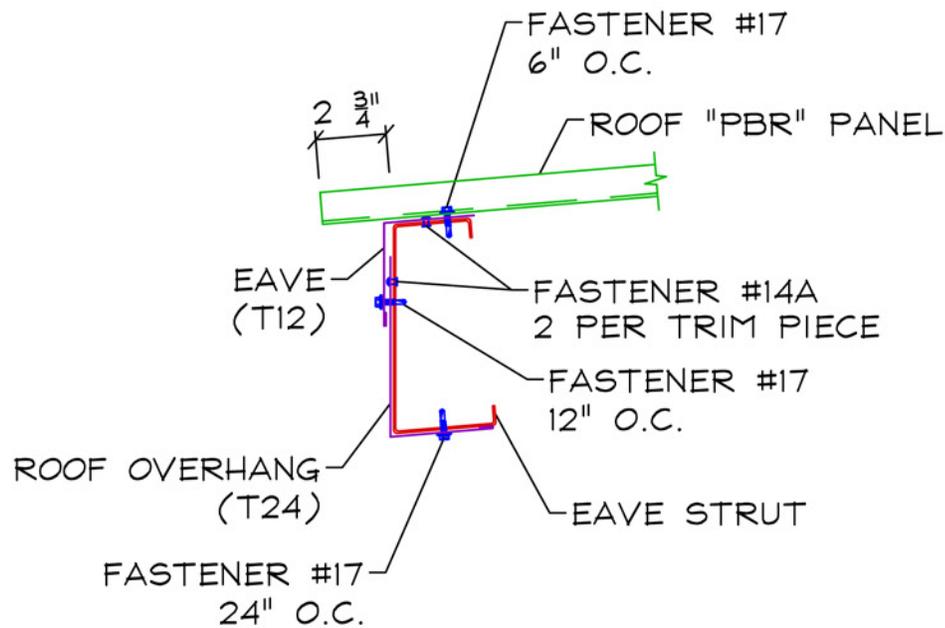


NOTES:

1) INSTALL "R" PANEL PLUGS WHEN ROOF INSULATION IS NOT PRESENT.

Eave

E06 - GUTTER STAND-OFF

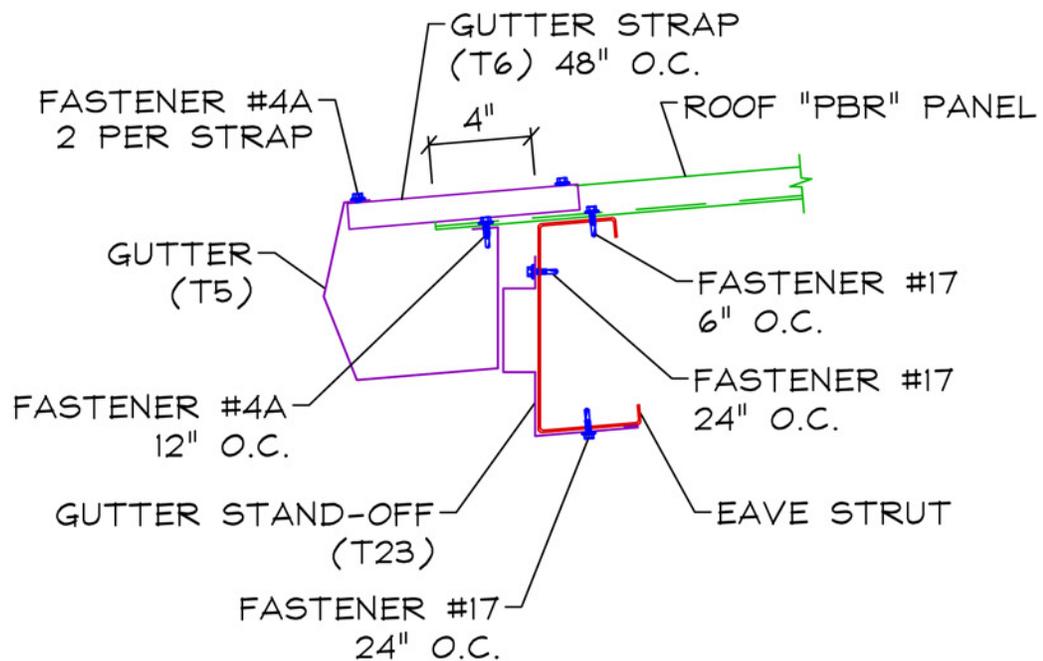


NOTES:

- 1) USE T54 (DOWNSPOUTS SPACER) ON COLUMN FLANGE TO SUPPORT DOWNSPOUT.


Eave

E07 - HIGH SIDE EAVE CLOSURE

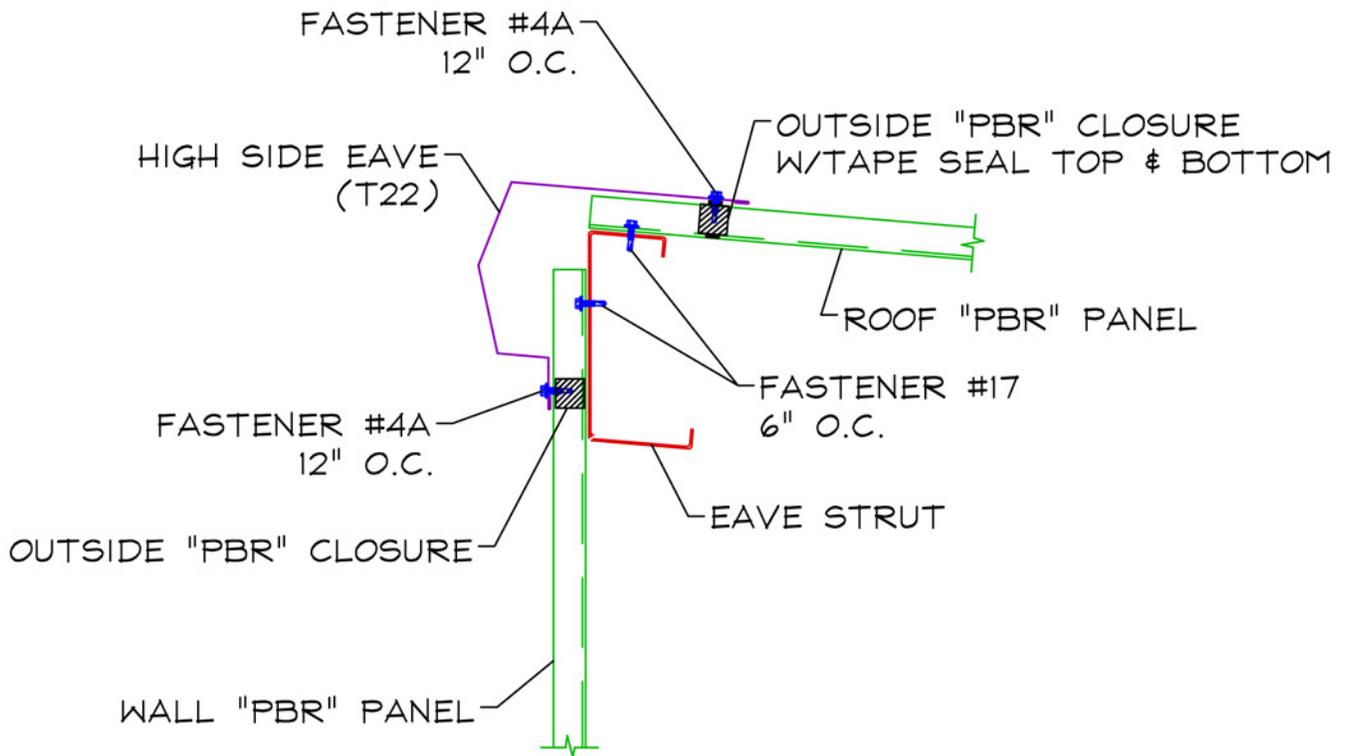

Eave

E08 - SCULPTURED EAVE

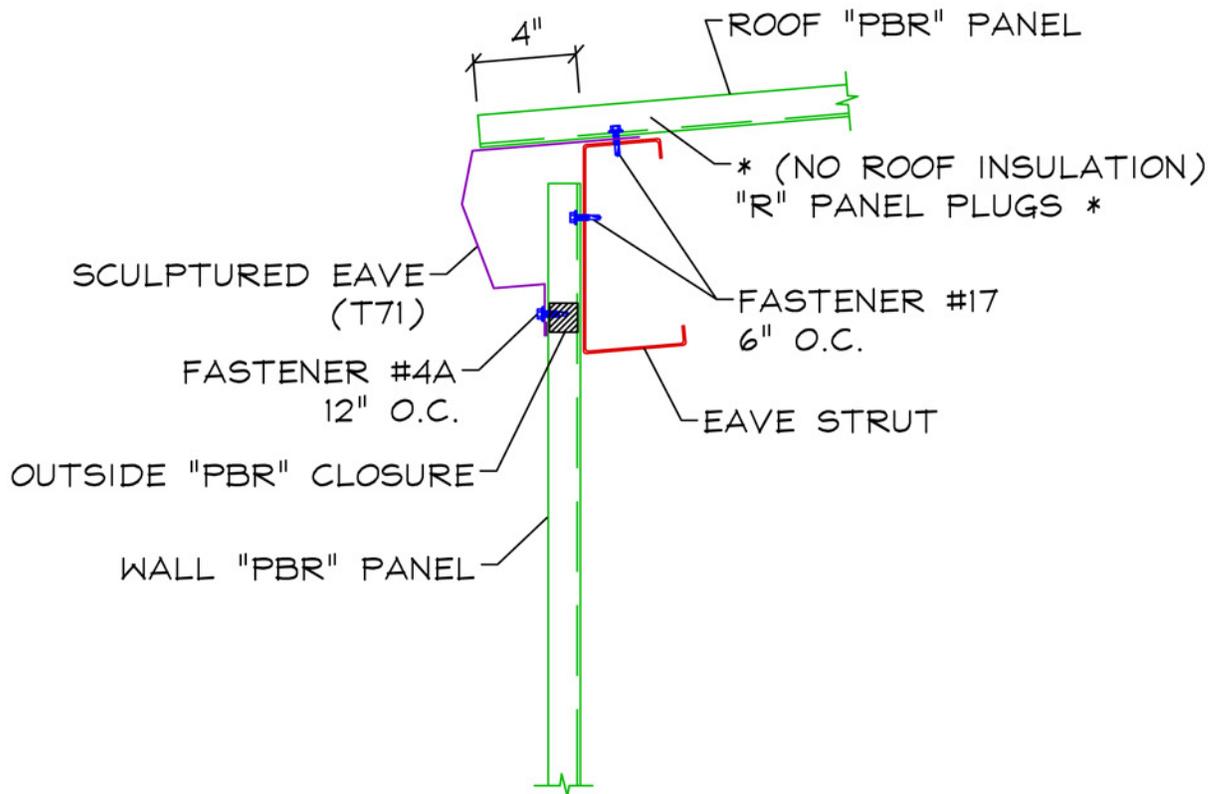


NOTES:

- 1) INSTALL "R" PANEL PLUGS WHEN ROOF INSULATION IS NOT PRESENT.

Eave

E09 - GUTTER STAND-OFF FOR FUTURE BRICK

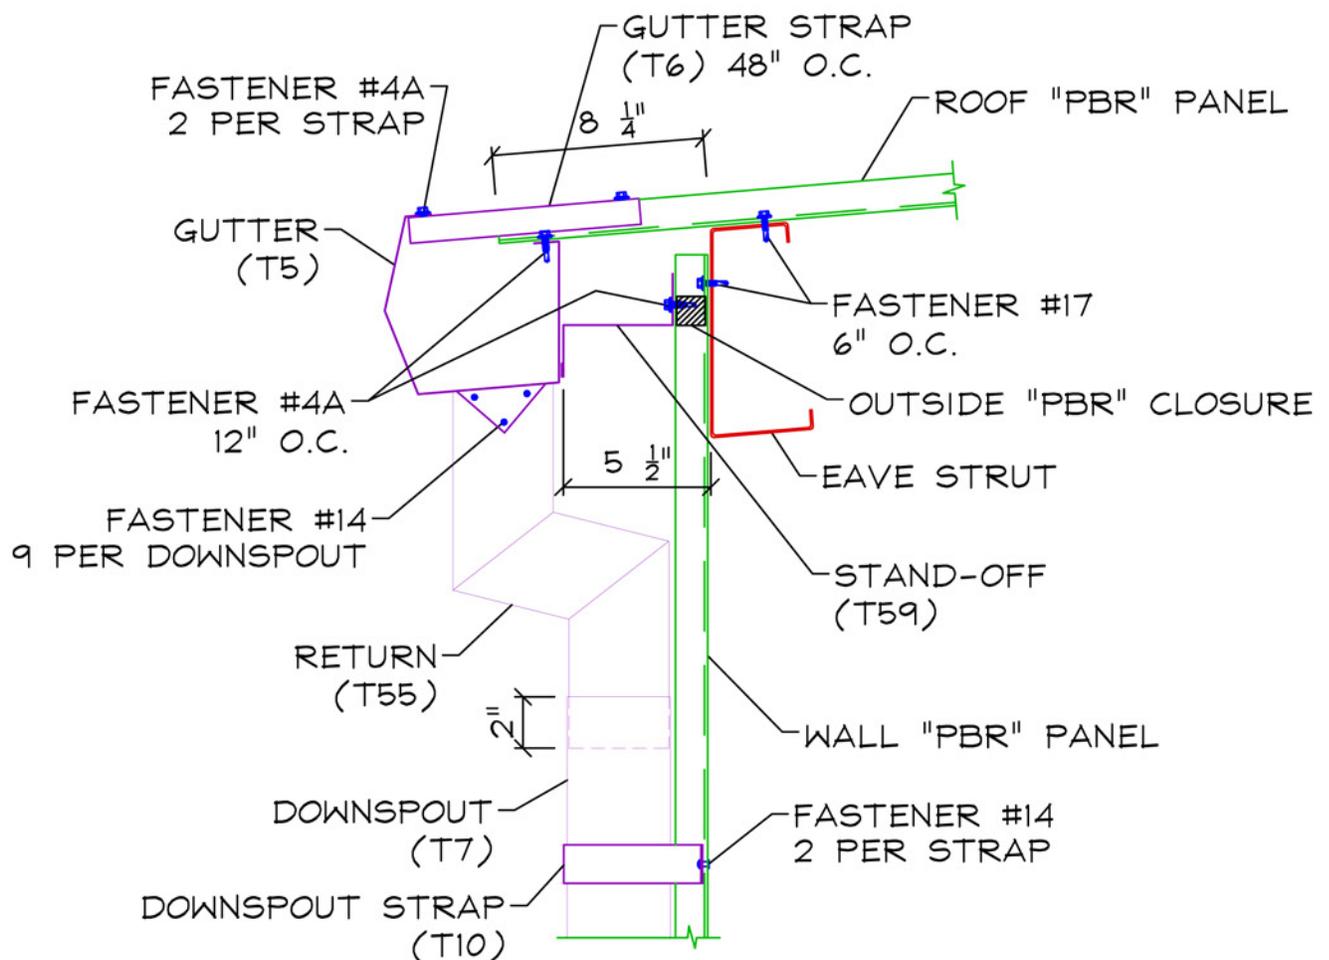


NOTES:

- 1) USE (8) POP RIVETS PER DOWNSPOUT LAP.
- 2) SEND 1'-2" DOWNSPOUTS TO REPLACE T55 RETURNS ONCE BRICK IS INSTALLED.

Eave

E10 - GUTTER WITH MASONRY WALL

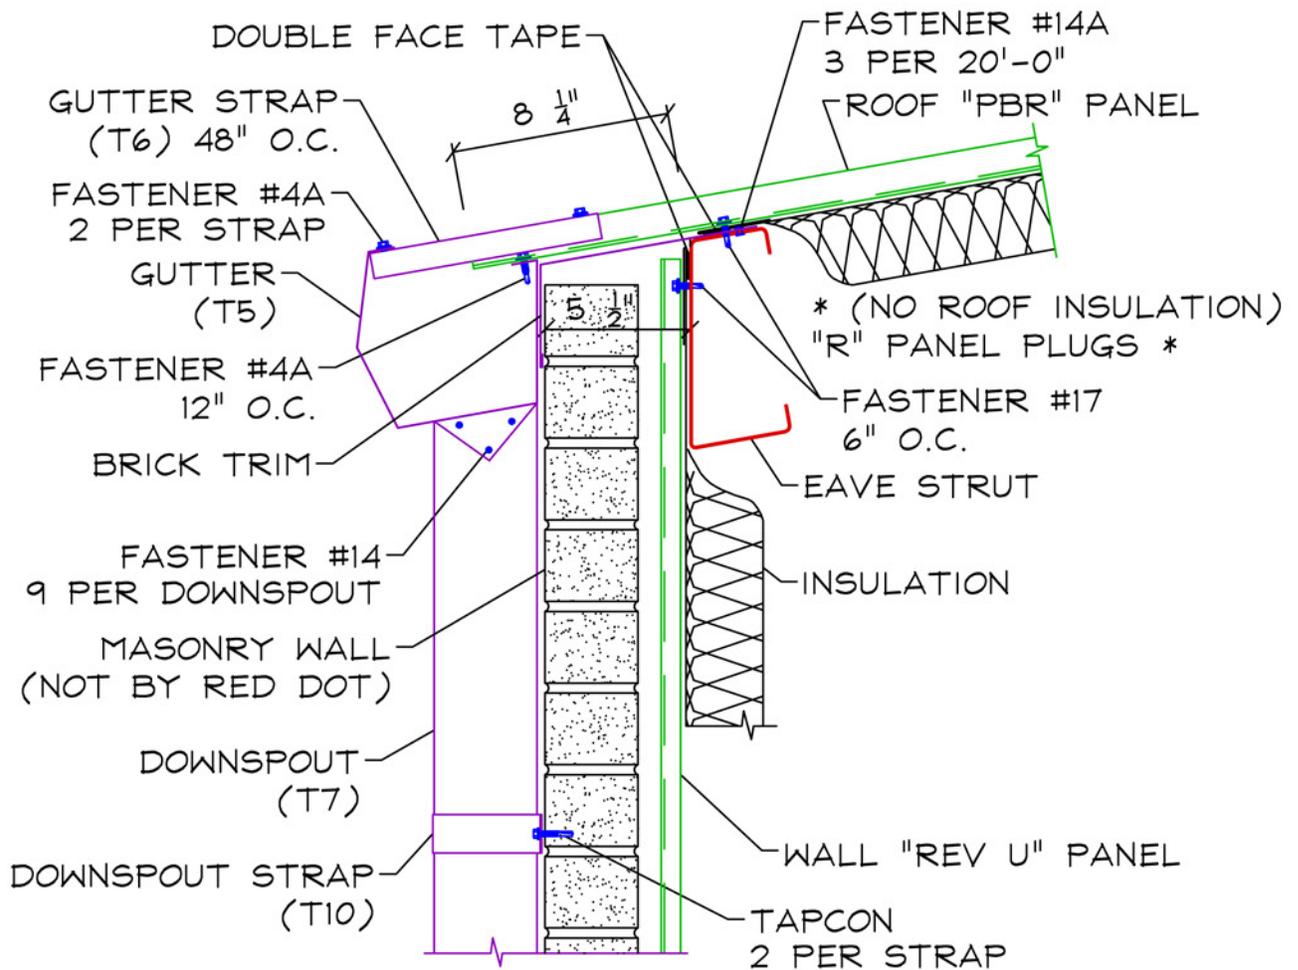


NOTES:

- 1) INSTALL "R" PANEL PLUGS WHEN ROOF INSULATION IS NOT PRESENT.
- 2) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 3) GUTTER LAPS SHOULD BE APPROXIMATELY 3" WITH A BEAD OF URETHANE SEALANT IN BETWEEN.


Eave

E11 - OPEN WALL WITH GUTTER & DOWNSPOUT

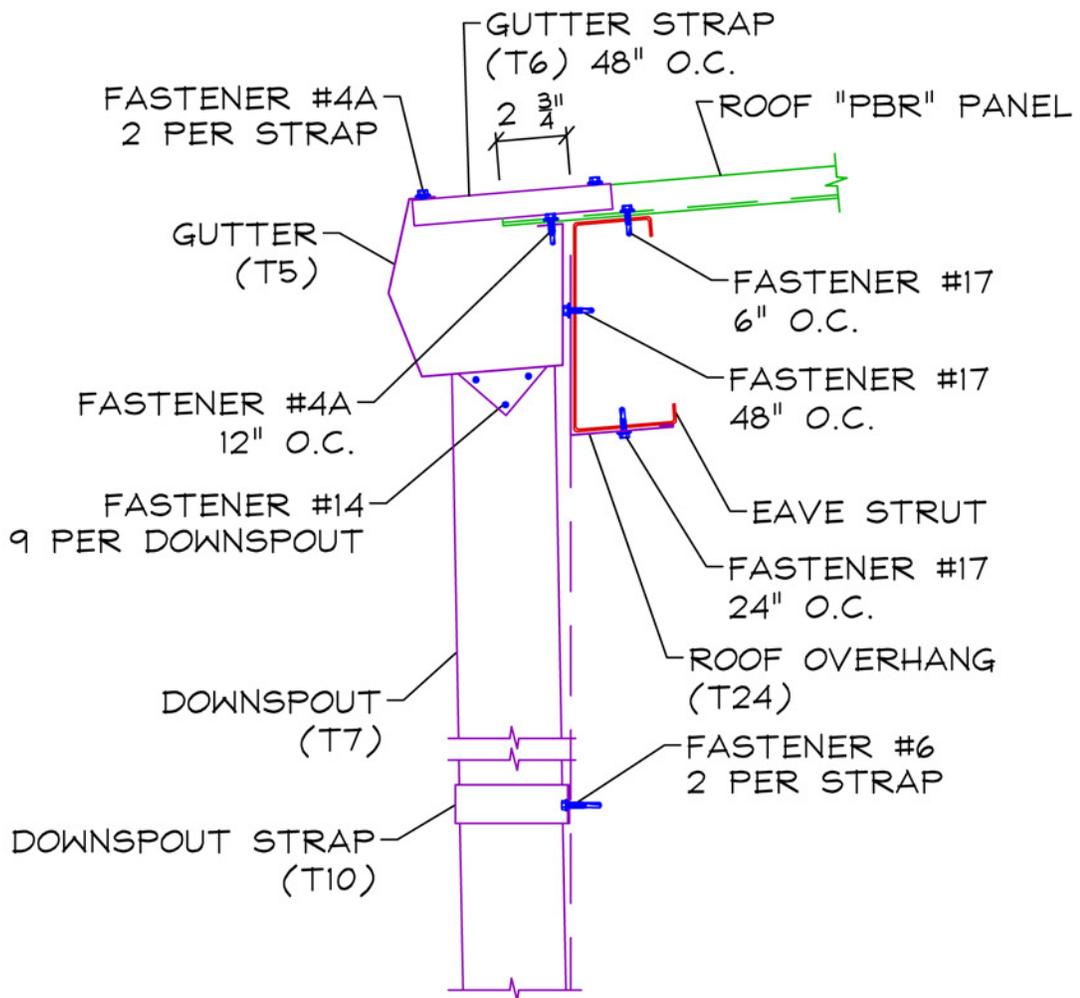

Eave

E12 - OPEN WALL WITH GUTTER & DOWNSPOUT

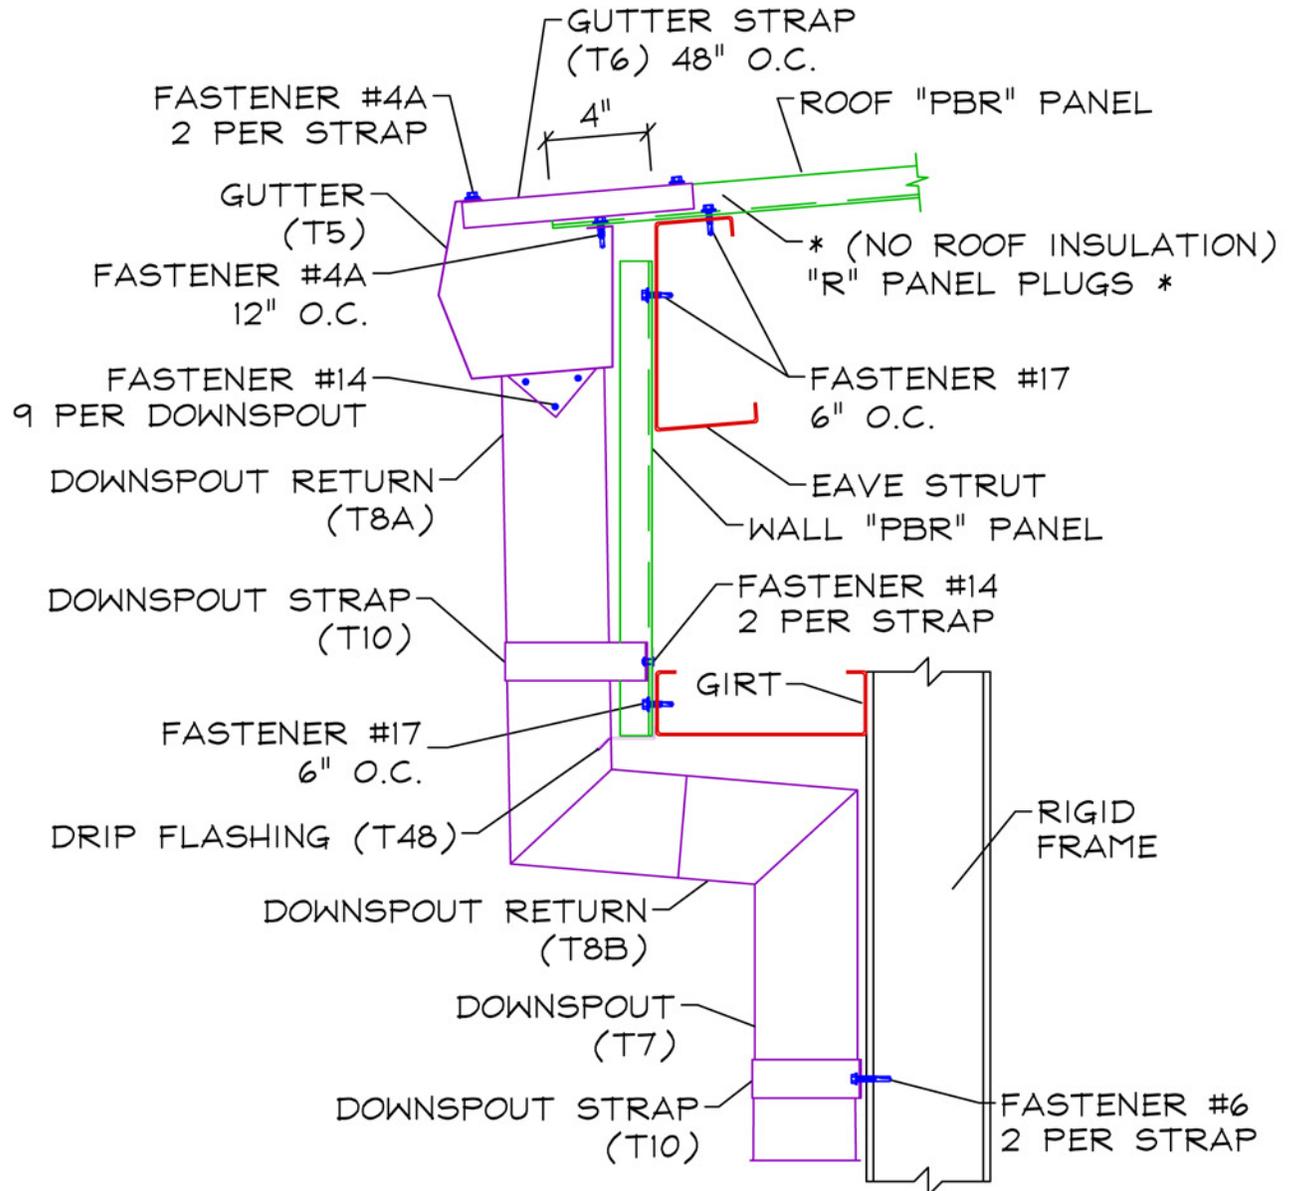


NOTES:

- 1) INSTALL "R" PANEL PLUGS WHEN ROOF INSULATION IS NOT PRESENT.


Eave

E13 - OPEN WALL WITH GUTTER AND SOFFIT

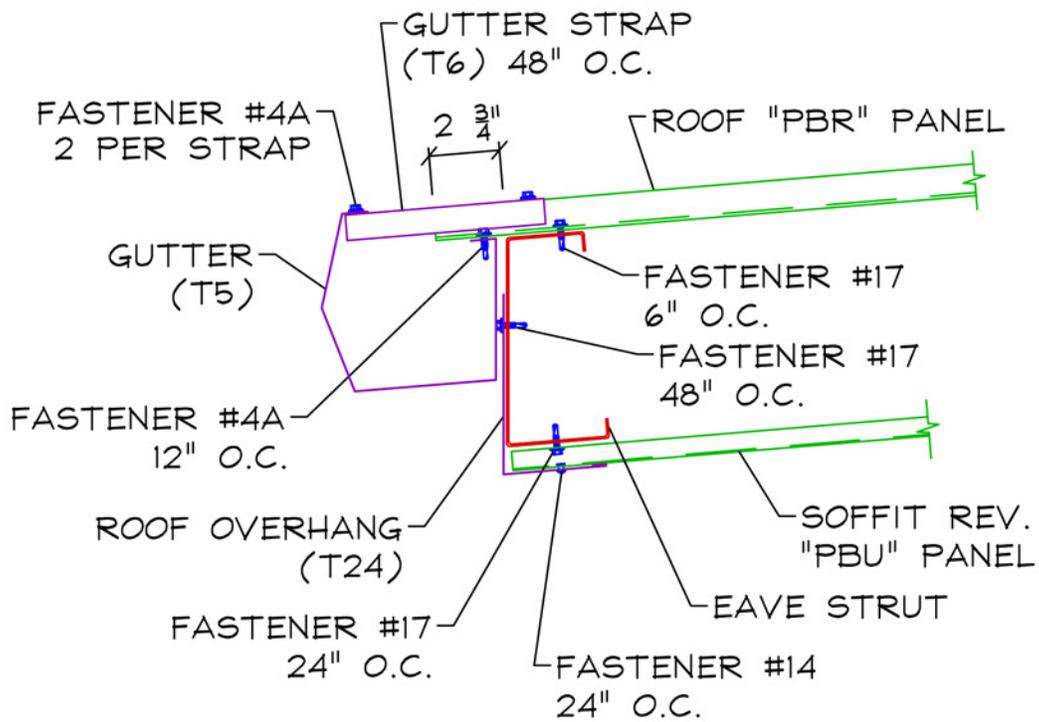

Eave

E14 - JAMB BRACE

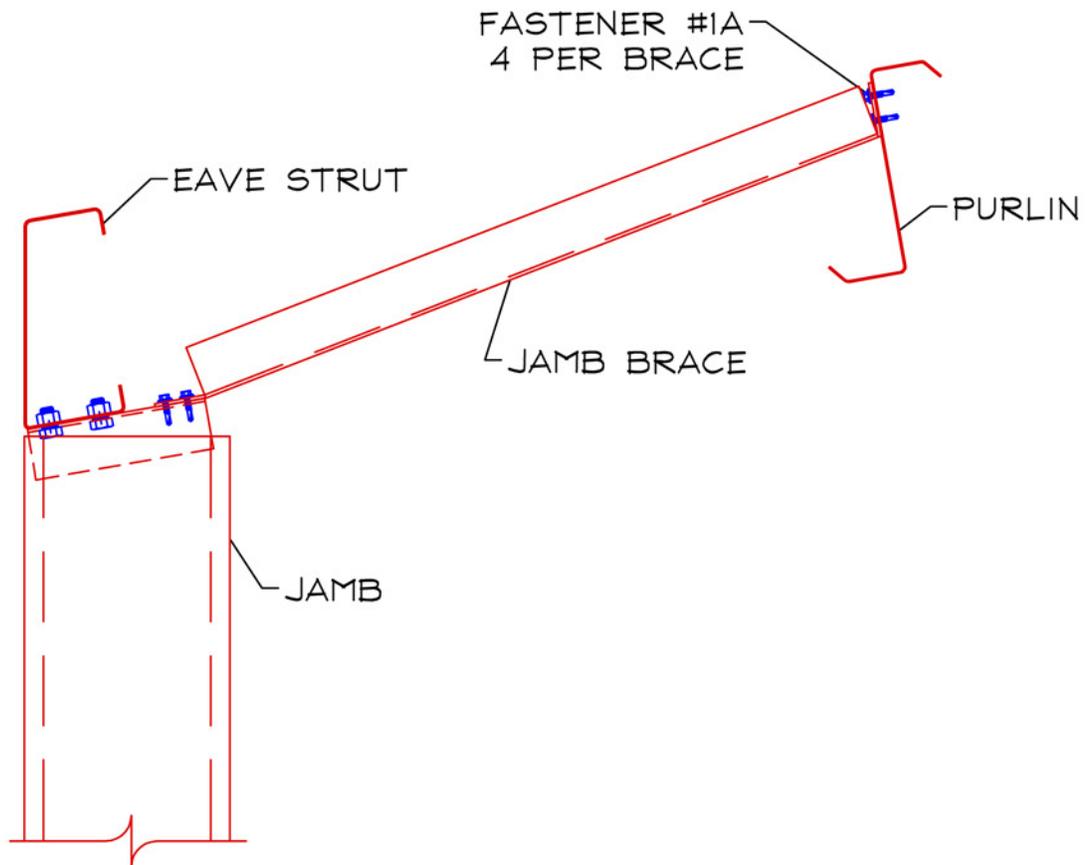


NOTES:

- 1) SEE ROOF FRAMING PLAN FOR LOCATIONS AND PIECE MARKS.
- 2) FIELD BEND ENDS OF JAMB BRACE AS REQUIRED FOR INSTALLATION.

Eave

E15 - GUTTER - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

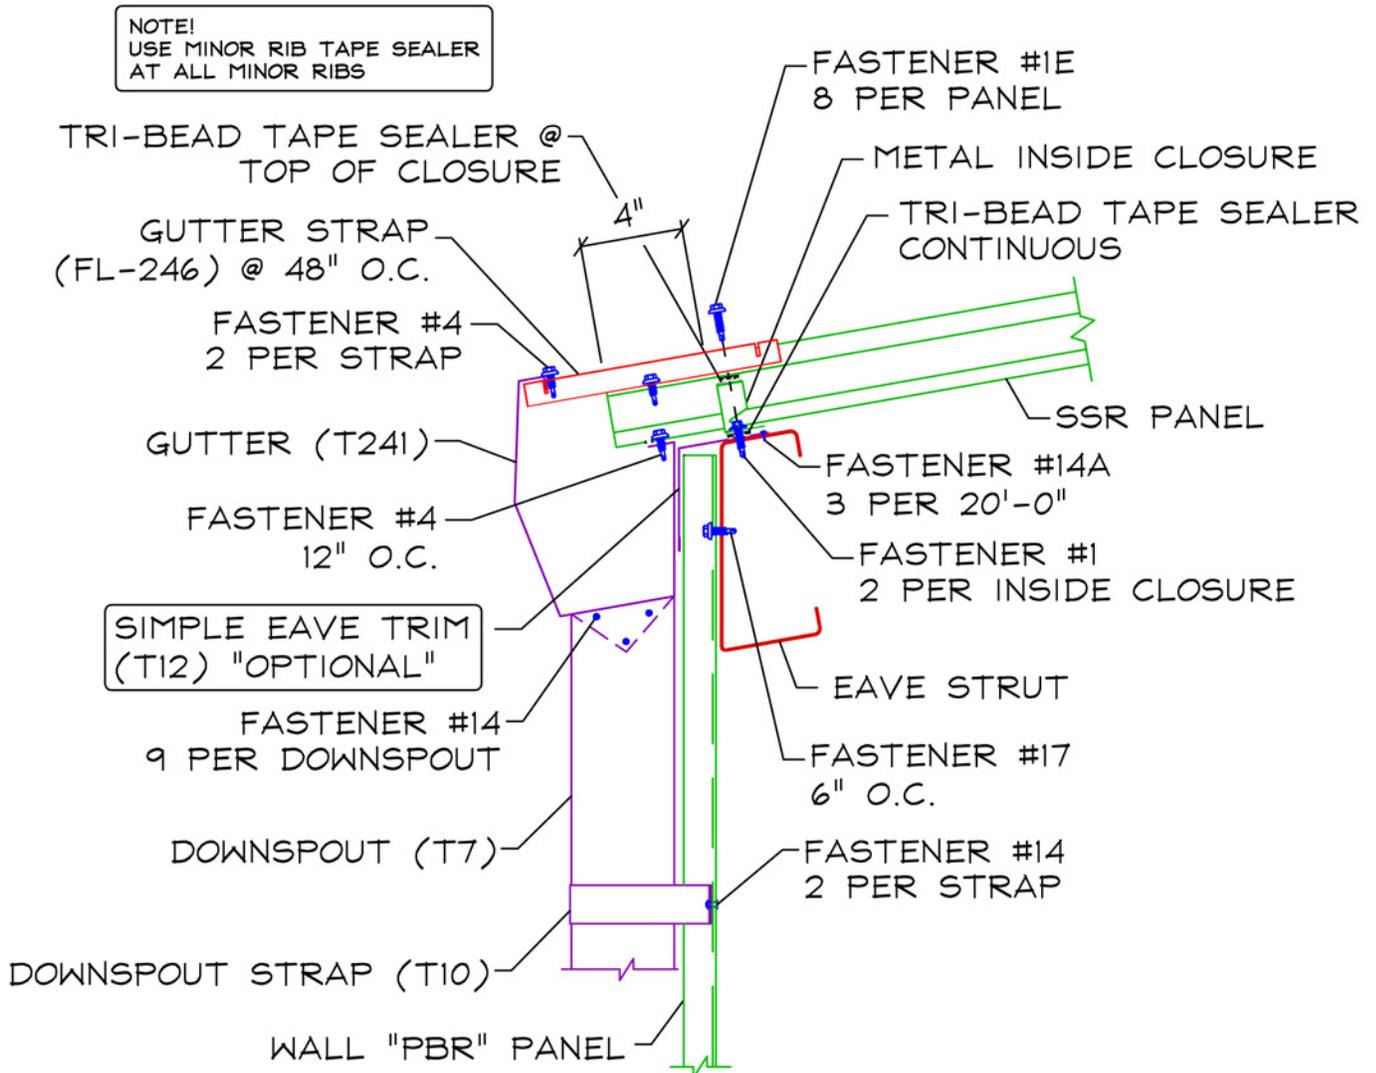


NOTES:

- 1) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Eave

E16 - SCULPTURED EAVE - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

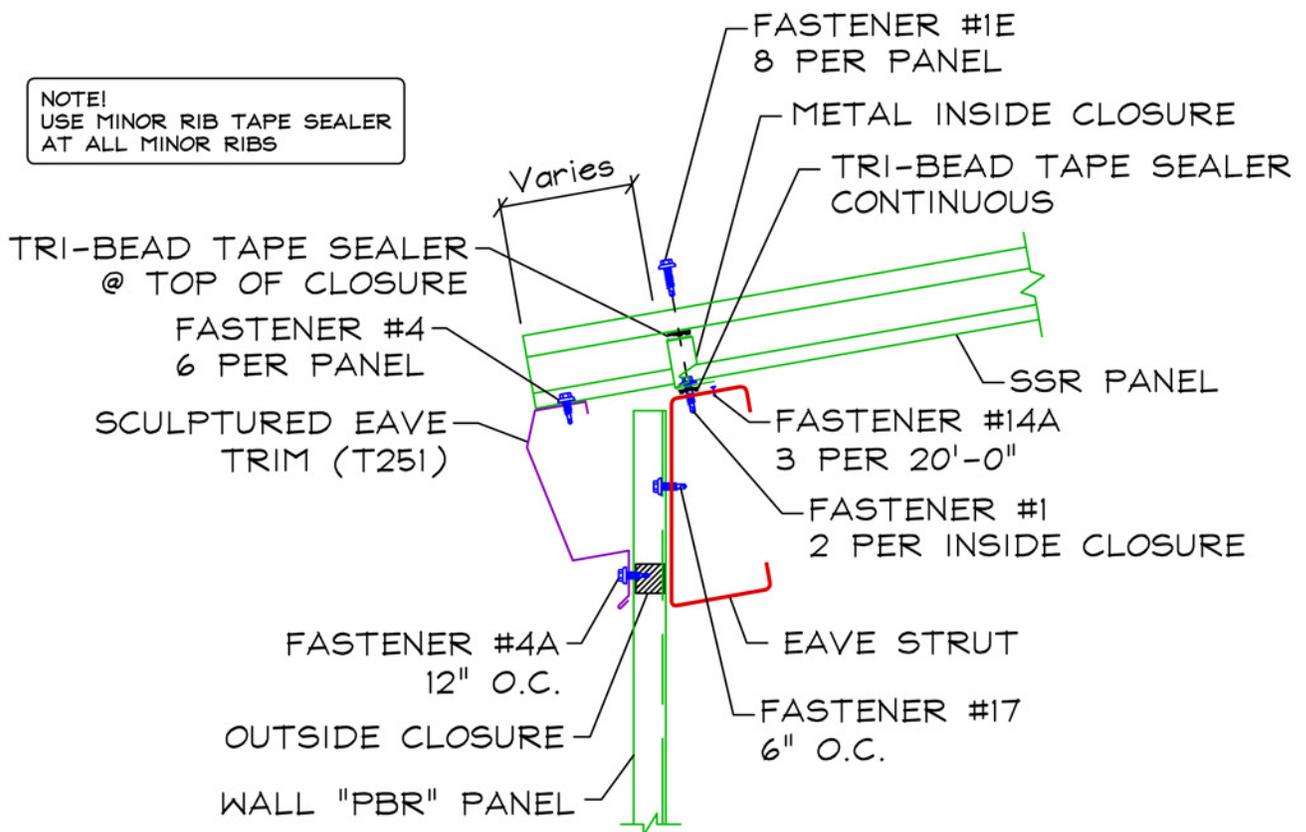

NOTES:

- 1) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.


Eave

E17 - SIMPLE EAVE - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

DETAILER NOTE!
ORDER PANELS WITH NO PUNCHING

INSULATION NOT SHOWN

NOTE!
USE MINOR RIB TAPE SEALER
AT ALL MINOR RIBS

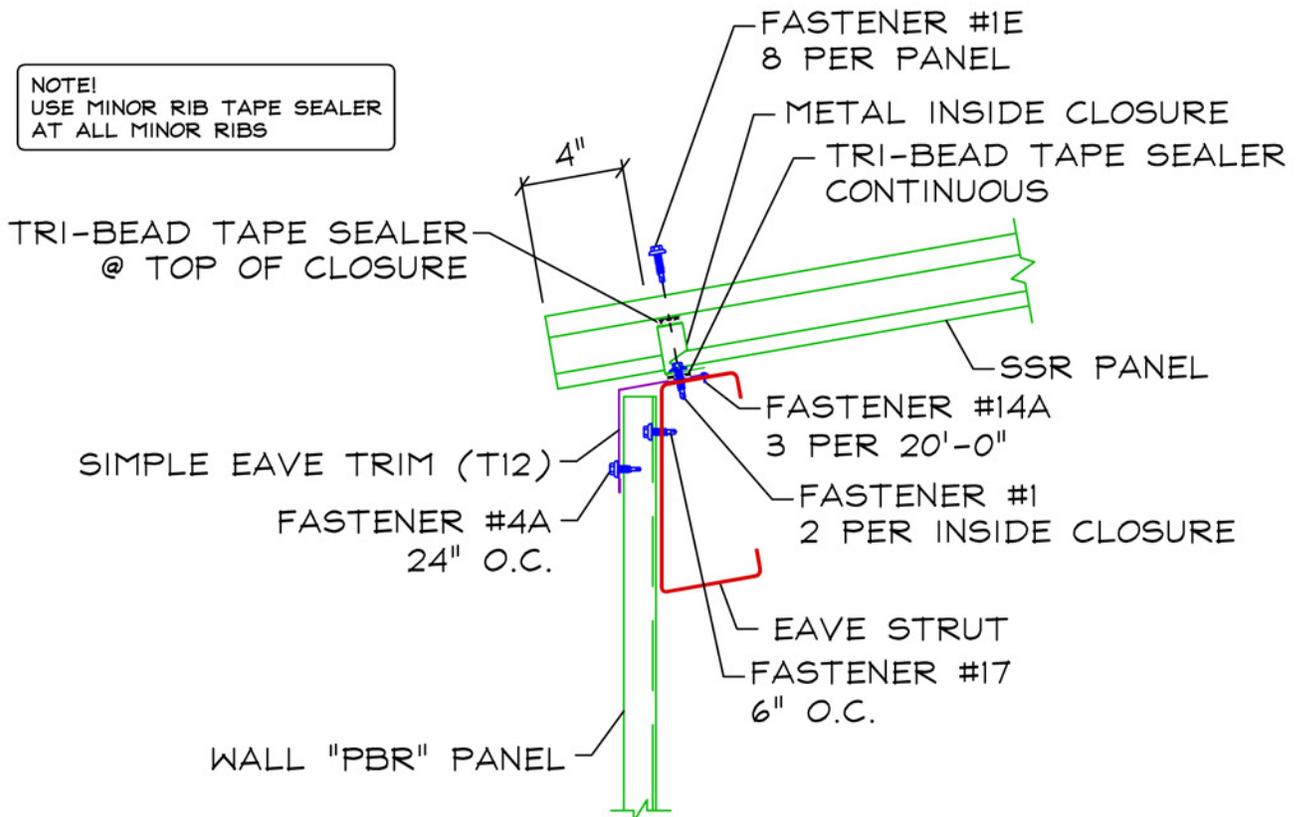


NOTES:

- 1) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Eave

E18 - HIGH SIDEWALL - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

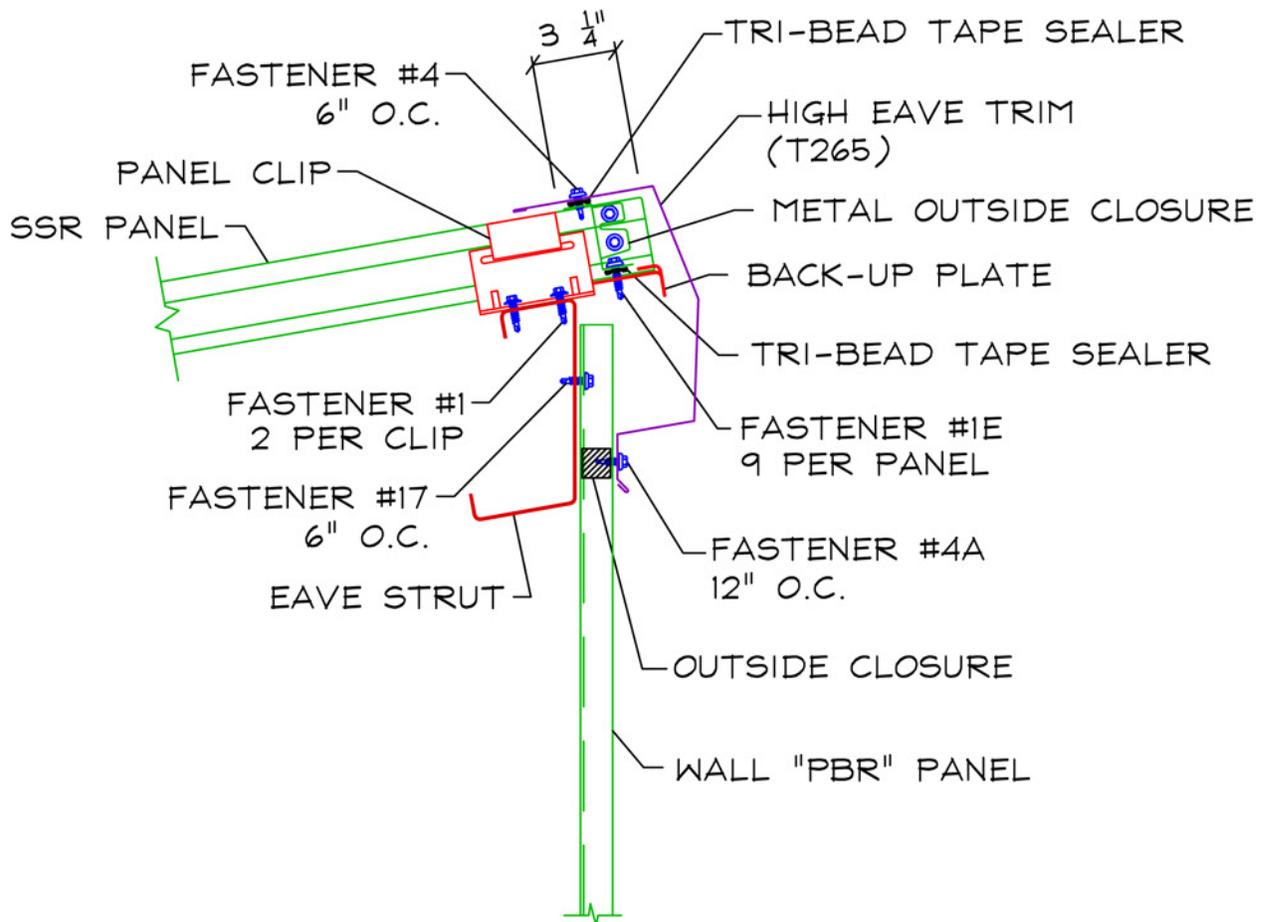


NOTES:

- 1) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Eave

E19 - GUTTER - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

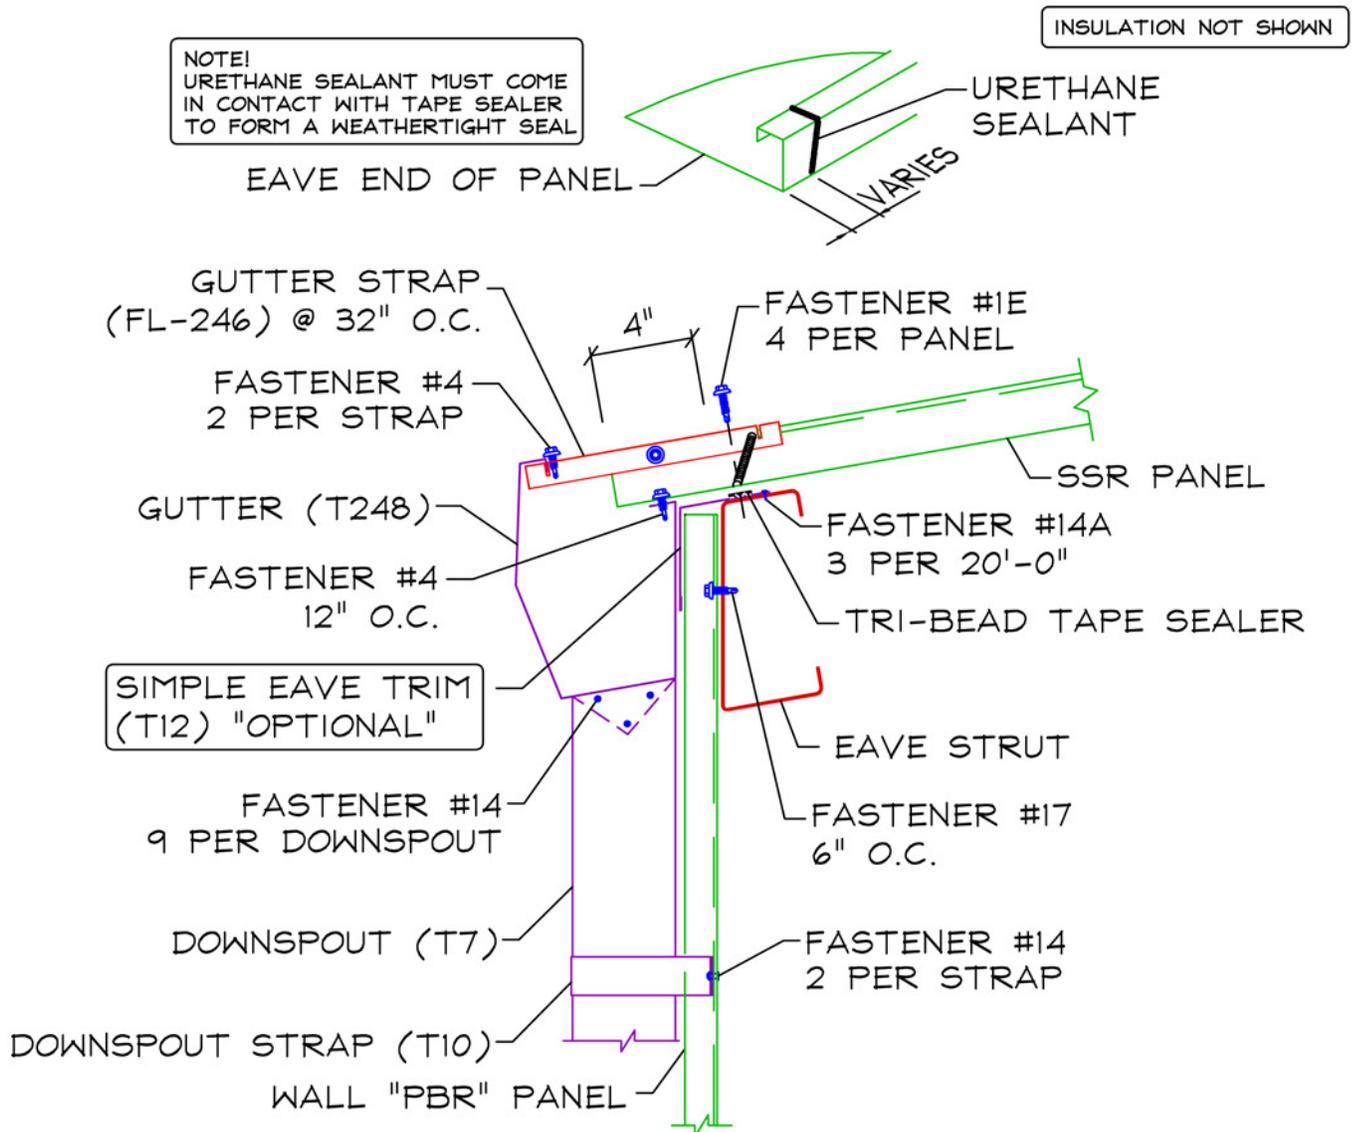


NOTES:

- 1) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Eave

E20 - SCULPTURED EAVE - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

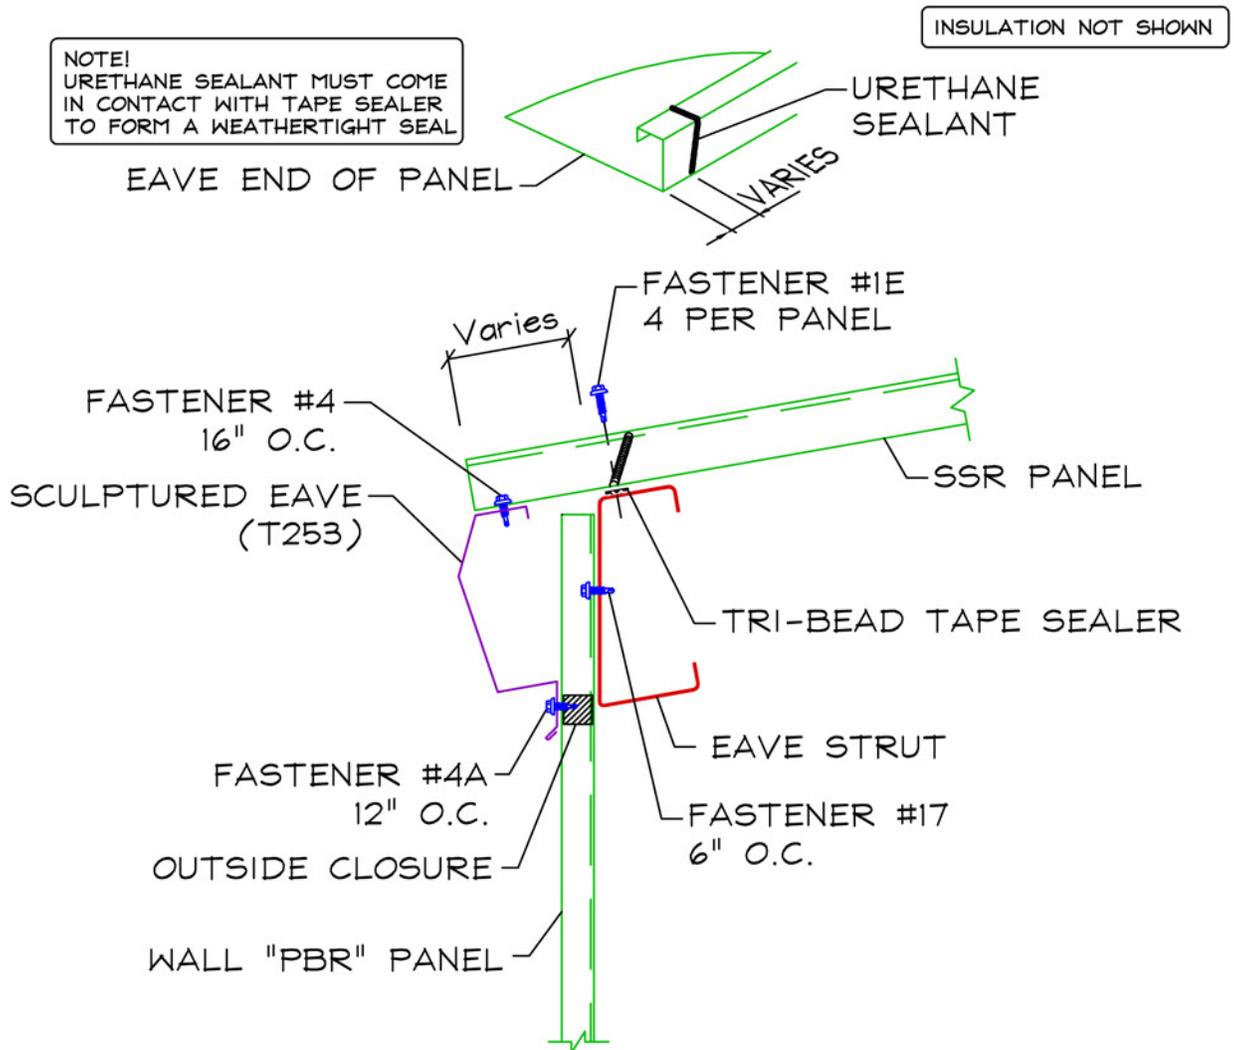


NOTES:

- 1) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Eave

E21 - ARCHITECTURAL EAVE - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

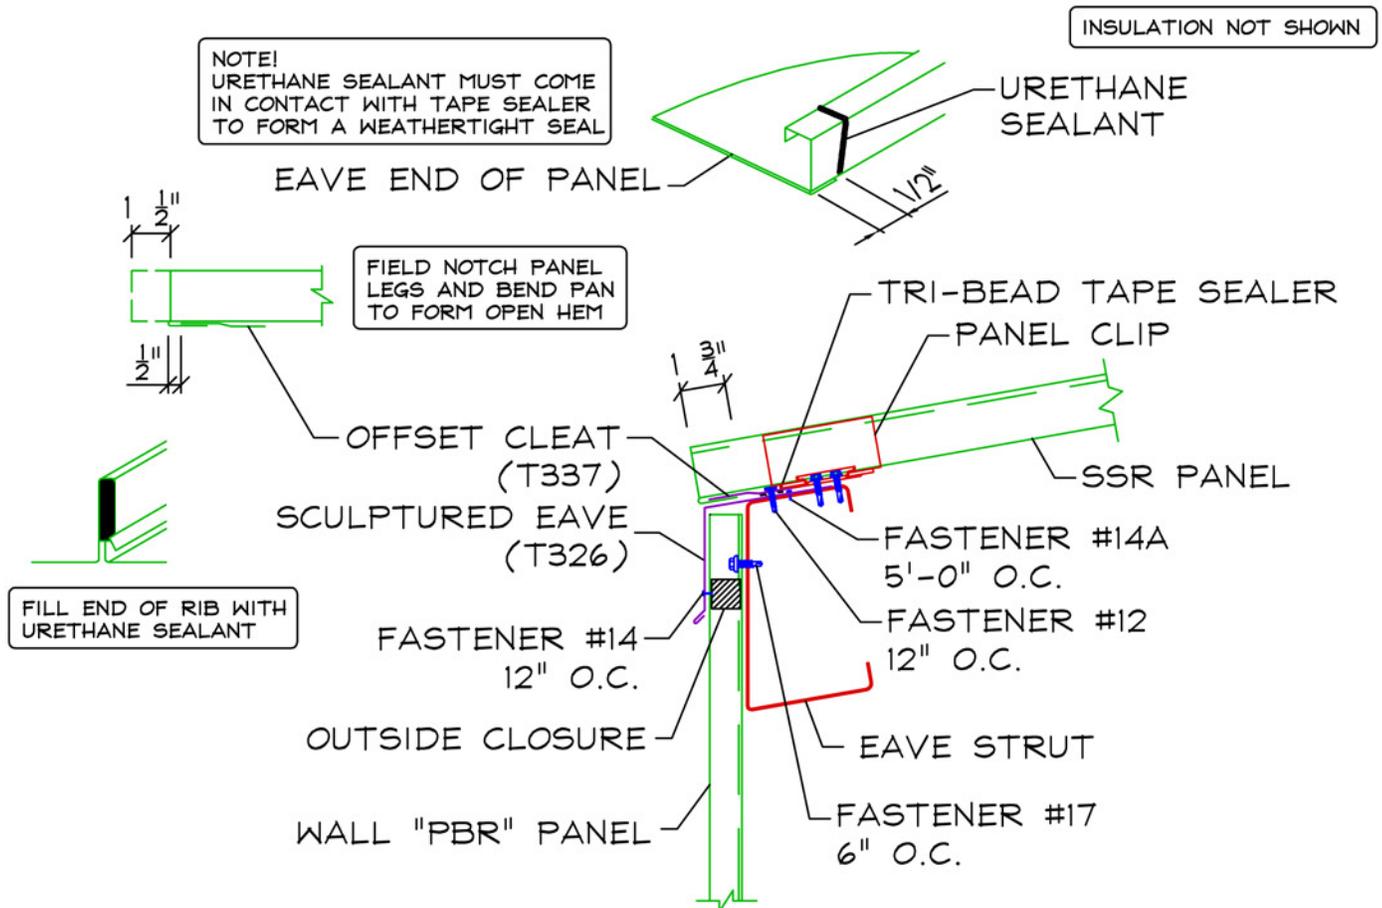


NOTES:

- 1) DO NOT USE THIS DETAIL ON SLOPES LESS THAN 3:12
- 2) TOP LEG OF EAVE STRUT MUST BE WIDE ENOUGH FOR PANEL CLIP ATTACHMENT
- 3) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 4) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 5) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Eave

E22 - HIGH SIDEWALL - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

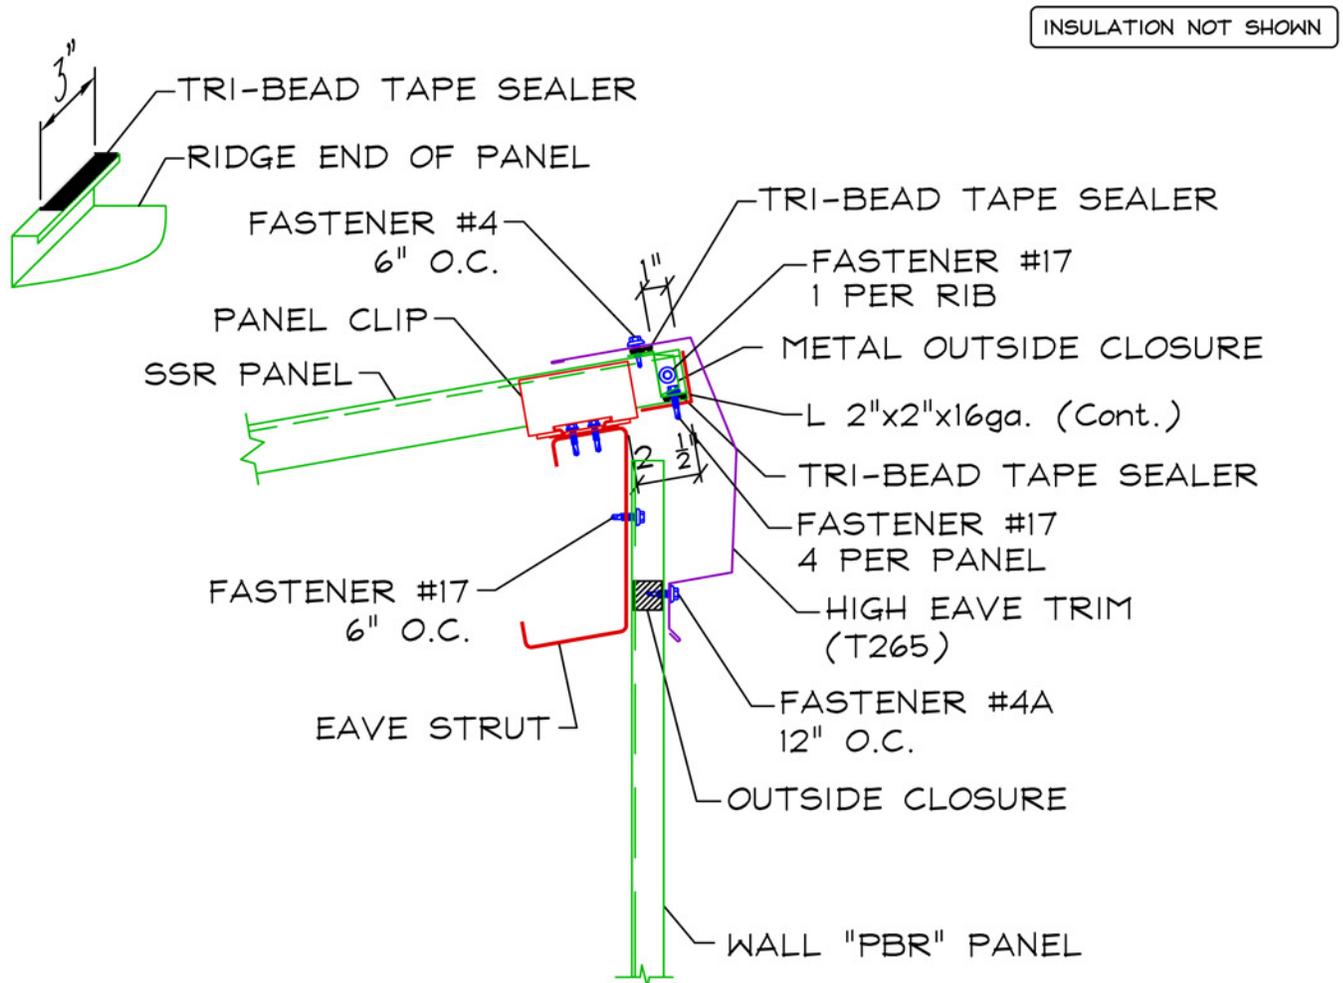


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI01 - EXPOSED FASTENER ROOF PANEL - RIDGE CAP

INSULATION NOT SHOWN

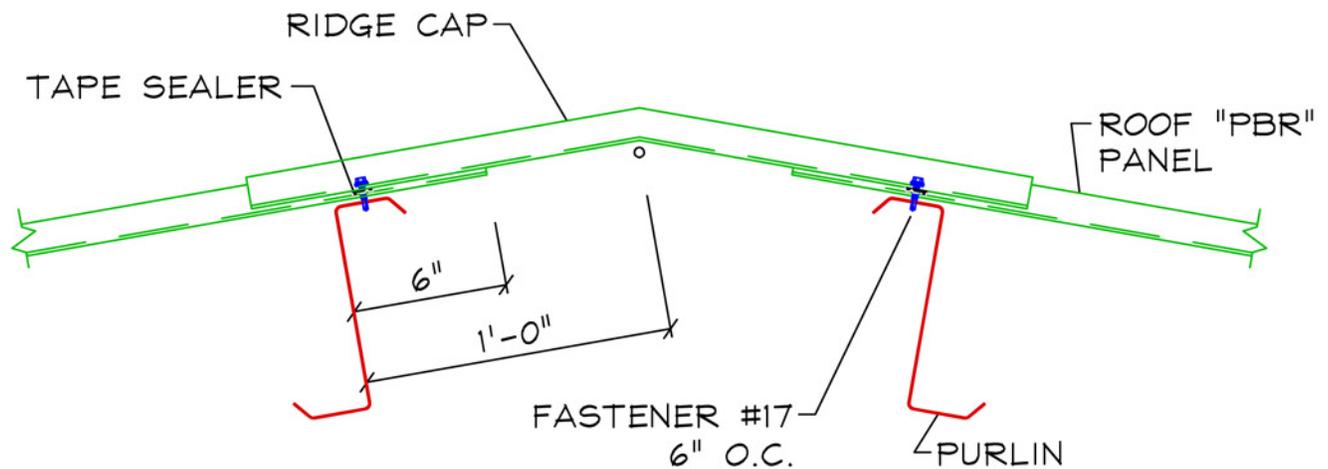


NOTES:

- 1) TAPE SEALER MUST BE INSTALLED BETWEEN WEATHER INFILTRATION POINT AND FASTENER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI02 - EXPOSED FASTENER ROOF PANEL - SCULPTURED RIDGE FLASHING

INSULATION NOT SHOWN

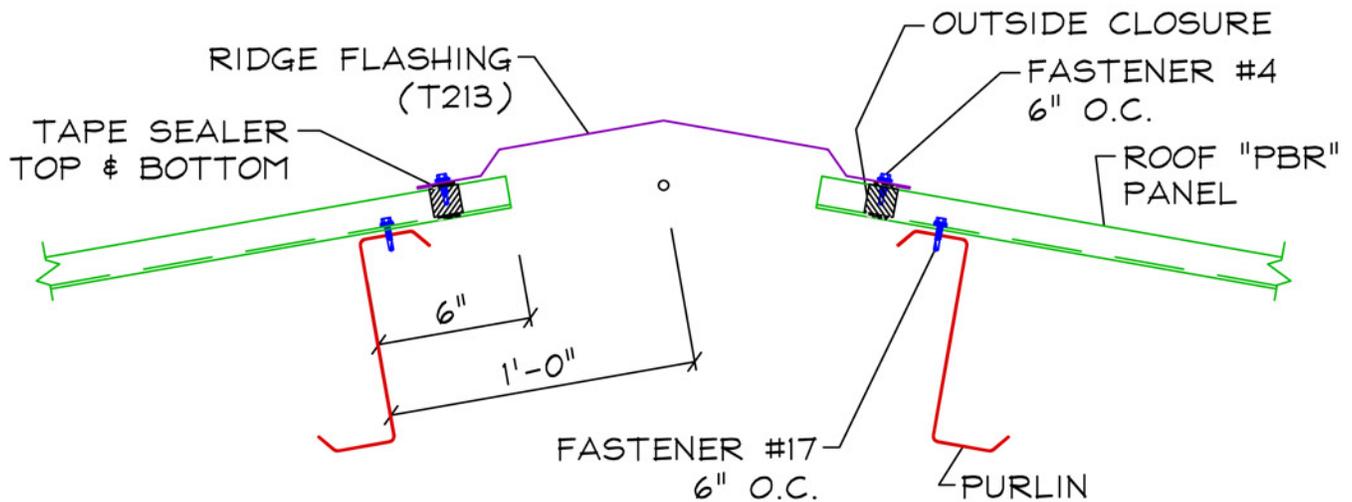


NOTES:

- 1) TAPE SEALER MUST BE INSTALLED BETWEEN WEATHER INFILTRATION POINT AND FASTENER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI03 - EXPOSED FASTENER ROOF PANEL - FLAT RIDGE/HIP FLASHING

INSULATION NOT SHOWN

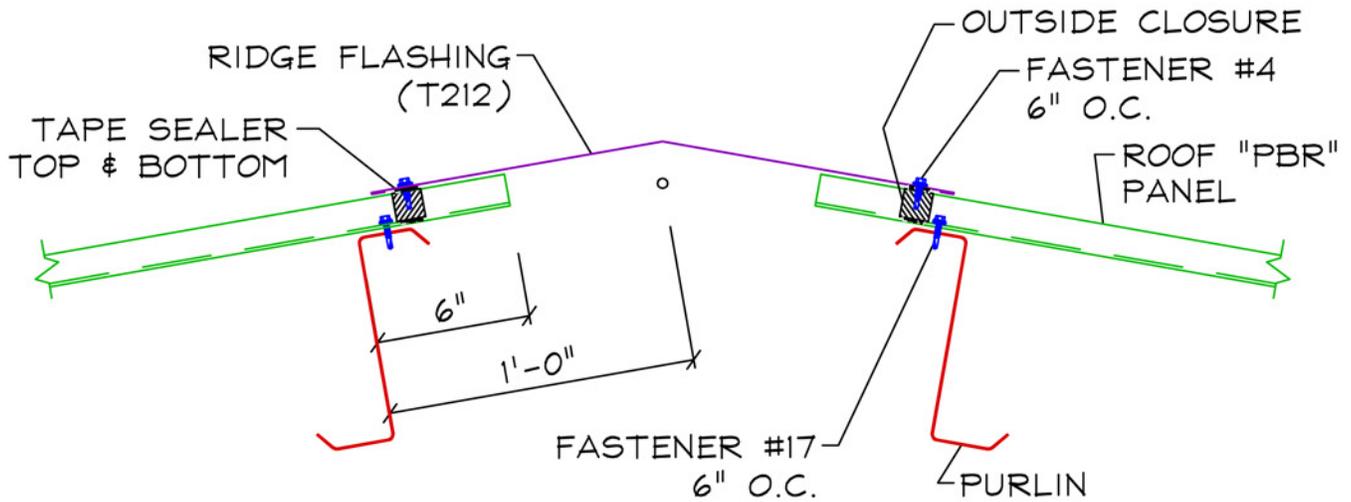

USED @ RIDGE WHEN
TIEING TO HIP.

NOTES:


- 1) TAPE SEALER MUST BE INSTALLED BETWEEN WEATHER INFILTRATION POINT AND FASTENER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER

TRIM SECTIONS

Ridge

Ridge

RI05 - EXPOSED FASTENER ROOF PANEL - LOW PROFILE VENT (COR-A-VENT)

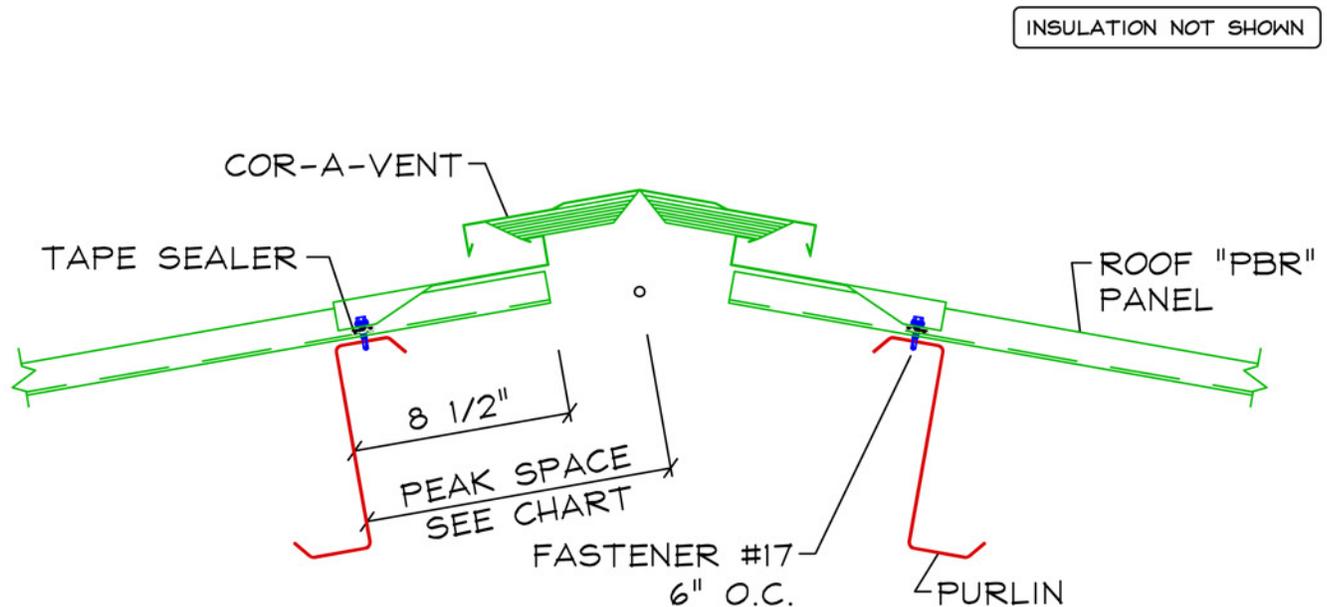

PEAK PURLIN SPACE	
PITCH	PURLIN SPACE
1:12	11 5/8"
2:12	11 3/8"
3:12	11 1/16"
4:12	10 13/16"
5:12	10 9/16"
6:12	10 3/8"


NOTES:

- 1) USE ONE SPLICE KIT AT EACH VENT SPLICE.
- 2) USE ONE END CAP AT EACH TERMINATING END.
- 3) TAPE SEALER MUST BE INSTALLED BETWEEN WEATHER INFILTRATION POINT AND FASTENER.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI06 - EXPOSED FASTENER ROOF PANEL - 9"x10' RIDGE VENTILATOR

INSULATION NOT SHOWN

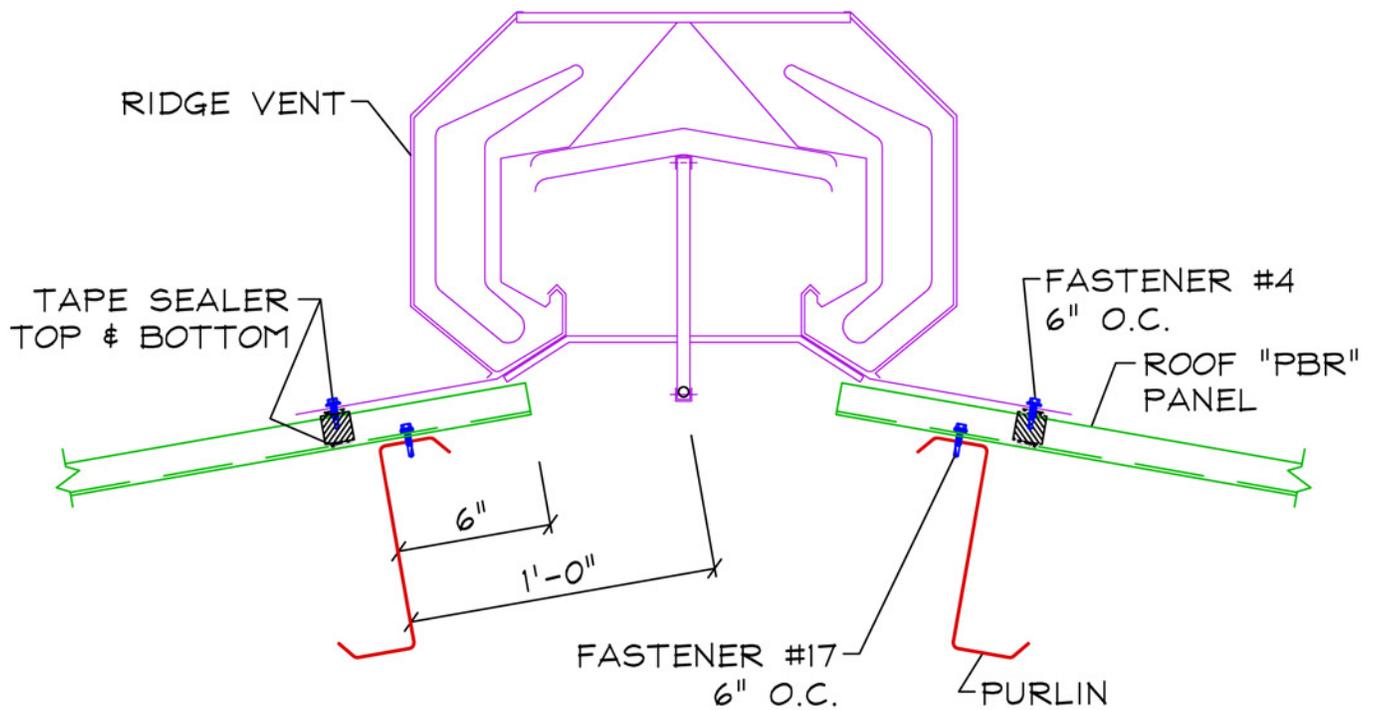


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI07 - EXPOSED FASTENER ROOF PANEL - 12"x10' RIDGE VENTILATOR

INSULATION NOT SHOWN

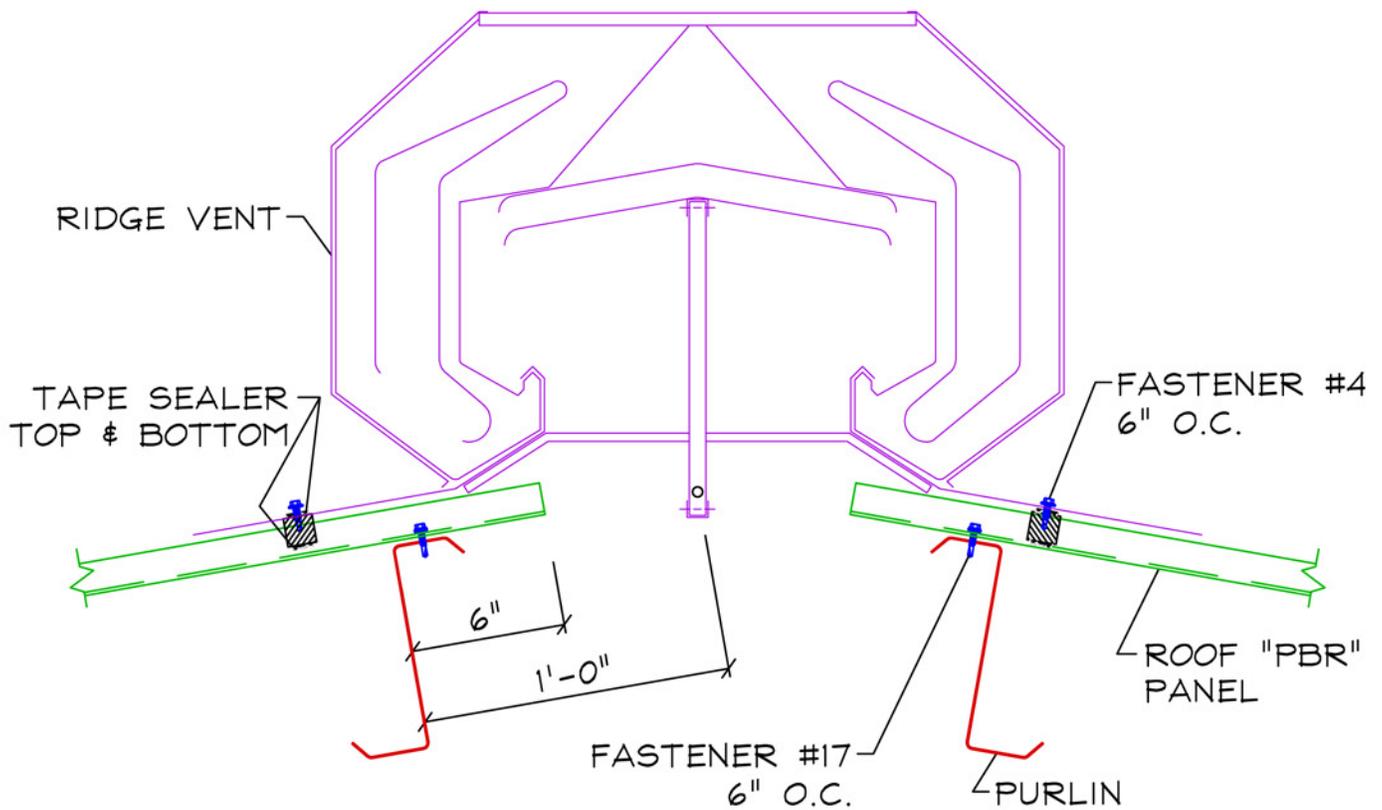


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI08 - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

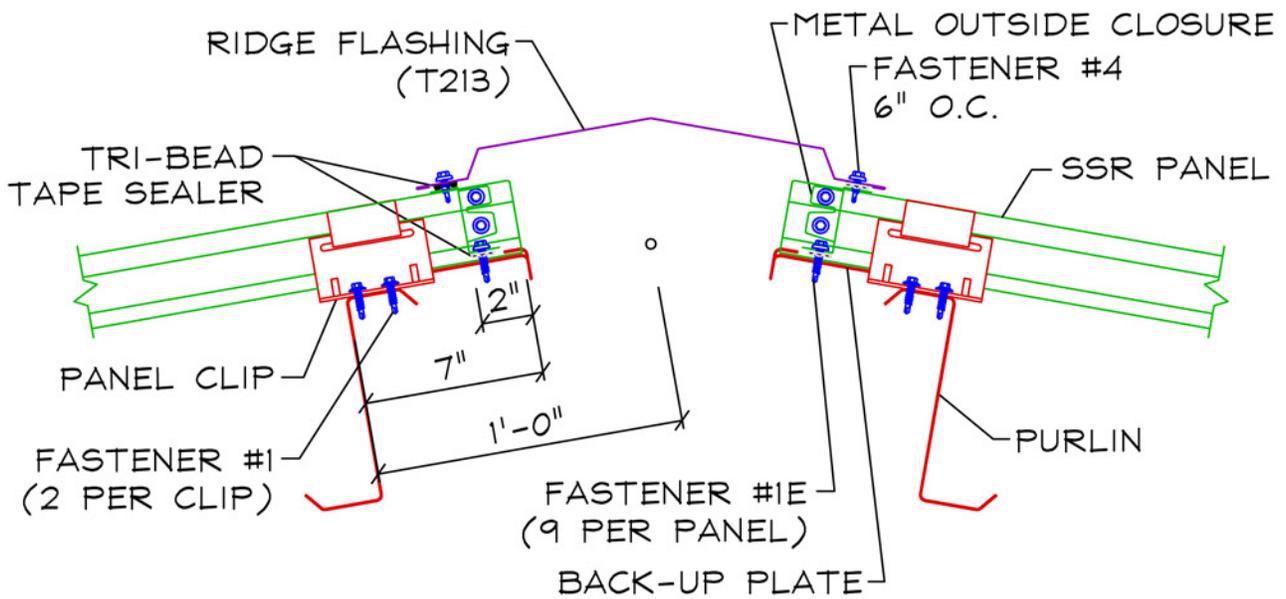


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI09 - HIP - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

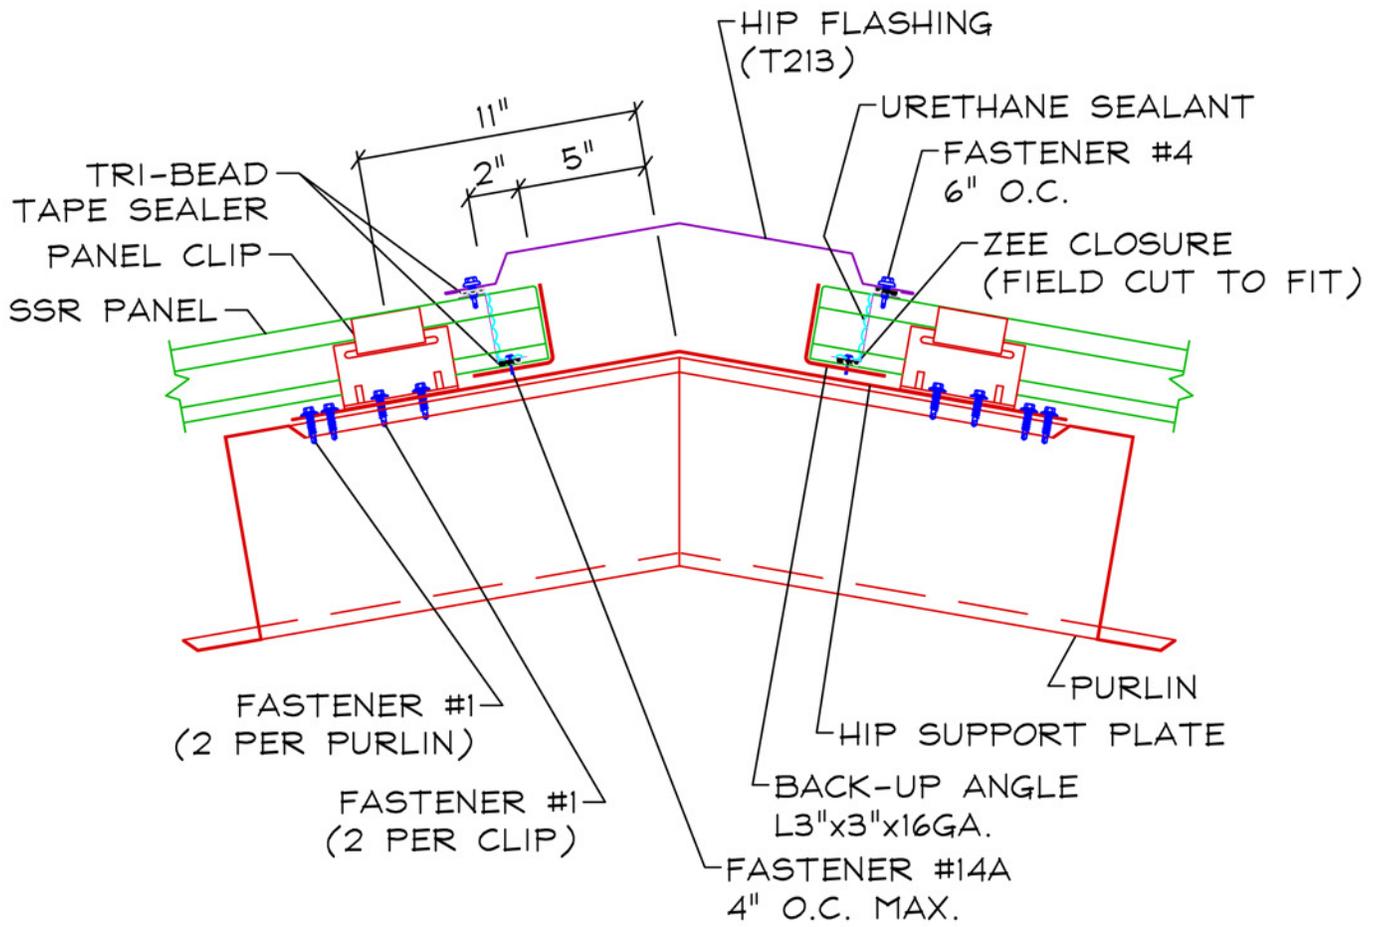

ROOF SLOPE / HIP FLASHING ANGLE											
1:12	2:12	3:12	4:12	5:12	6:12	7:12	8:12	9:12	10:12	11:12	12:12
173°	166°	160°	154°	148°	143°	138°	133°	129°	126°	123°	120°

NOTES:


1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI10 - TRAPEZOIDAL ROOF PANEL - LOW PROFILE VENT (COR-A-VENT)

LOW SYSTEM

INSULATION NOT SHOWN

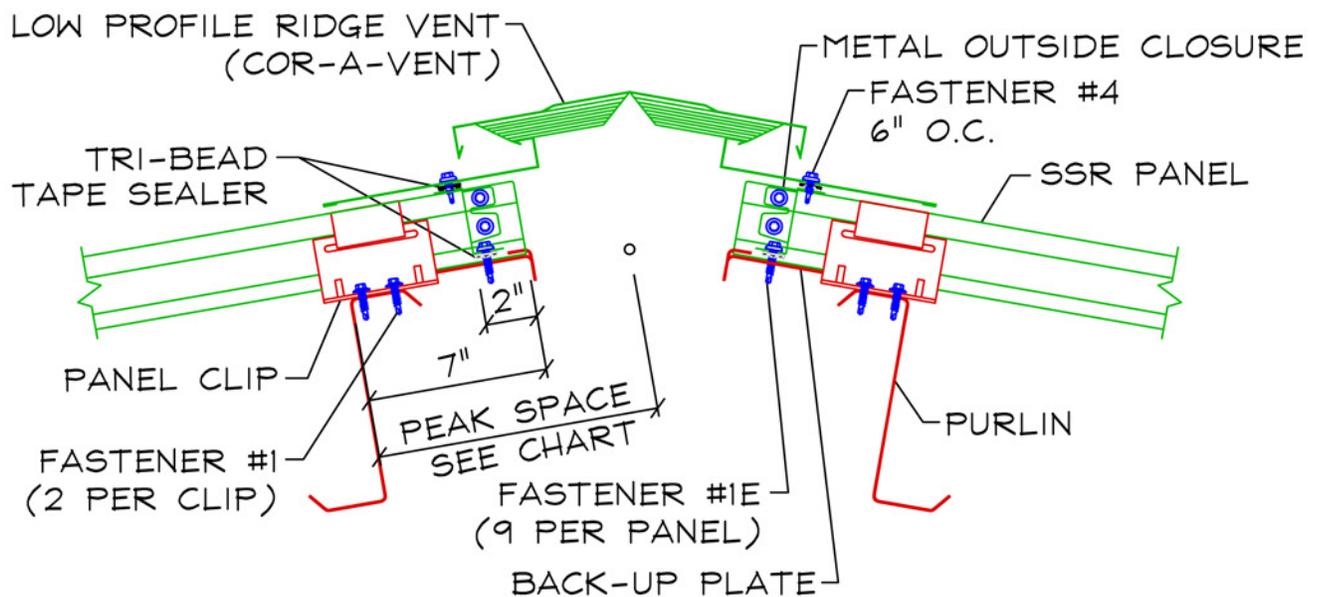

PEAK PURLIN SPACE	
PITCH	PEAK SPACE
1:12	11"
2:12	10 9/16"
3:12	10 1/16"
4:12	9 5/8"
5:12	9 3/16"
6:12	8 7/8"

NOTES:


- 1) USE ONE SPLICE KIT AT EACH VENT SPLICE.
- 2) USE ONE END CAP AT EACH TERMINATING END.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI11 - TRAPEZOIDAL ROOF PANEL - LOW PROFILE VENT (COR-A-VENT)

HIGH SYSTEM

INSULATION NOT SHOWN

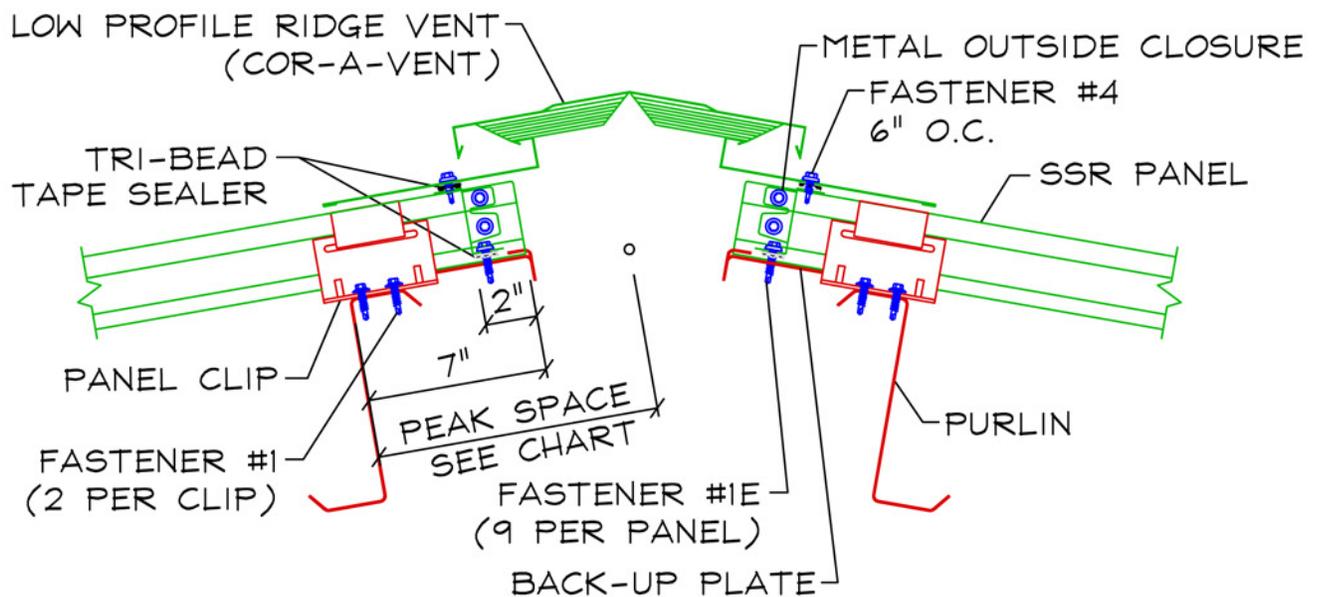

PEAK PURLIN SPACE	
PITCH	PEAK SPACE
1:12	10 7/8"
2:12	10 3/8"
3:12	9 13/16"
4:12	9 5/16"
5:12	8 13/16"
6:12	8 3/8"


NOTES:

- 1) USE ONE SPLICE KIT AT EACH VENT SPLICE.
- 2) USE ONE END CAP AT EACH TERMINATING END.
- 3) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI12 - TRAPEZOIDAL ROOF PANEL - LOW PROFILE VENT (VENT MATERIAL)

INSULATION NOT SHOWN

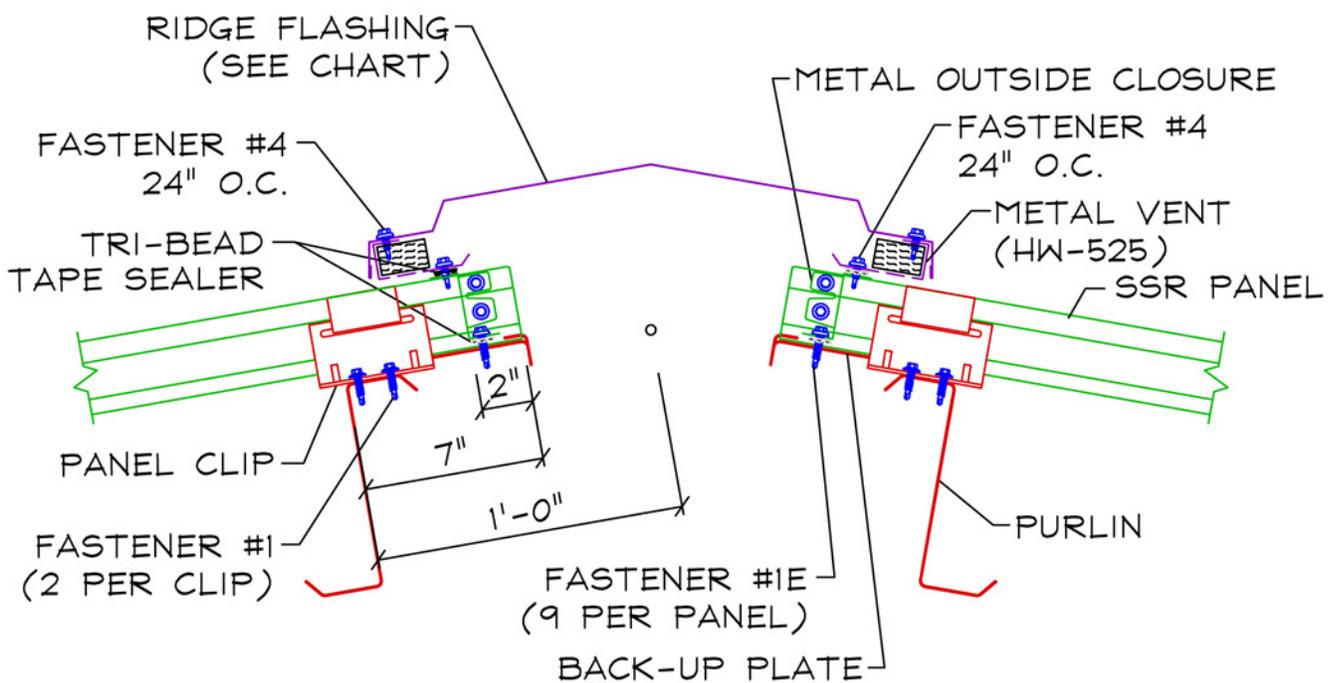


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI13 - TRAPEZOIDAL ROOF PANEL - LOW PROFILE VENT (PERFORATED)

INSULATION NOT SHOWN

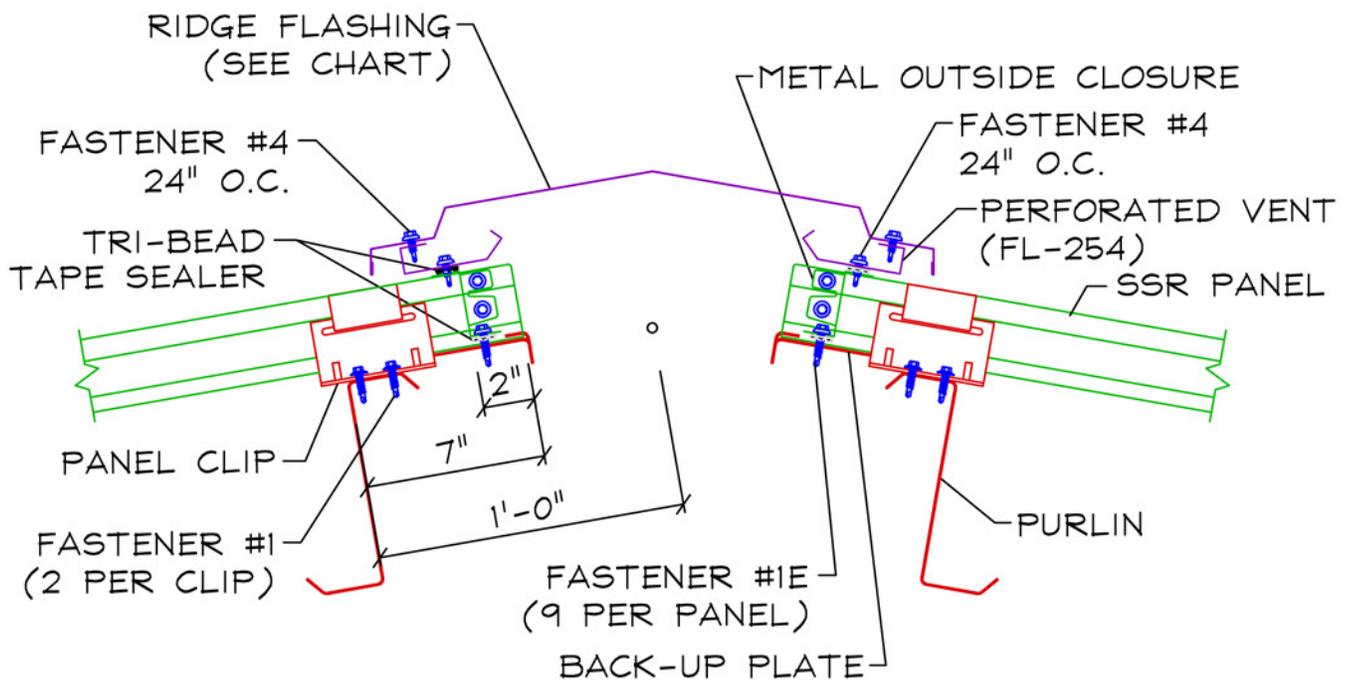


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI14 - TRAPEZOIDAL ROOF PANEL - 9"x10' RIDGE VENTILATOR

INSULATION NOT SHOWN

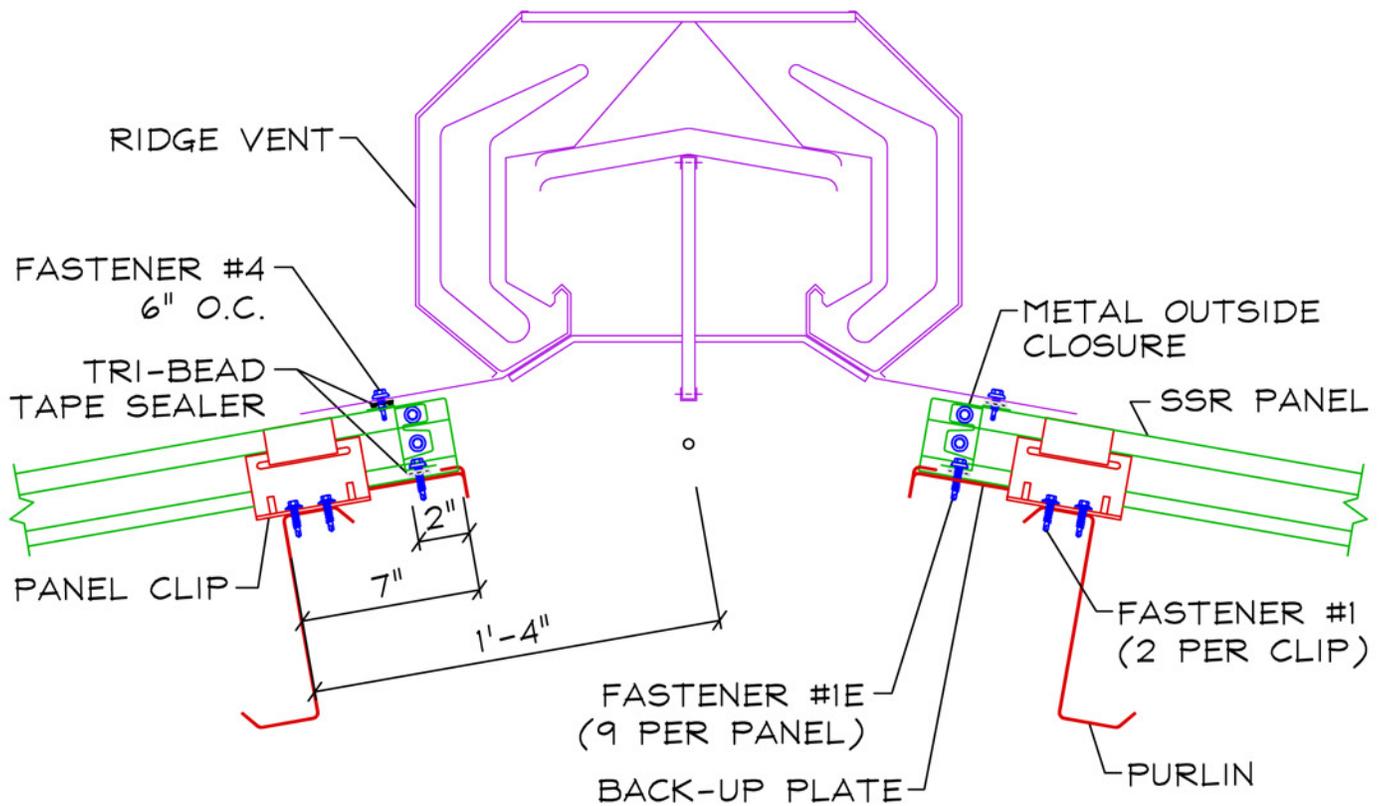


NOTES:

1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI15 - TRAPEZOIDAL ROOF PANEL - 12"x10' RIDGE VENTILATOR

INSULATION NOT SHOWN

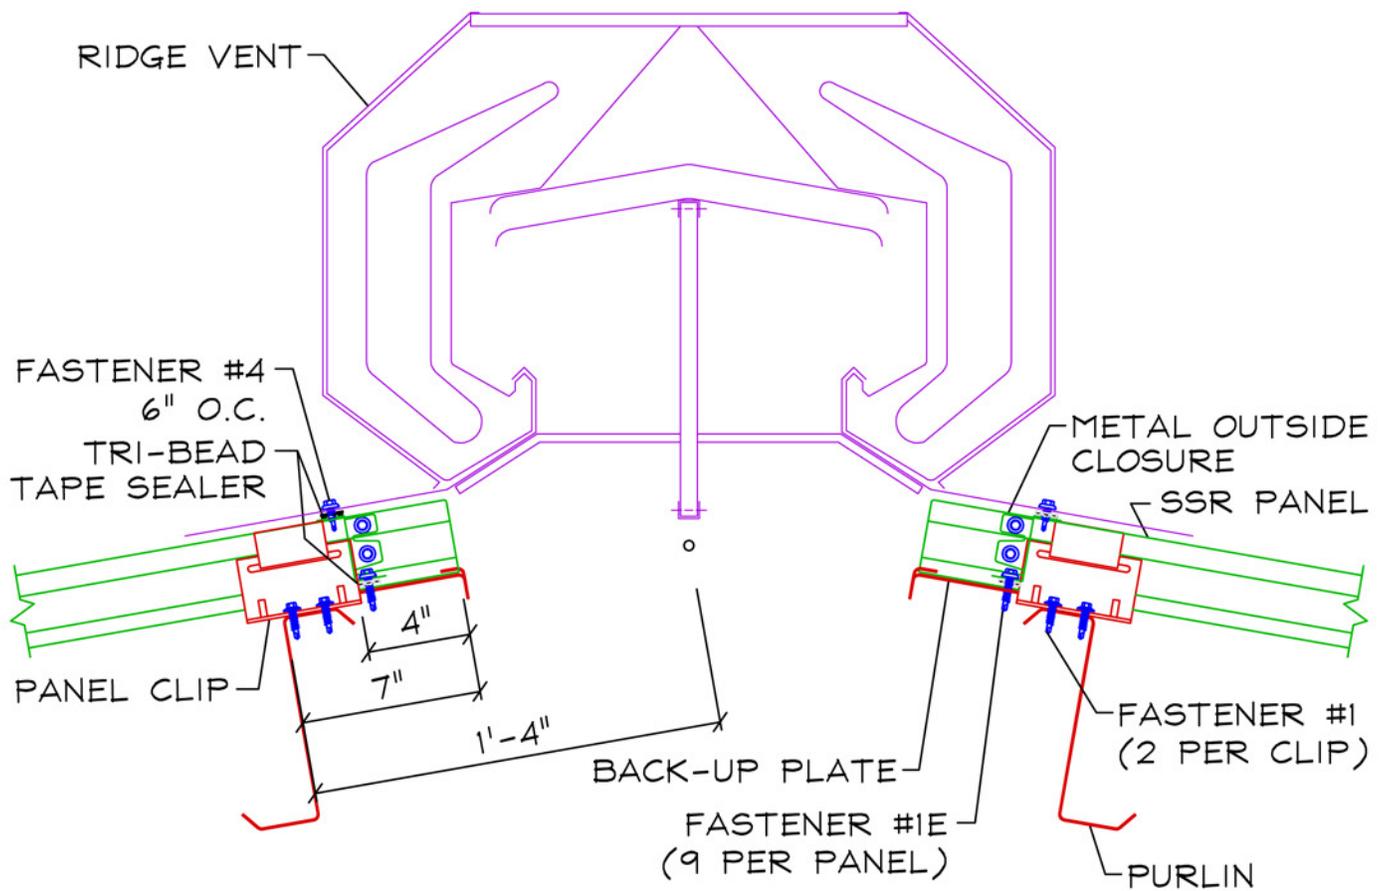


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI16 - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

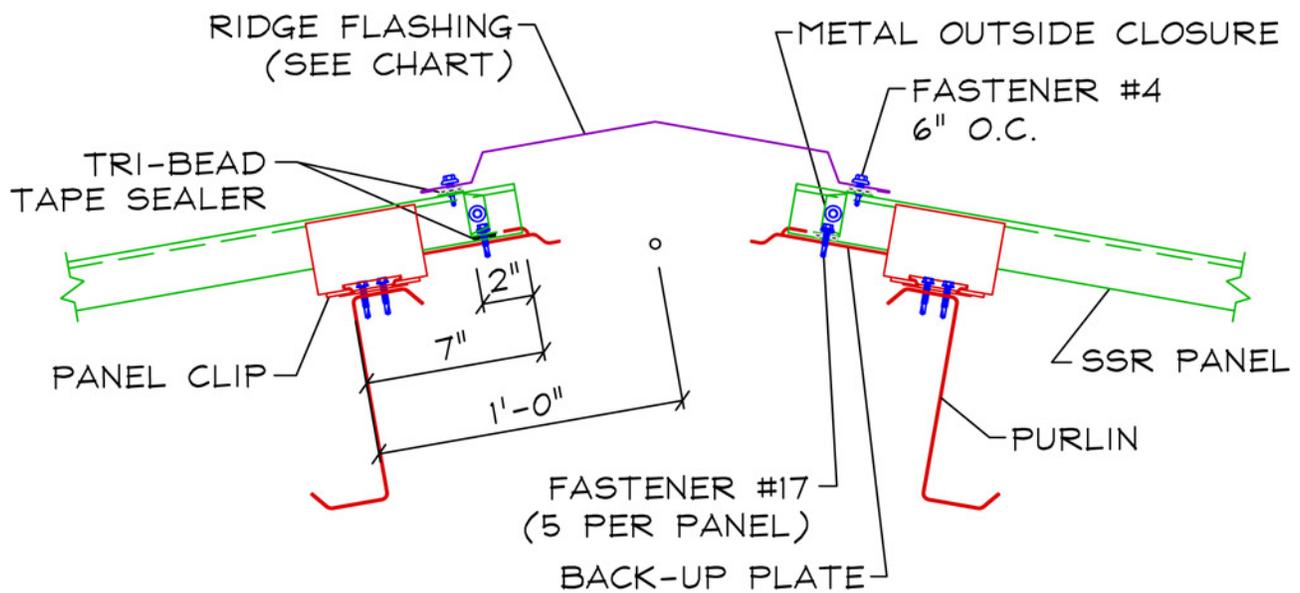


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI17 - HIP - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

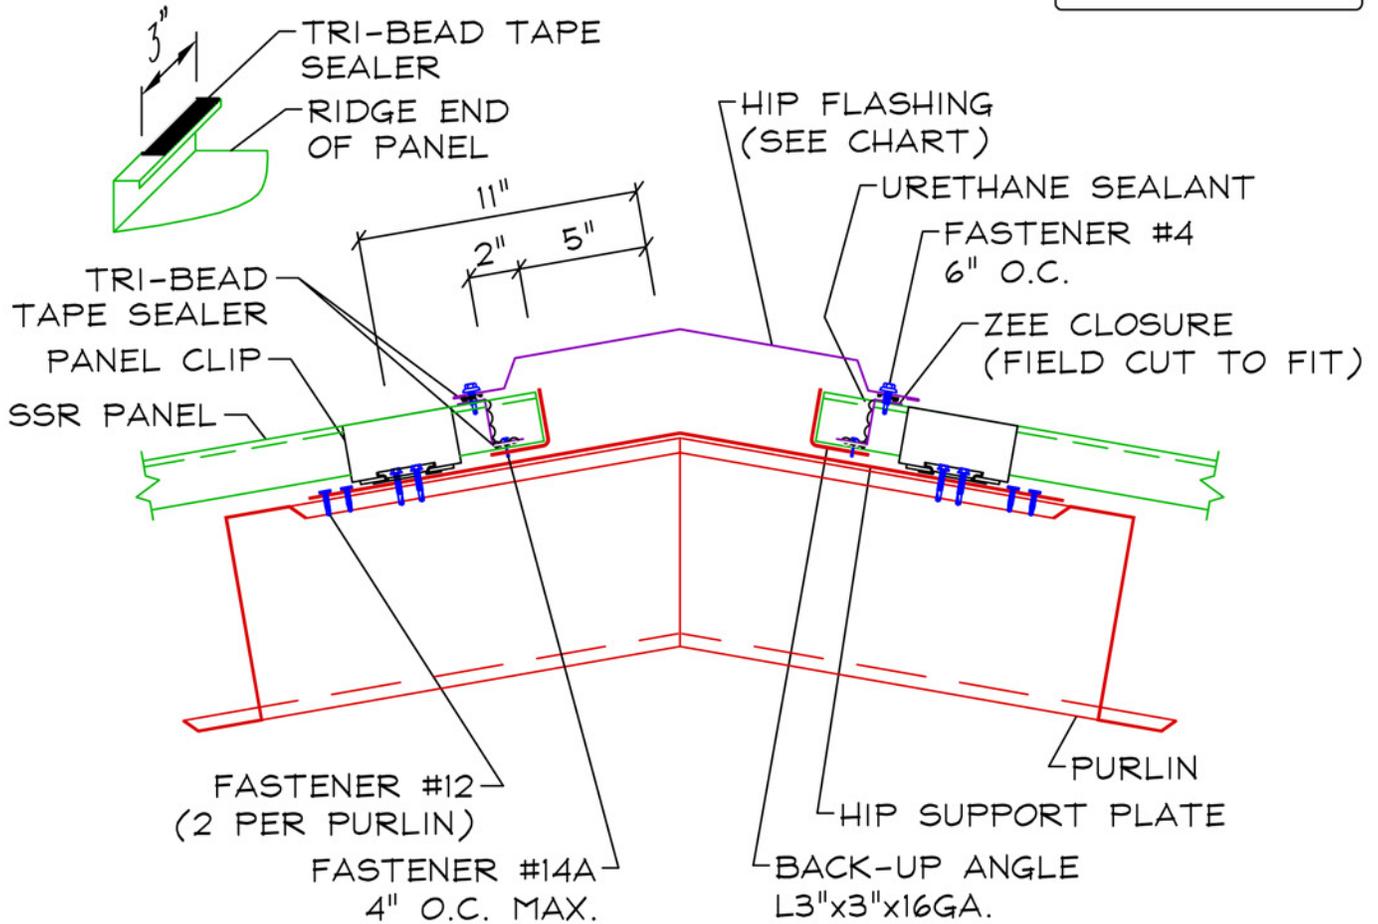

ROOF SLOPE / HIP FLASHING ANGLE											
1:12	2:12	3:12	4:12	5:12	6:12	7:12	8:12	9:12	10:12	11:12	12:12
173°	166°	160°	154°	148°	143°	138°	133°	129°	126°	123°	120°

NOTES:


- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI18 - VERTICAL LEG 180° OR 90° ROOF PANEL - LOW PROFILE VENT (COR-A-VENT)

LOW SYSTEM

INSULATION NOT SHOWN

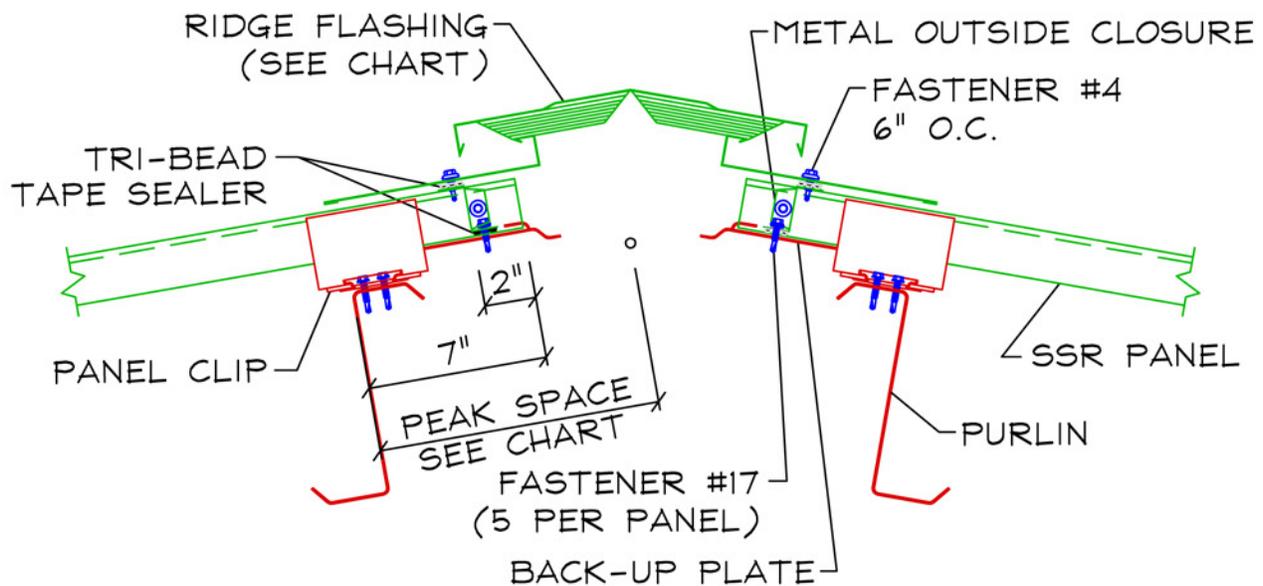

PEAK PURLIN SPACE	
PITCH	PEAK SPACE
1:12	11 1/8"
2:12	10 3/4"
3:12	10 5/16"
4:12	9 15/16"
5:12	9 9/16"
6:12	9 1/8"

NOTES:


- 1) USE ONE SPLICE KIT AT EACH VENT SPLICE.
- 2) USE ONE END CAP AT EACH TERMINATING END.
- 3) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 4) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI19 - VERTICAL LEG 180° OR 90° ROOF PANEL - LOW PROFILE VENT (COR-A-VENT)

HIGH SYSTEM

INSULATION NOT SHOWN

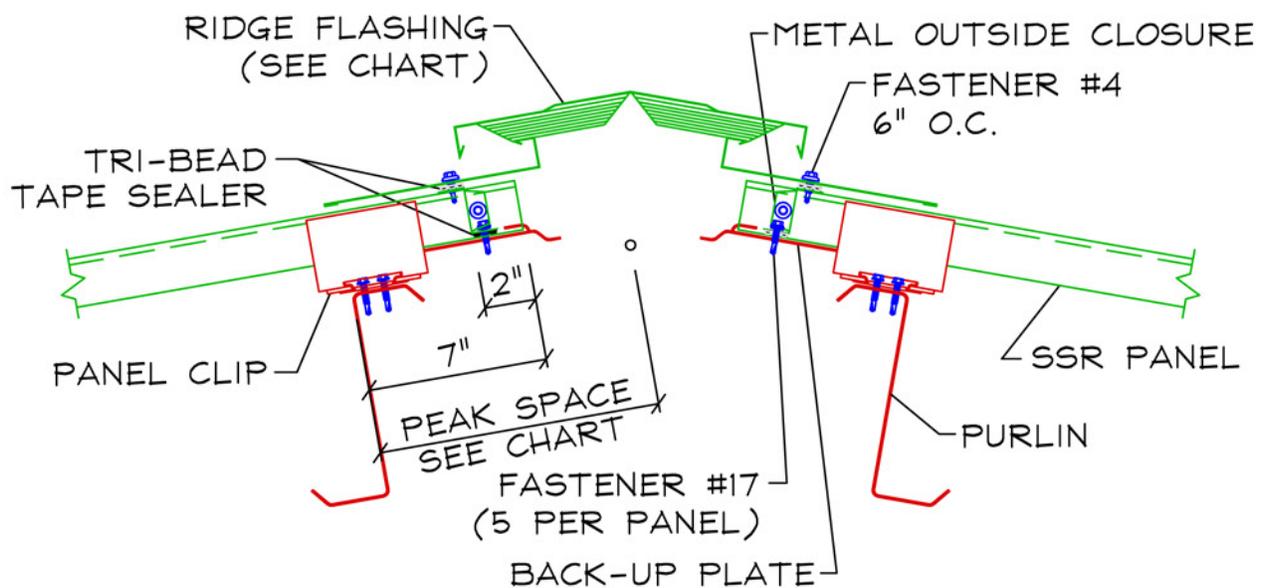

PEAK PURLIN SPACE	
PITCH	PEAK SPACE
1:12	11 1/16"
2:12	10 9/16"
3:12	10 1/8"
4:12	9 11/16"
5:12	9 1/4"
6:12	8 13/16"


NOTES:

- 1) USE ONE SPLICE KIT AT EACH VENT SPLICE.
- 2) USE ONE END CAP AT EACH TERMINATING END.
- 3) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 4) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI20 - VERTICAL LEG 180° OR 90° ROOF PANEL - LOW PROFILE VENT (VENT MATERIAL)

INSULATION NOT SHOWN

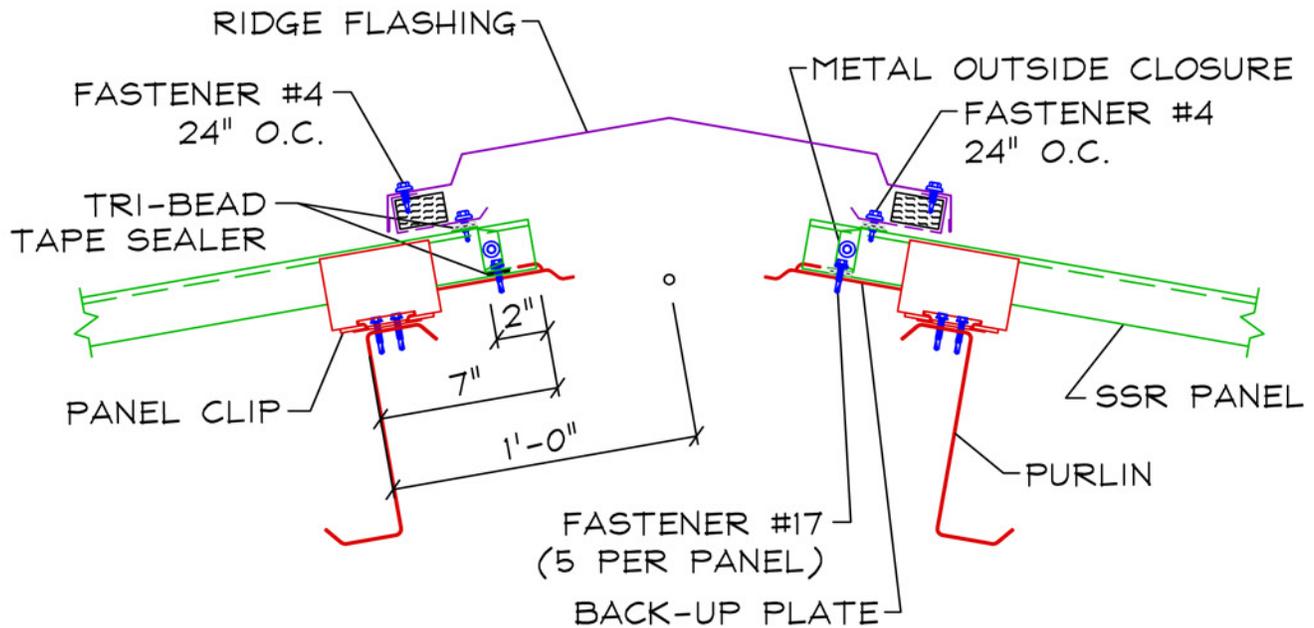


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI21 - VERTICAL LEG 180° OR 90° ROOF PANEL - LOW PROFILE VENT (PERFORATED)

INSULATION NOT SHOWN

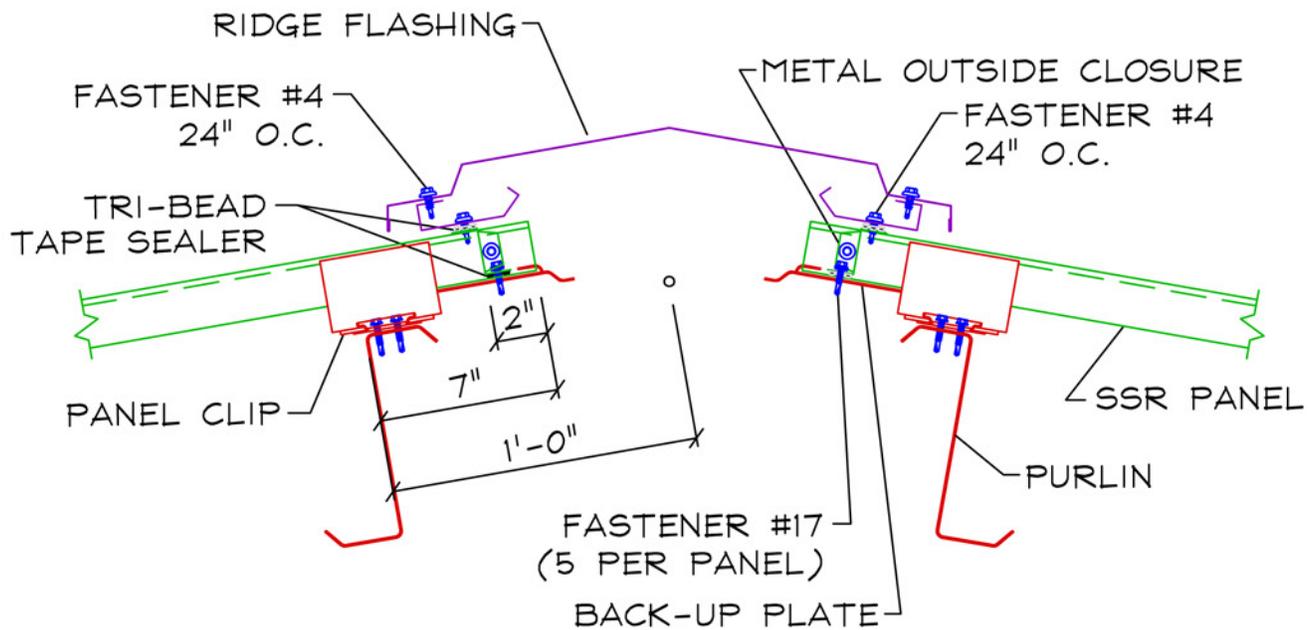


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI22 - VERTICAL LEG 180° OR 90° ROOF PANEL - 9"x10' RIDGE VENTILATOR

INSULATION NOT SHOWN

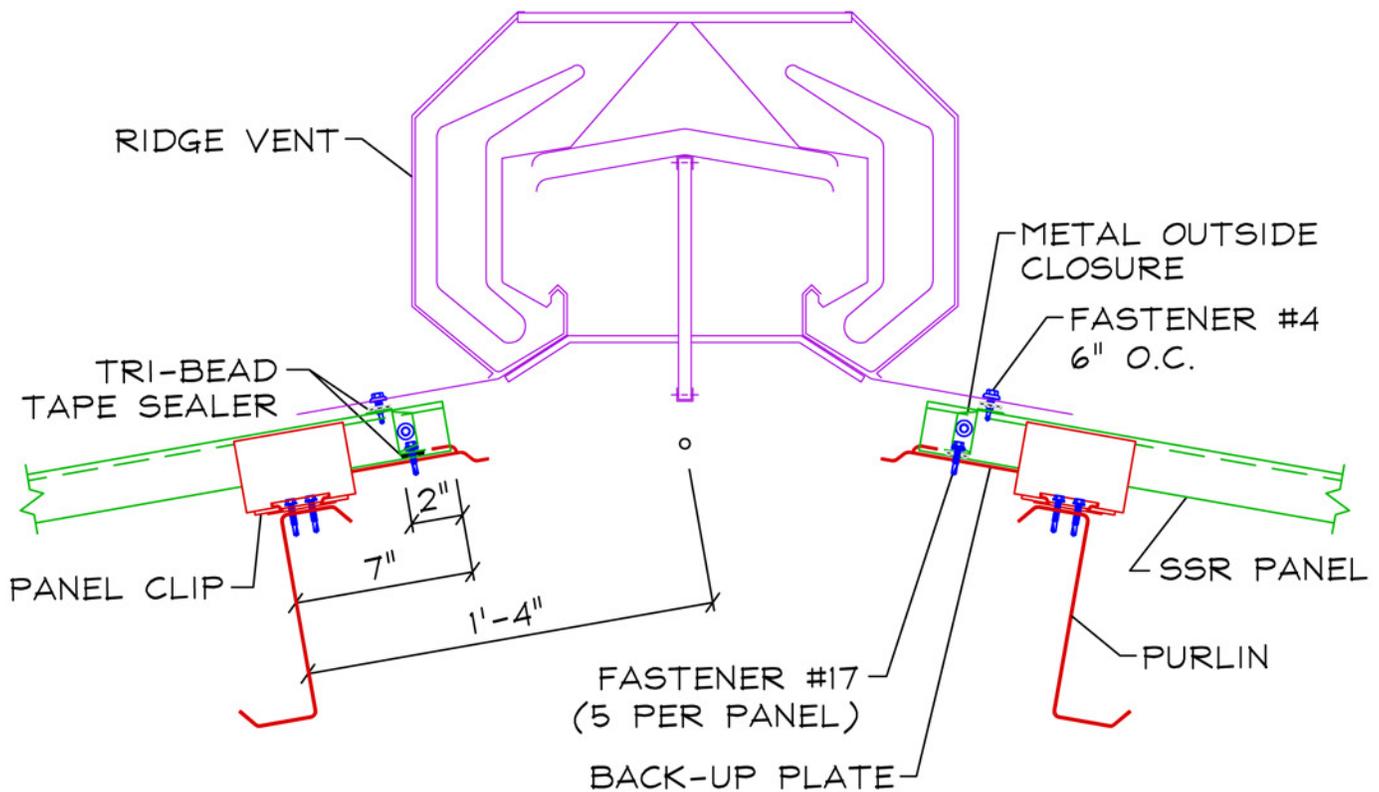


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Ridge

RI23 - VERTICAL LEG 180° OR 90° ROOF PANEL - 12"x10' RIDGE VENTILATOR

INSULATION NOT SHOWN

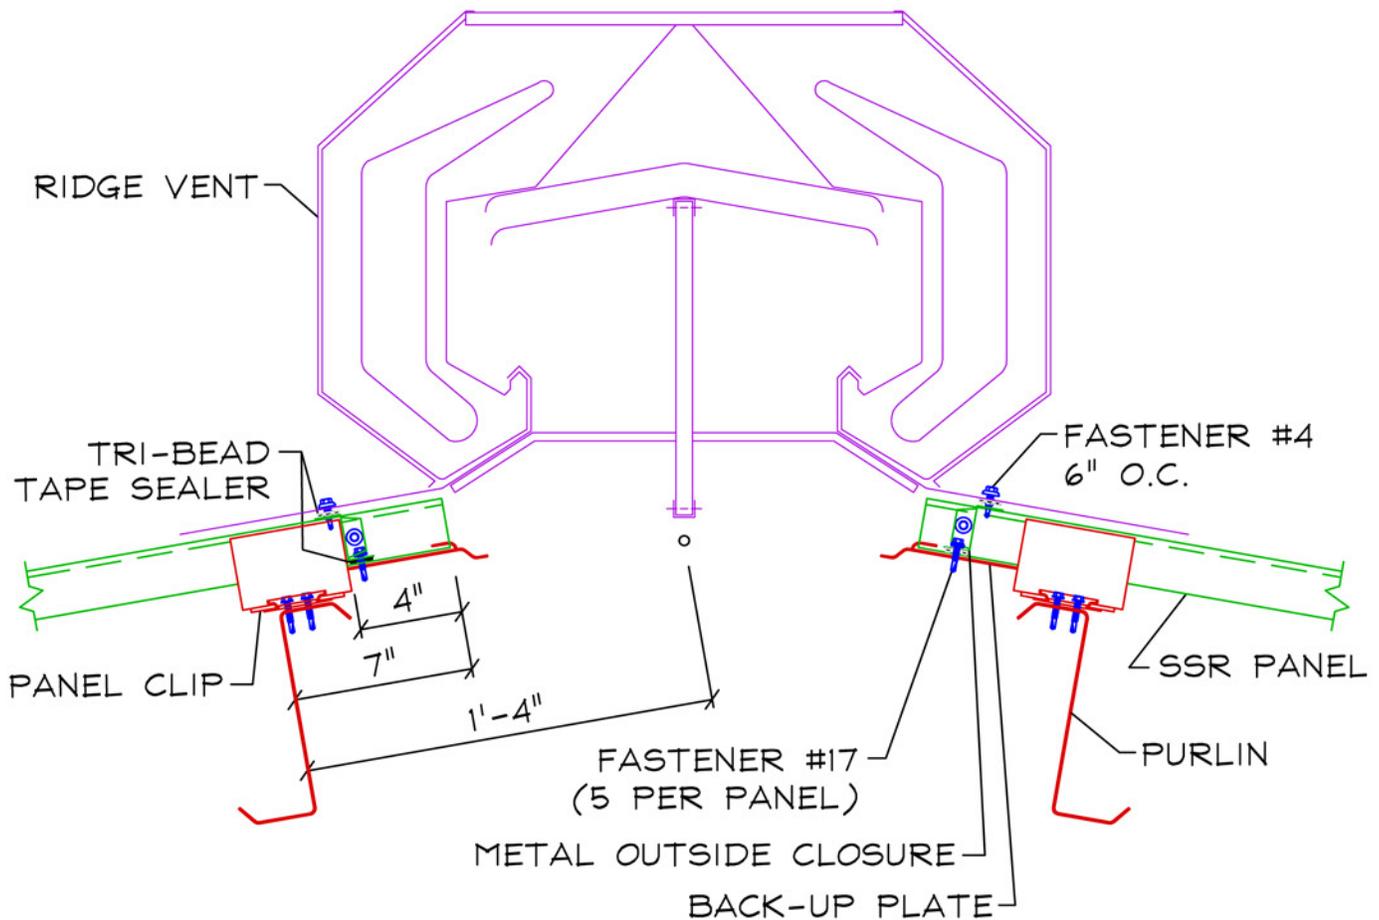


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Endlap

EL01 - EXPOSED FASTENER ROOF PANEL

INSULATION NOT SHOWN

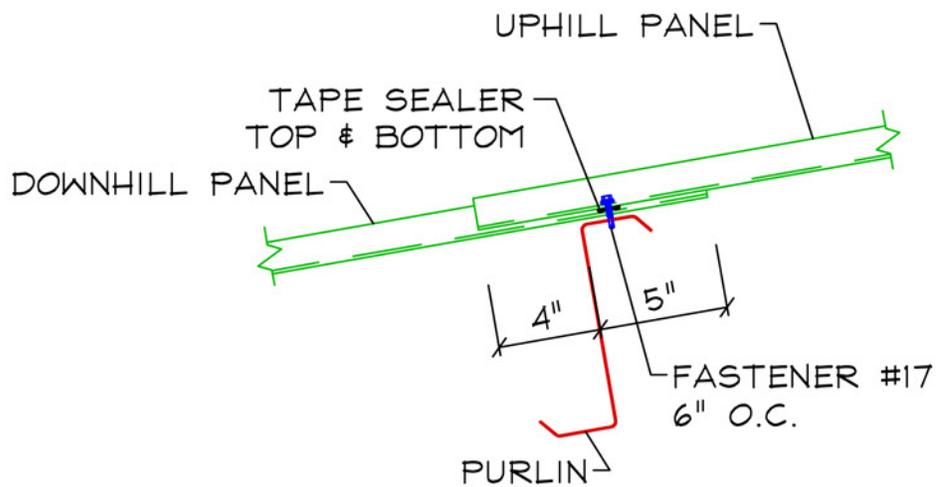



NOTES:

- 1) DOUBLE FACE TAPE (IF REQUIRED) FURNISHED BY INSULATION PROVIDER.

Endlap

EL02 - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

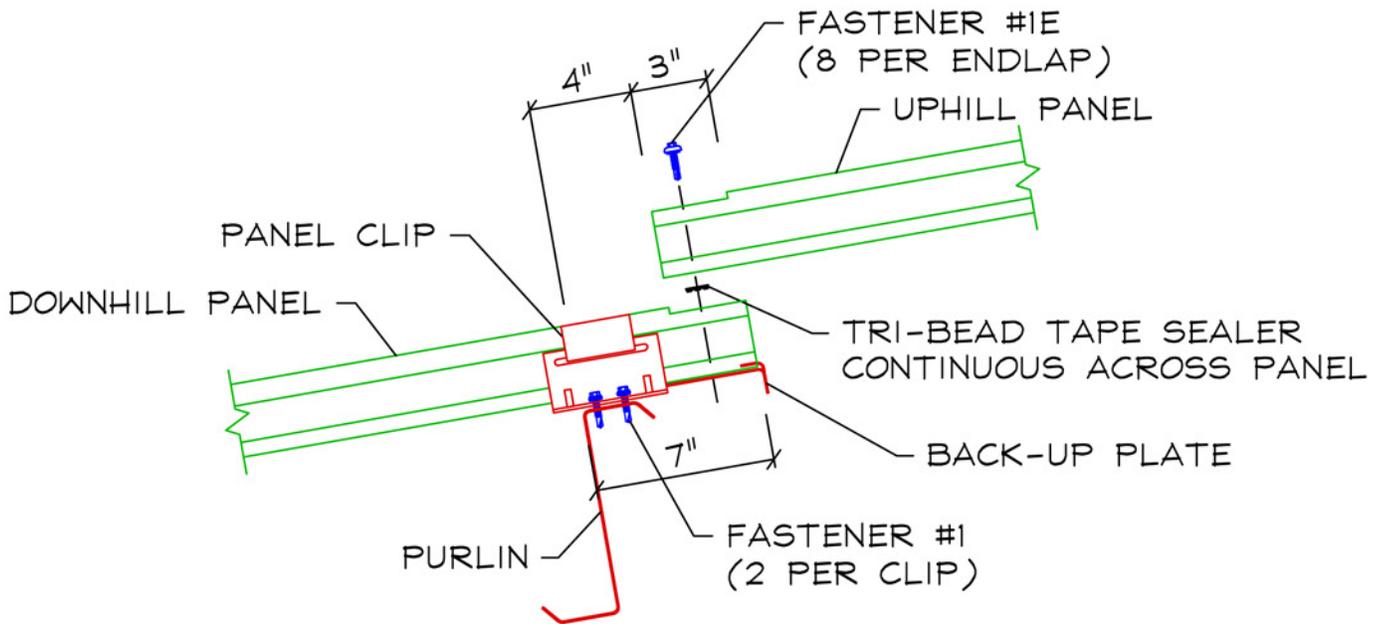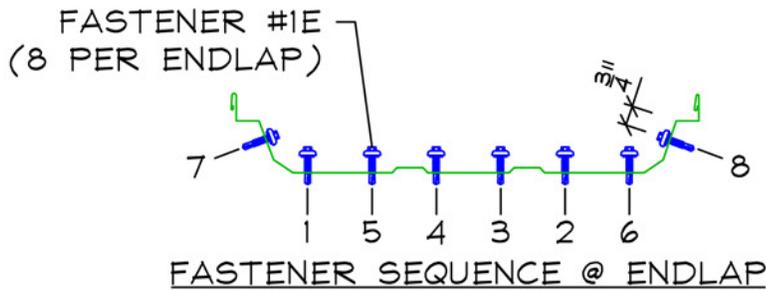



NOTES:

- 1) DOUBLE FACE TAPE (IF REQUIRED) FURNISHED BY INSULATION PROVIDER.

Endlap

EL03 - TRAPEZOIDAL ROOF PANEL - MID FIXED CONDITION (FLOATING)

INSULATION NOT SHOWN

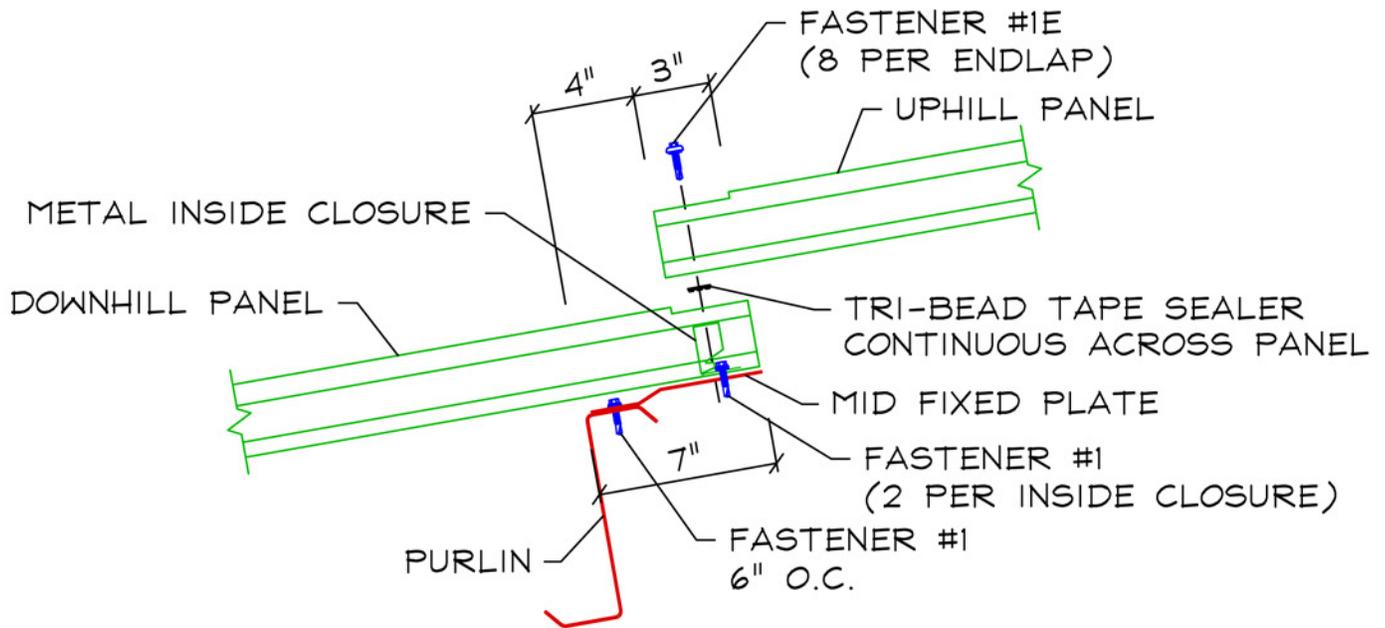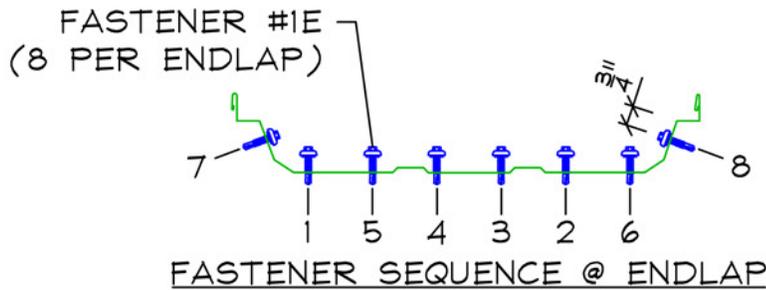


NOTES:

- 1) DOUBLE FACE TAPE (IF REQUIRED) FURNISHED BY INSULATION PROVIDER.

Endlap

EL04 - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

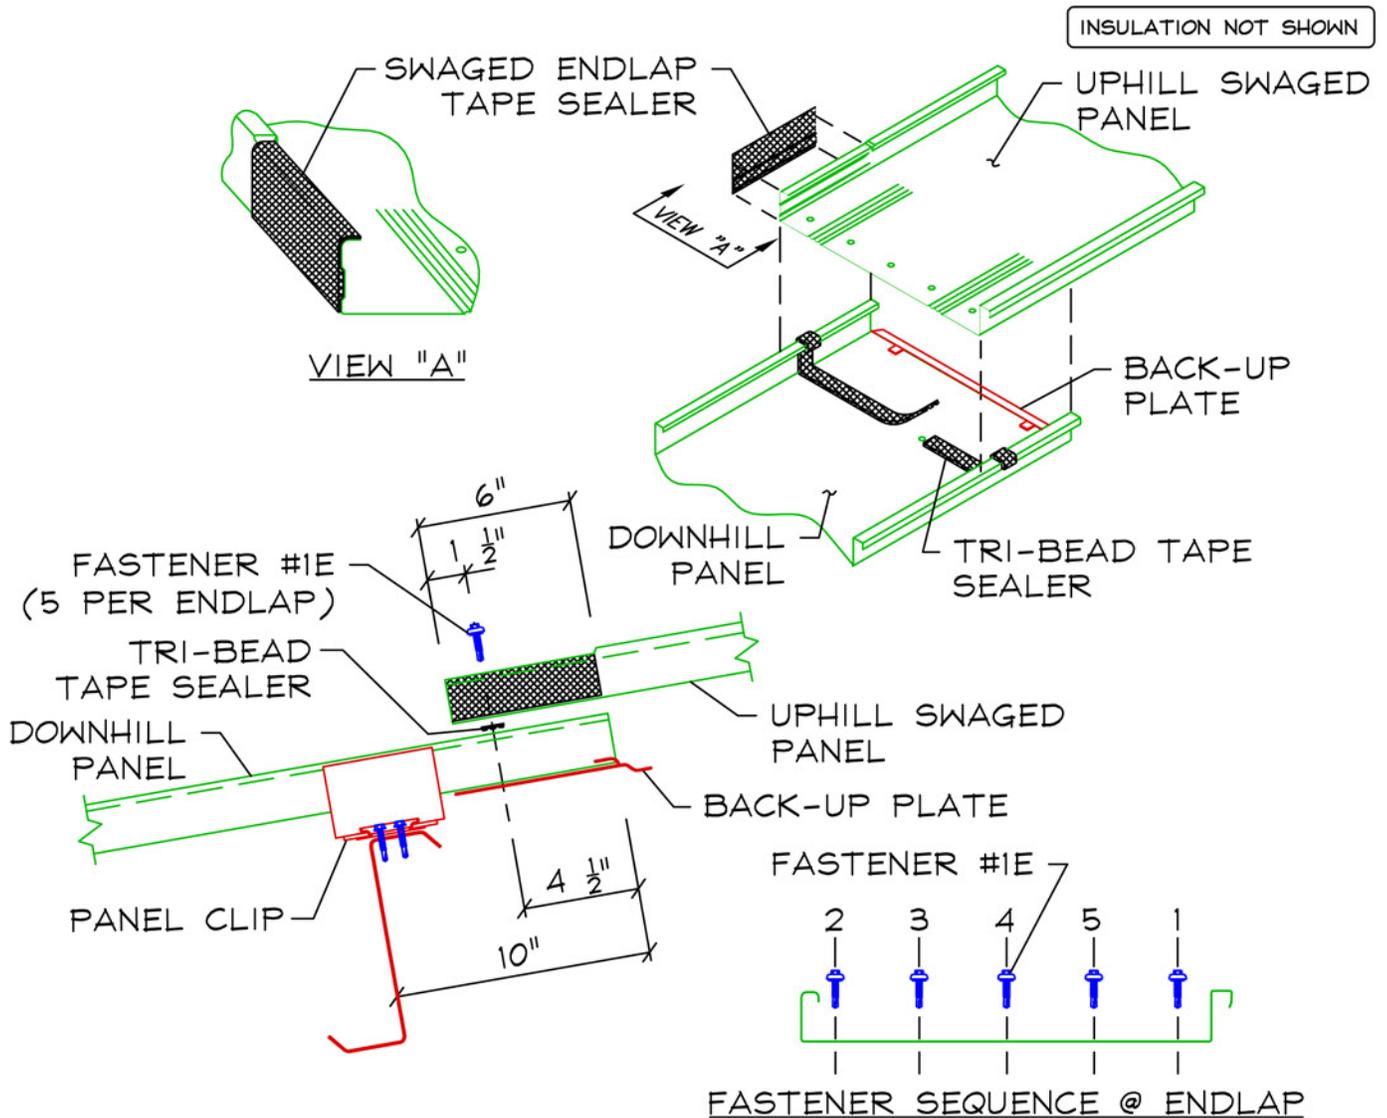


NOTES:

- 1) DOUBLE FACE TAPE (IF REQUIRED) FURNISHED BY INSULATION PROVIDER.

Endlap

EL05 - VERTICAL LEG 180° OR 90° ROOF PANEL - MID FIXED CONDITION (FLOATING)

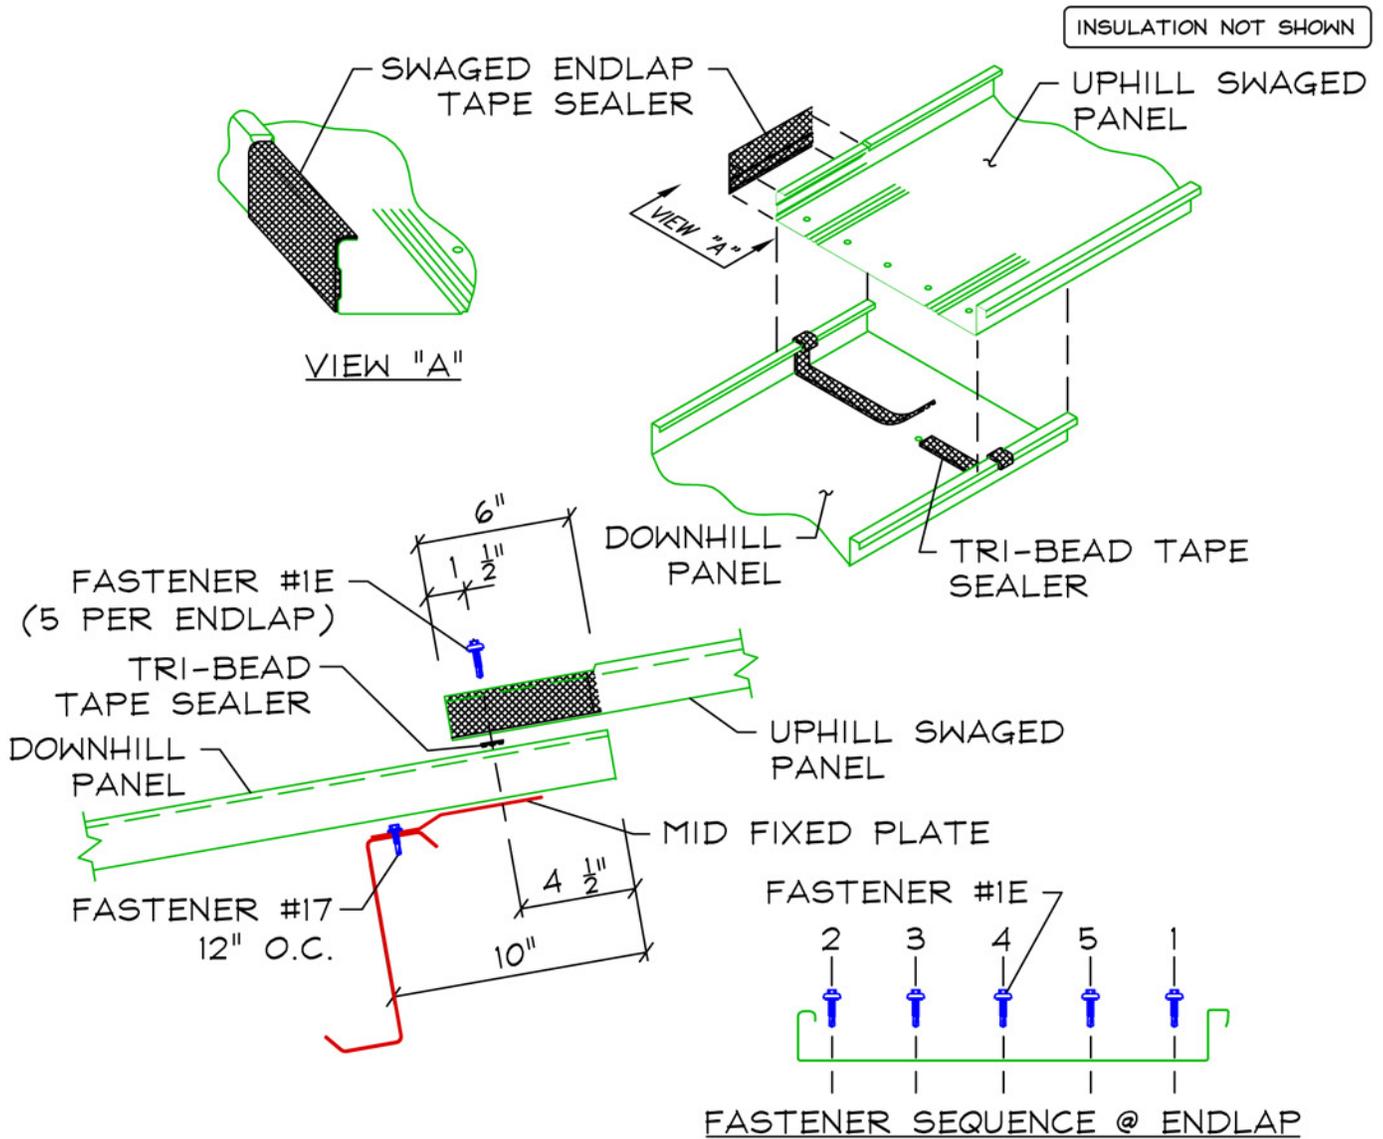


NOTES:

- 1) DOUBLE FACE TAPE (IF REQUIRED) FURNISHED BY INSULATION PROVIDER.


Tie-in

TI01 - HIGH SIDE EAVE TO SHEETED WALL

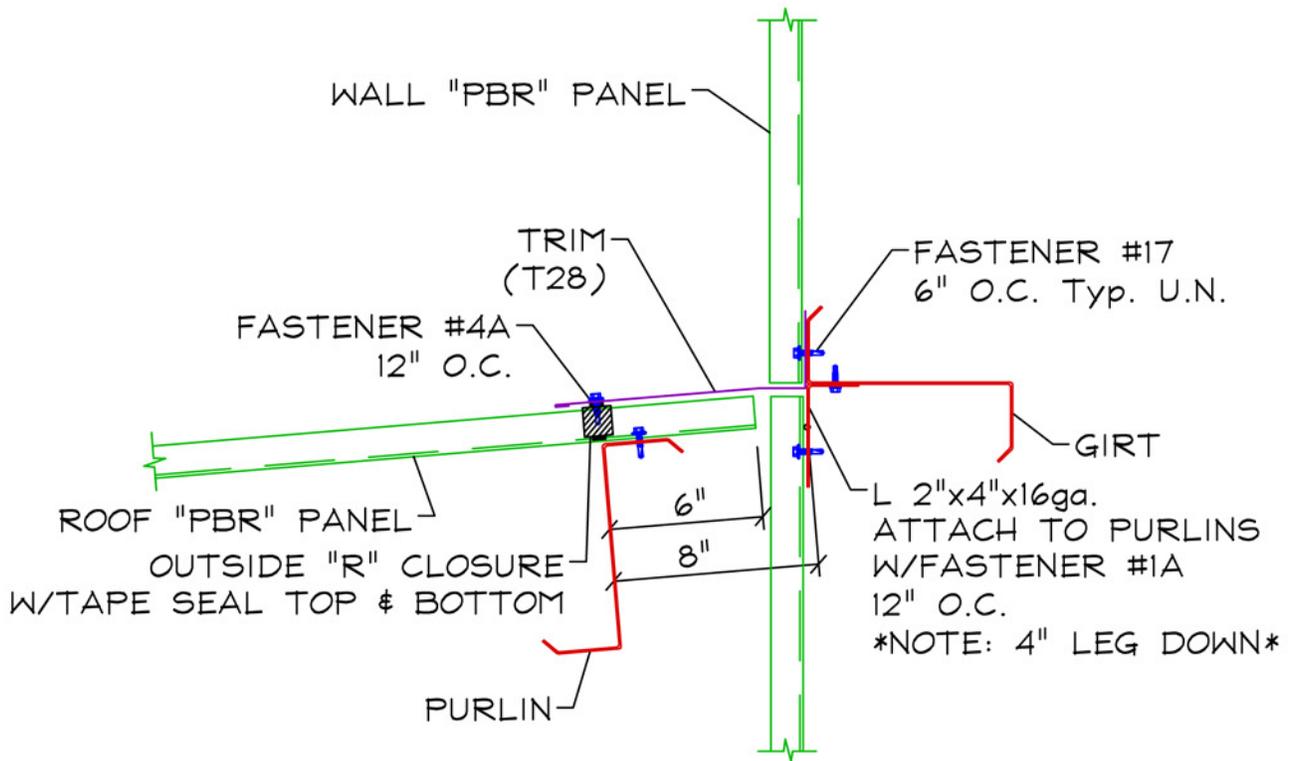


Tie-in

TI02 - HIGH SIDE EAVE TO OPEN WALL

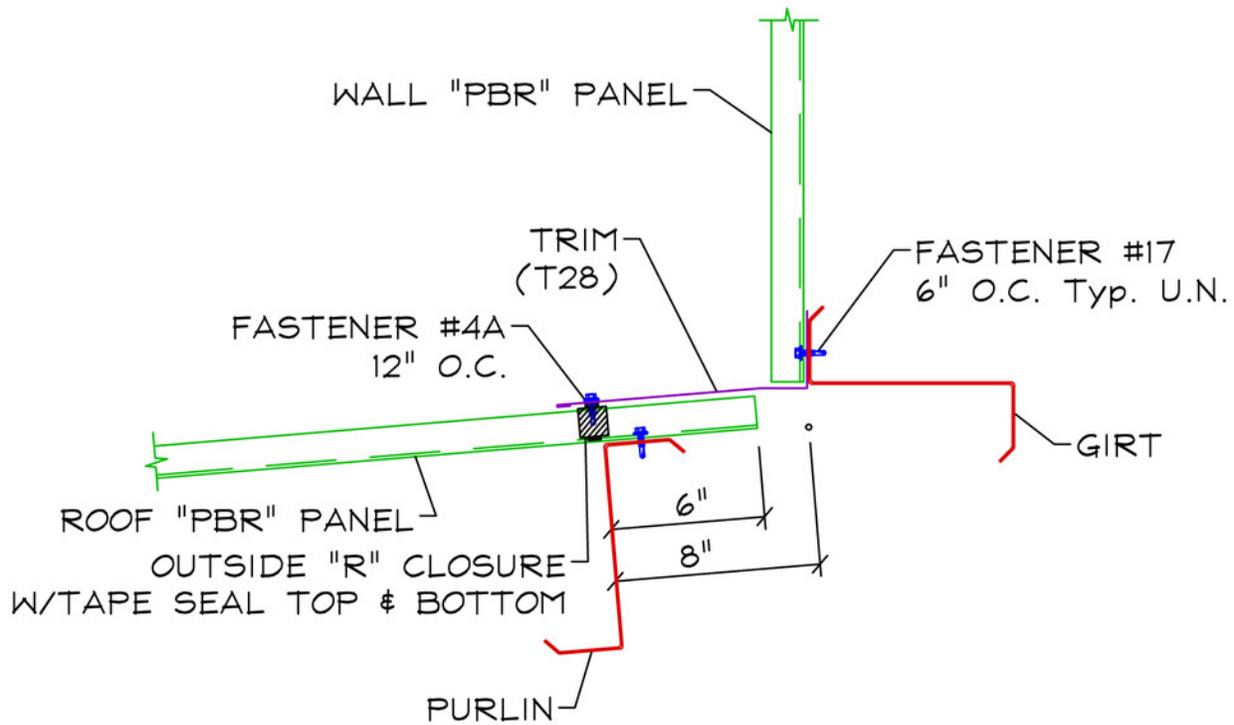


Tie-in

TI03 - ENDWALL TO SHEETED WALL

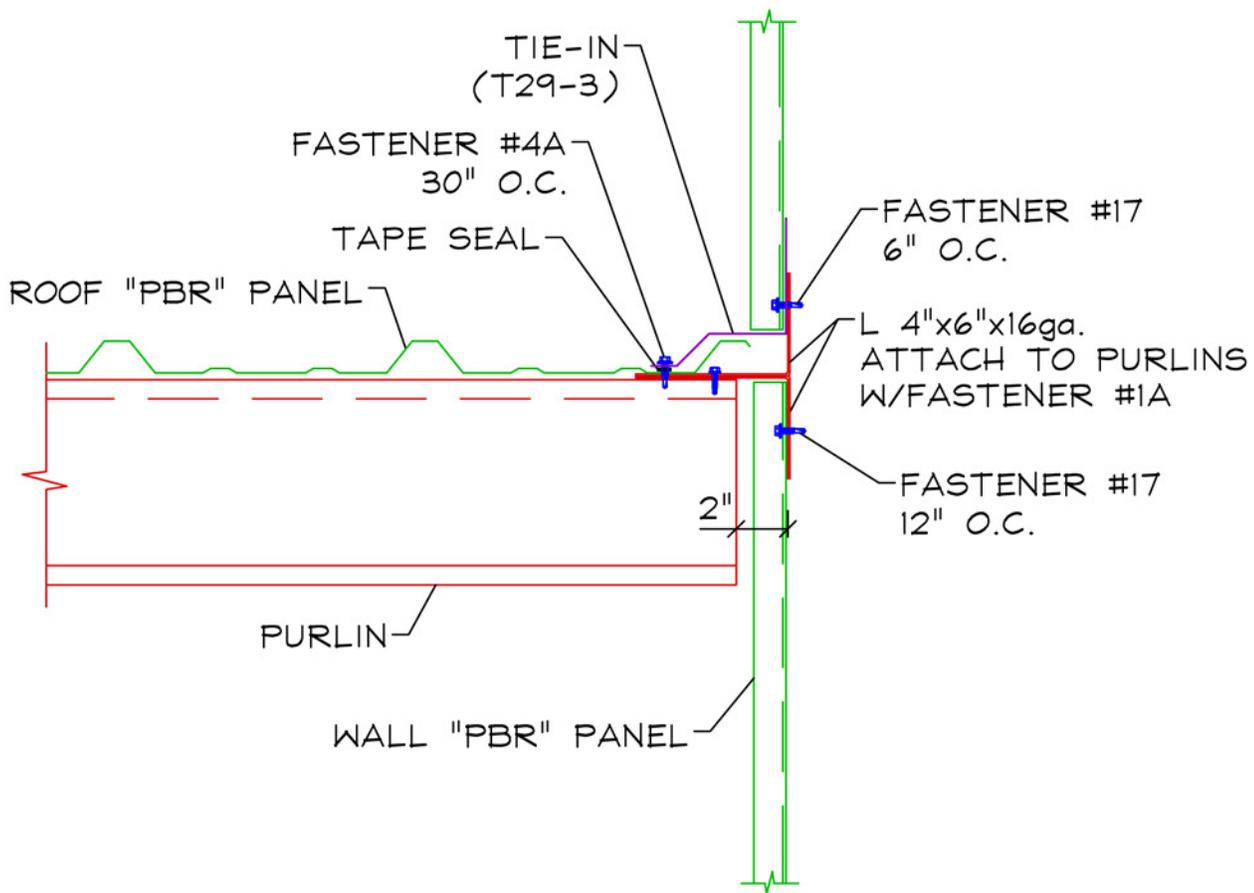

Tie-in

TI04 - ENDWALL TO ENDWALL - SAME EAVE HEIGHT

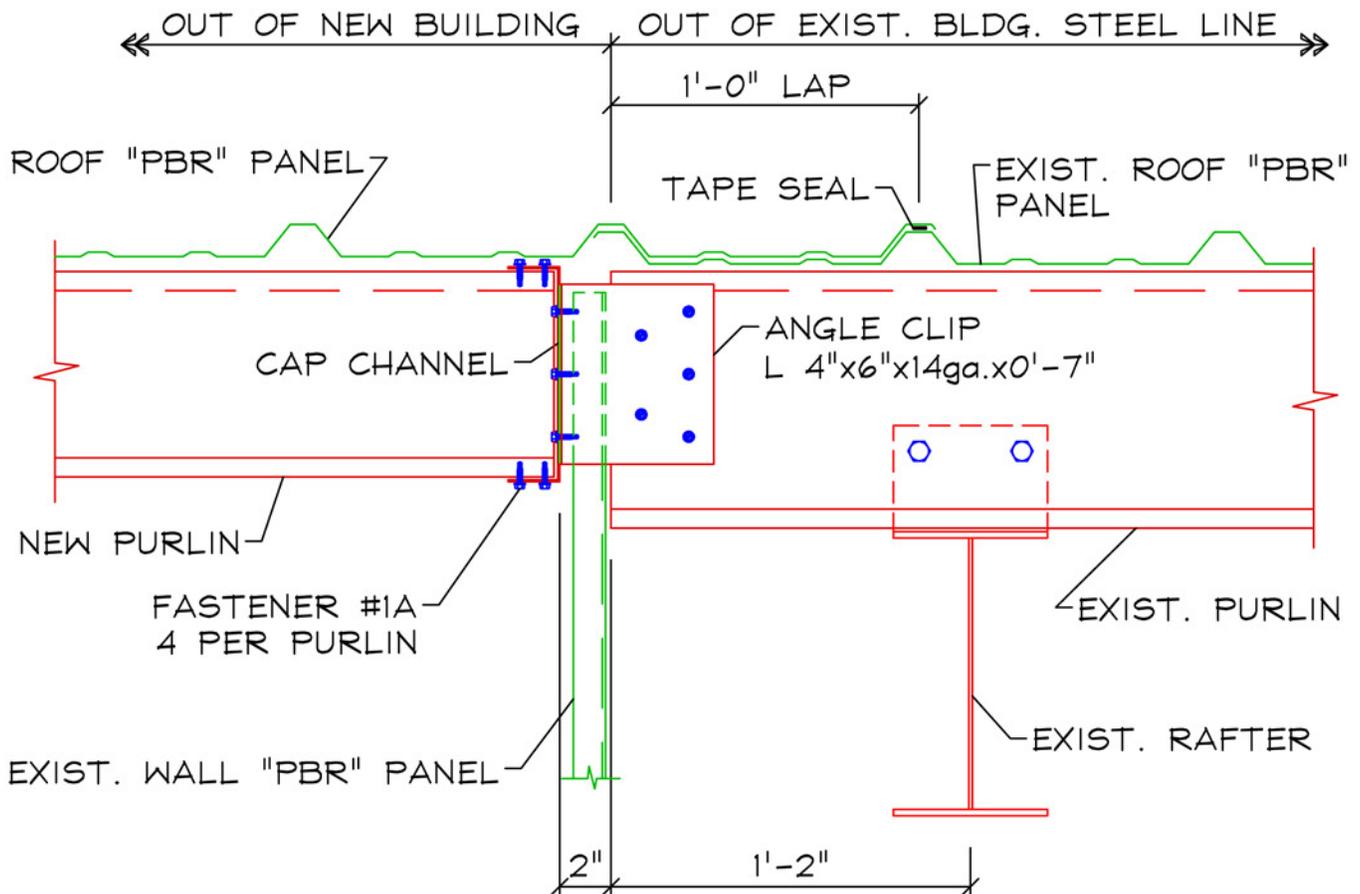


NOTES:

- 1) ERECTOR/CUSTOMER MUST REMOVE RAKE TRIM PRIOR TO BUILDING ERECTION.
- 2) ERECTOR/CUSTOMER MUST NOTCH EXIST. PANELS AND RAKE ANGLE TO ALLOW CLIP MK-ACI TO BE ATTACHED TO EXIST. PURLINS WITH (5) FASTENER #1A.

Tie-in

TI05 - HIGH SIDE EAVE TO WALL

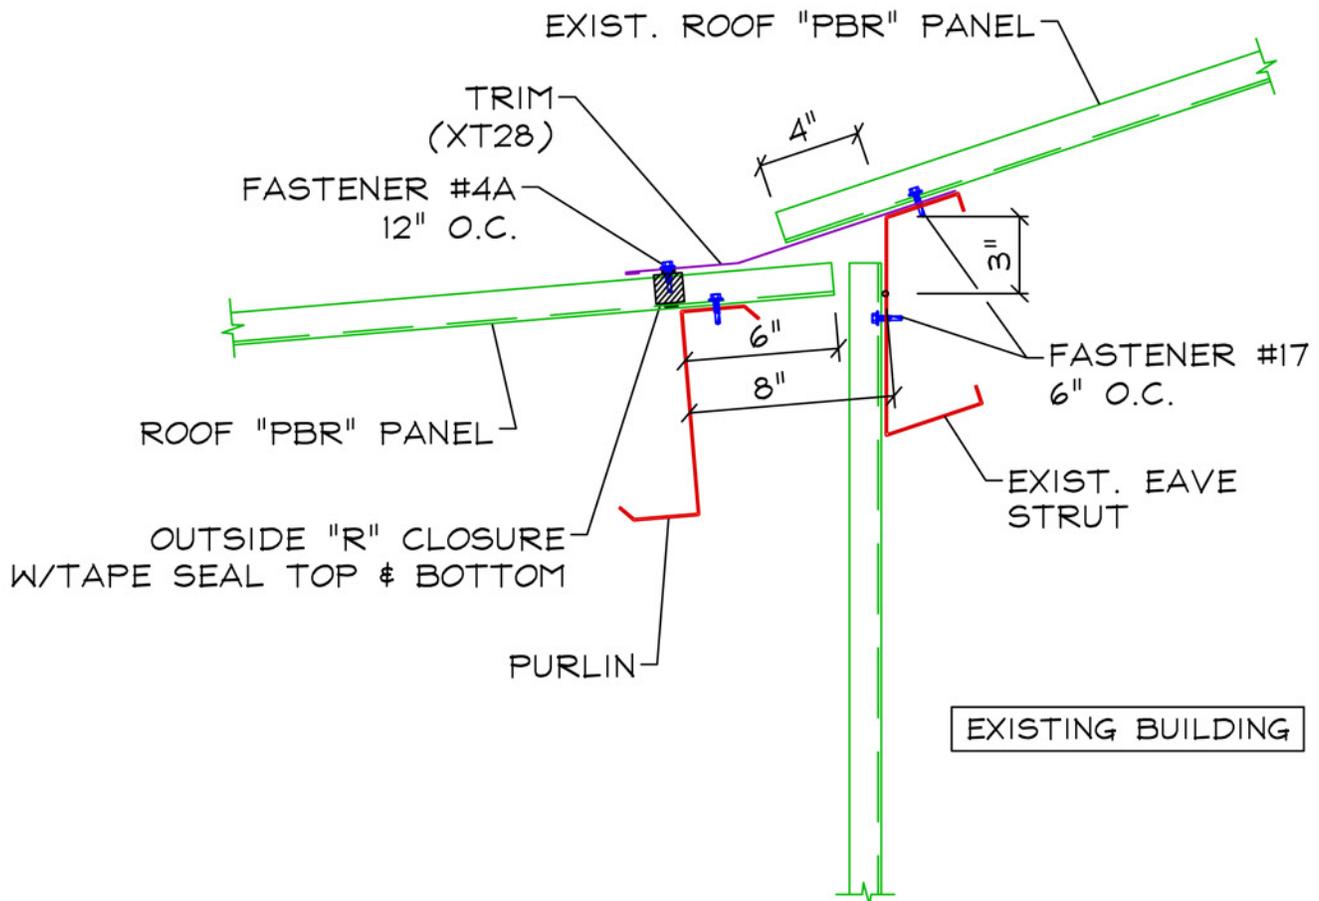


NOTES:

- 1) REMOVE EXISTING SCREWS FROM DECKING ATTACHED TO EAVE STRUTS SO XT28 CAN BE INSERTED. ONCE INSERTED, FASTEN BACK DOWN WITH NEW SCREWS PROVIDED.


Tie-in

TI06 - HIGH SIDE EAVE TO WALL W/SOFFIT

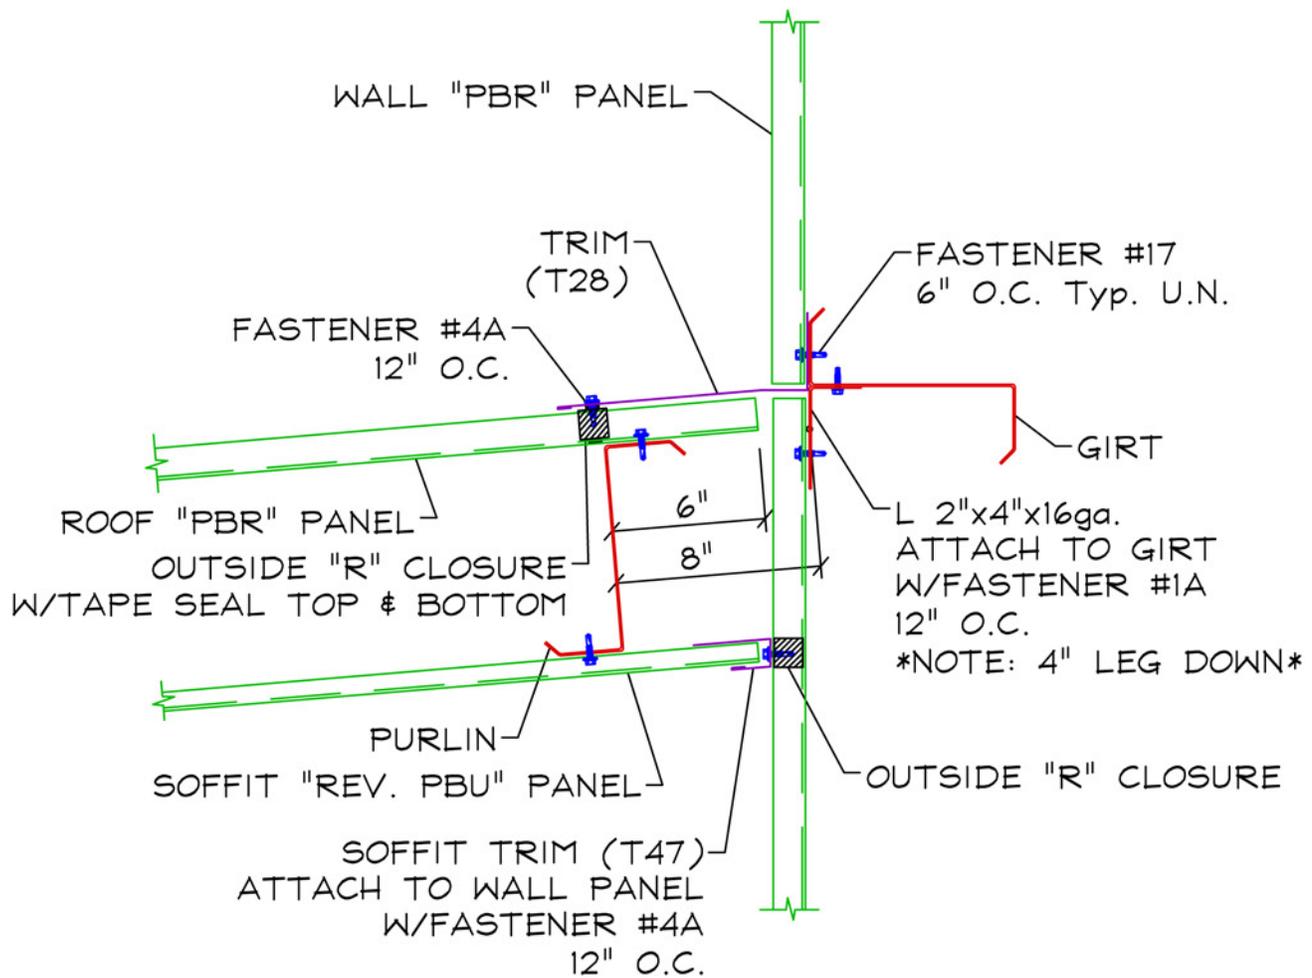

Tie-in

TI07 - SIDEWALL GIRT TO EXIST. BLDG.

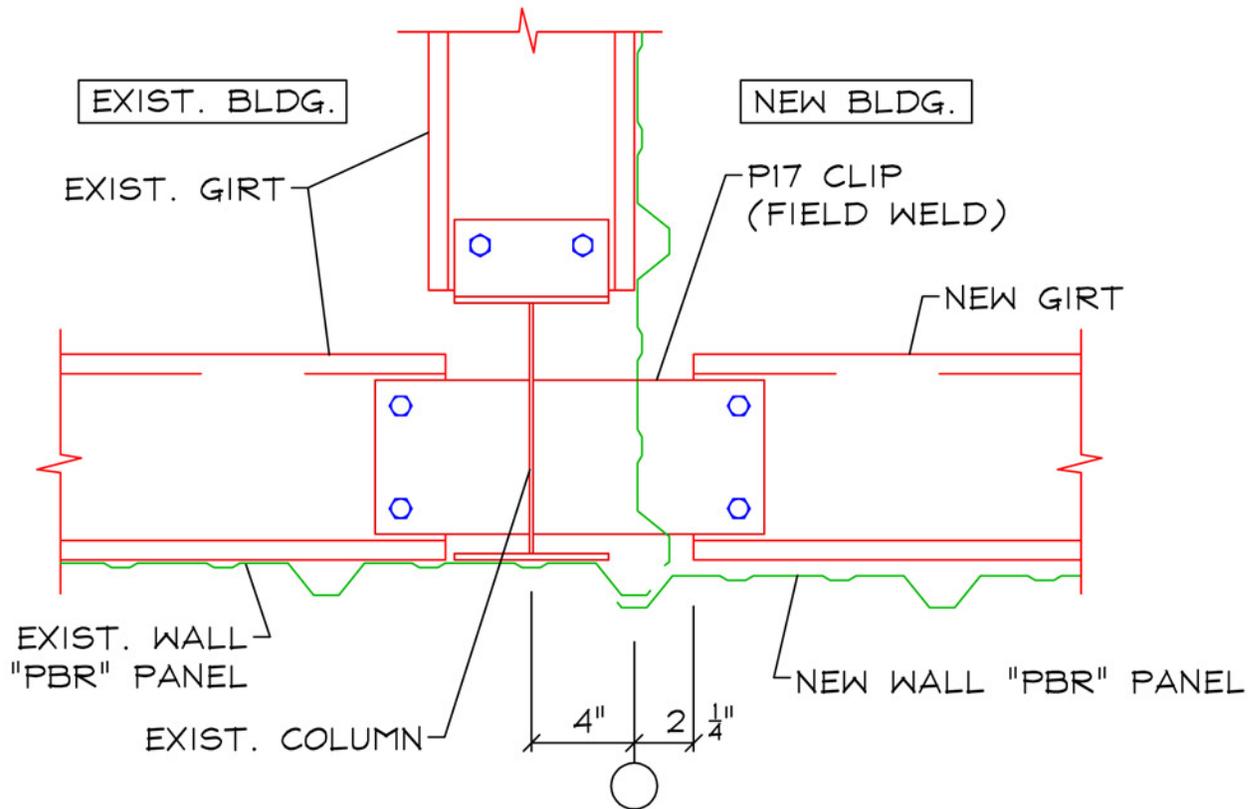


NOTES:

- 1) REMOVE EXIST. ENDWALL SHEET & FIELD WELD P17 CLIP TO EXIST. COLUMN.

Tie-in

TI08 - SIDEWALL (PANEL) - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

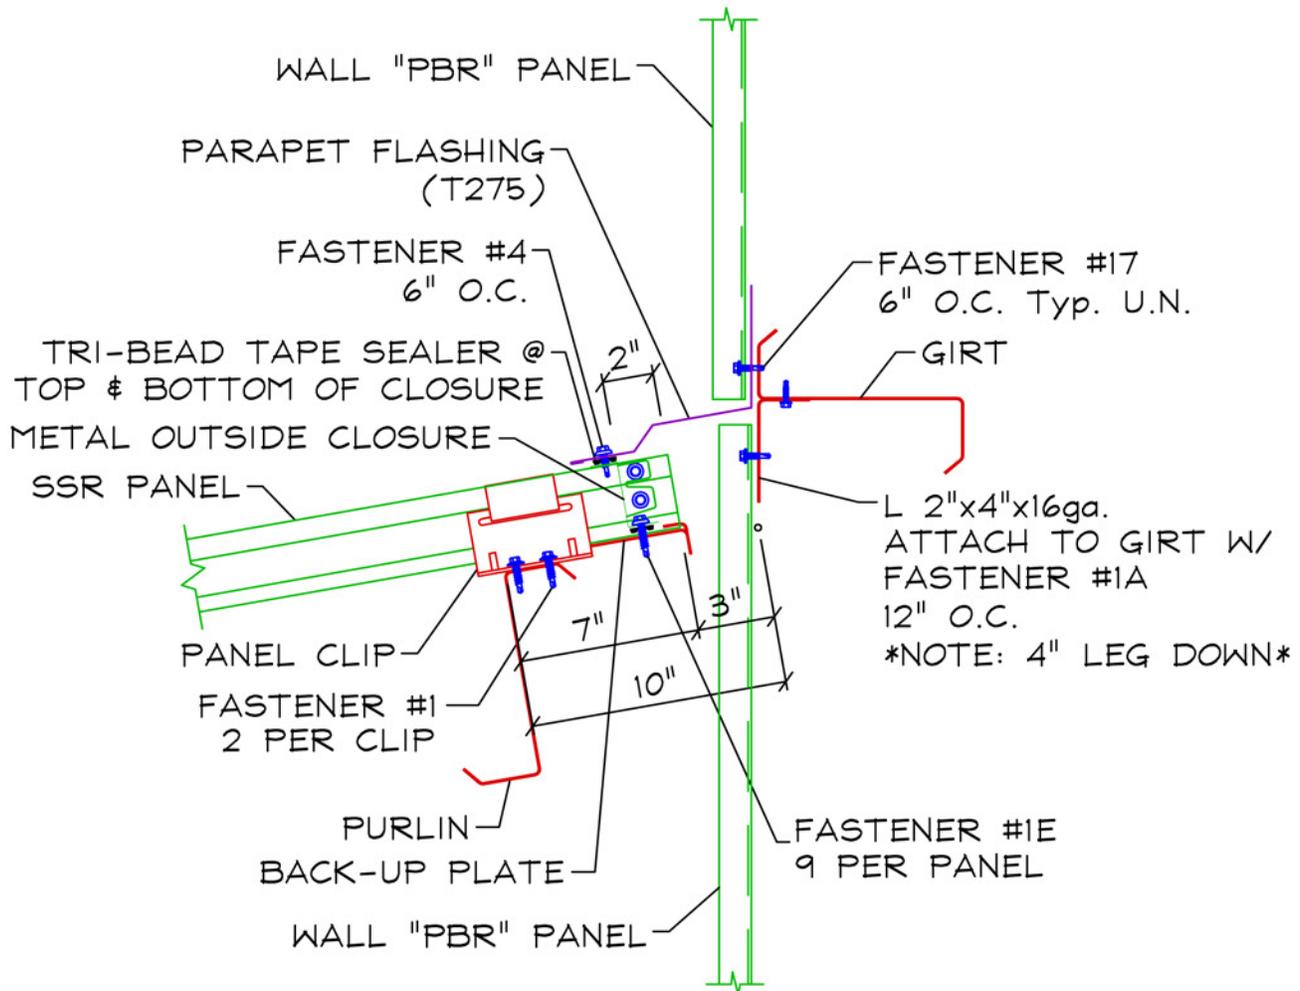


NOTES:

1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Tie-in

T19 - SIDEWALL (BRICK) - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

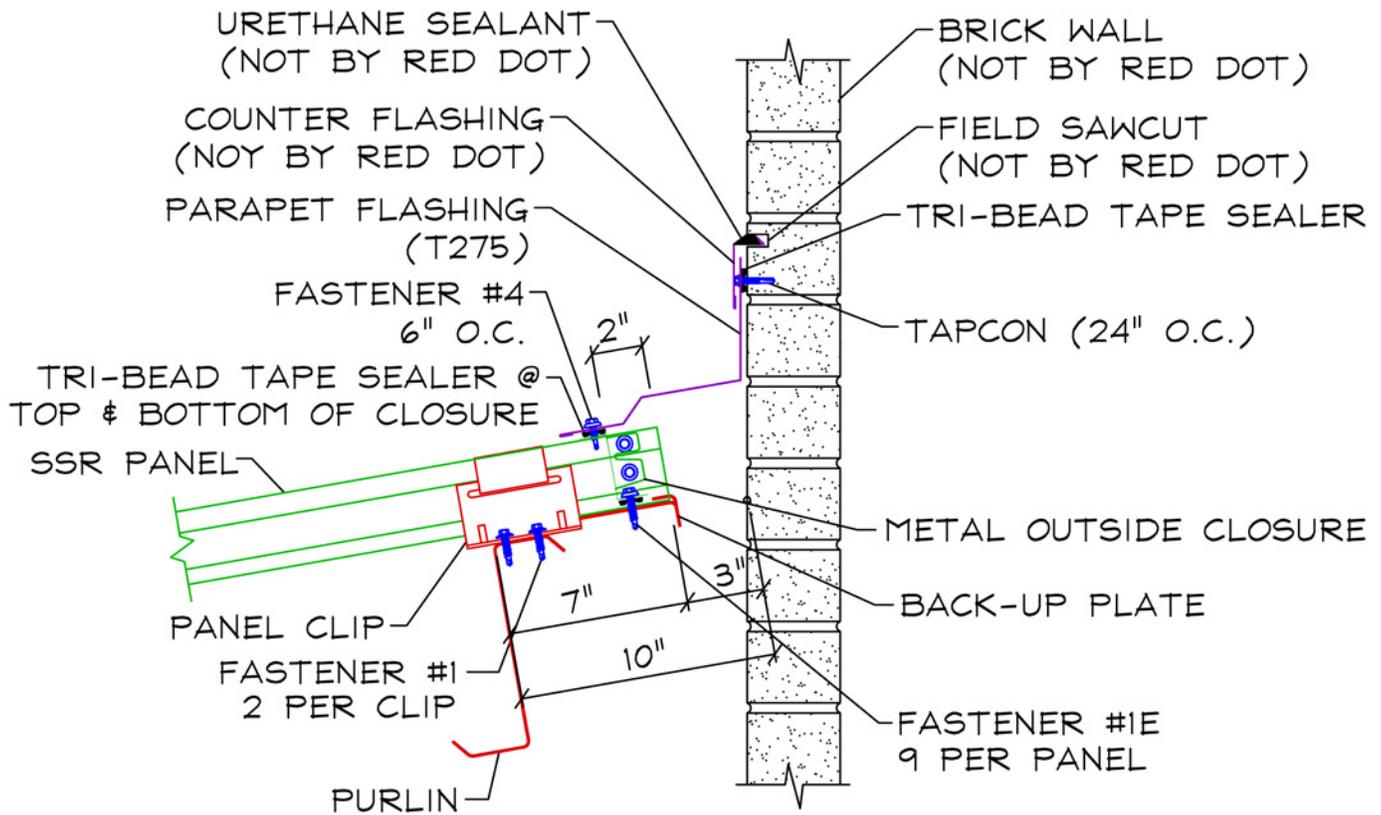


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Tie-in

TI10 - SIDEWALL (BLOCK) - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

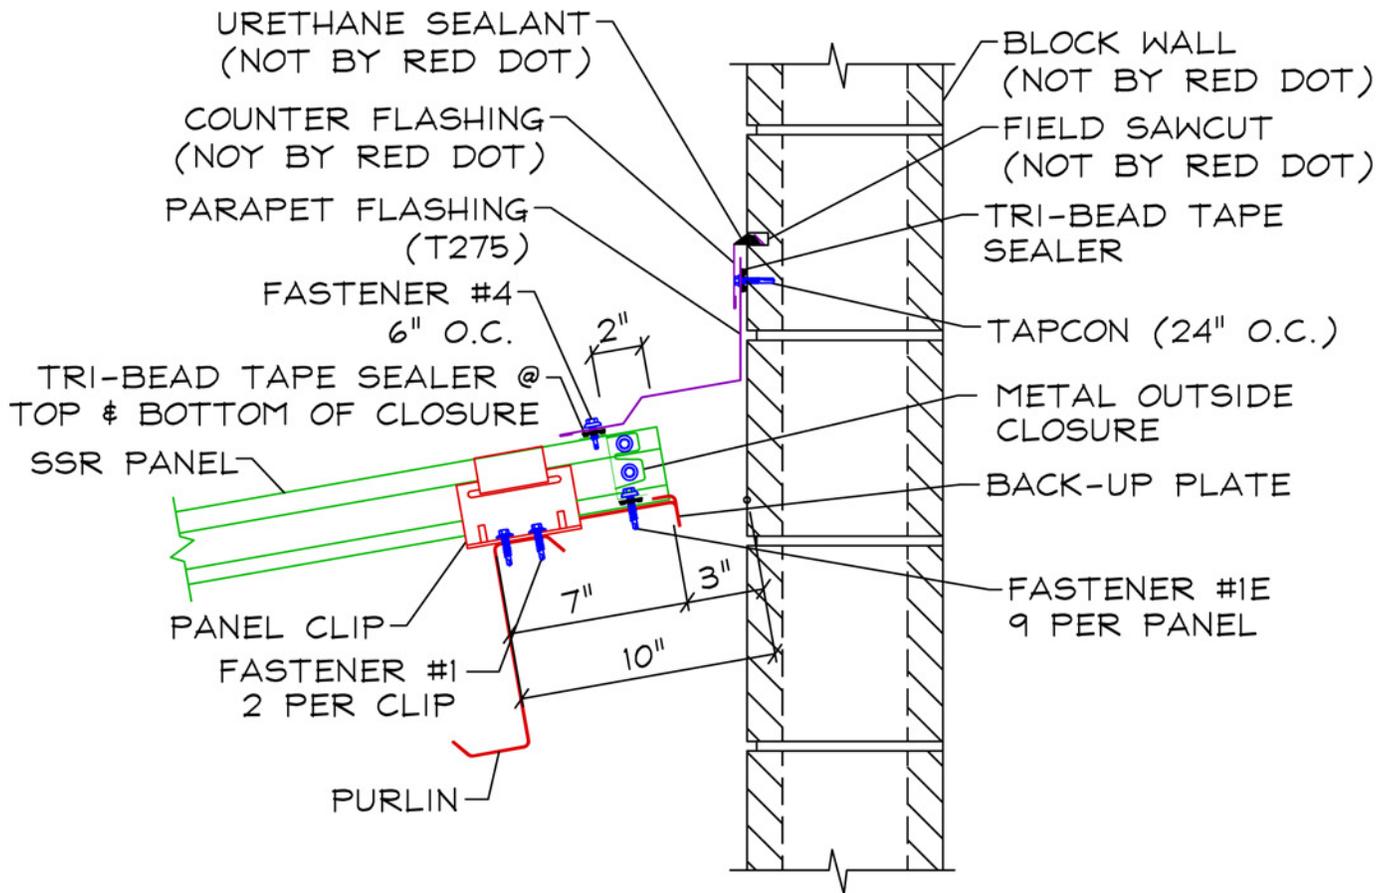


NOTES:

1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Tie-in

TI11 - SIDEWALL (PANEL) - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

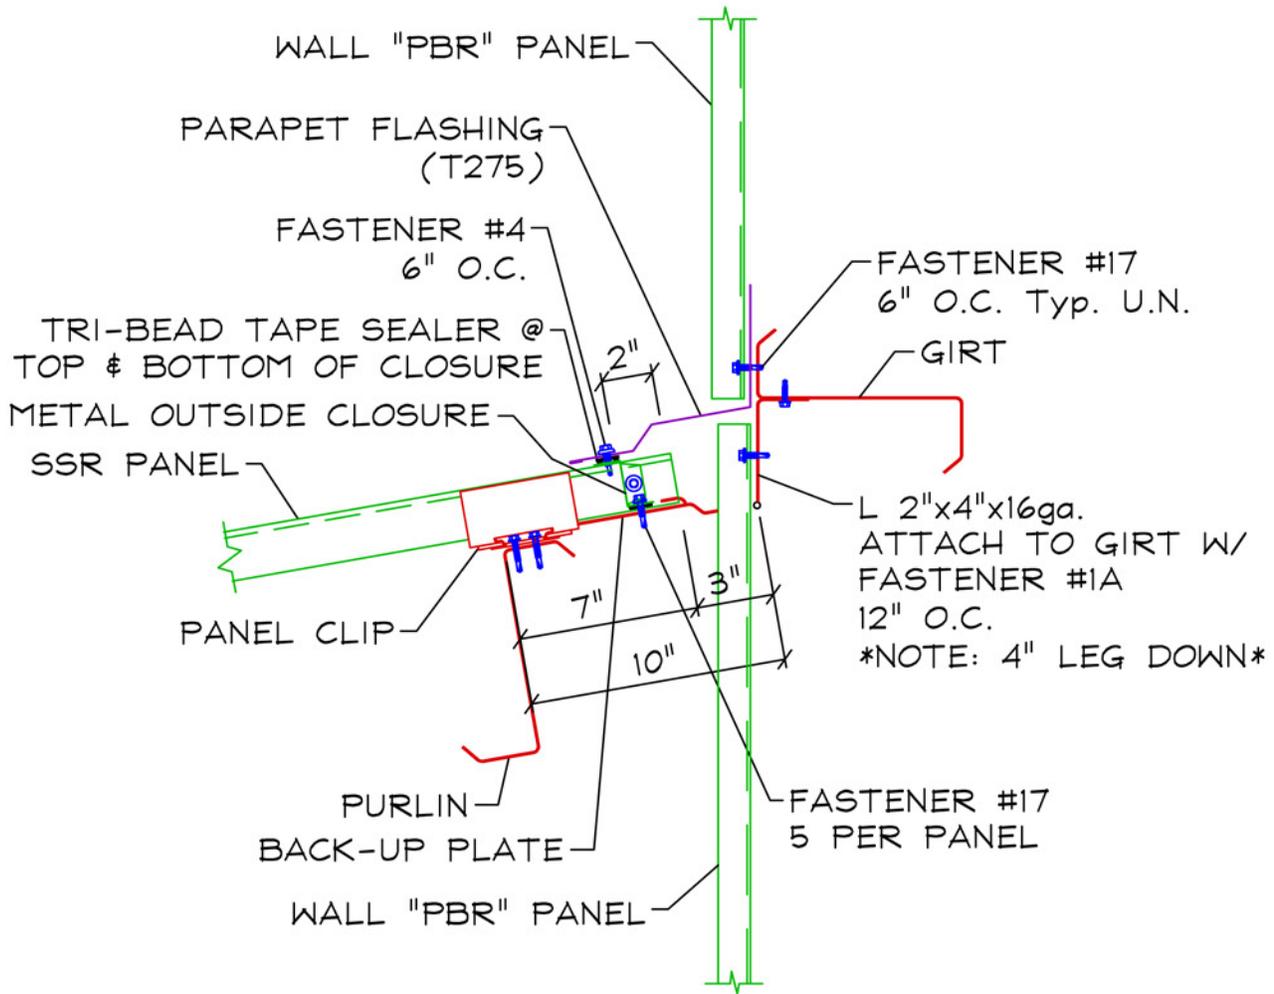


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Tie-in

TI12 - SIDEWALL (BRICK) - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

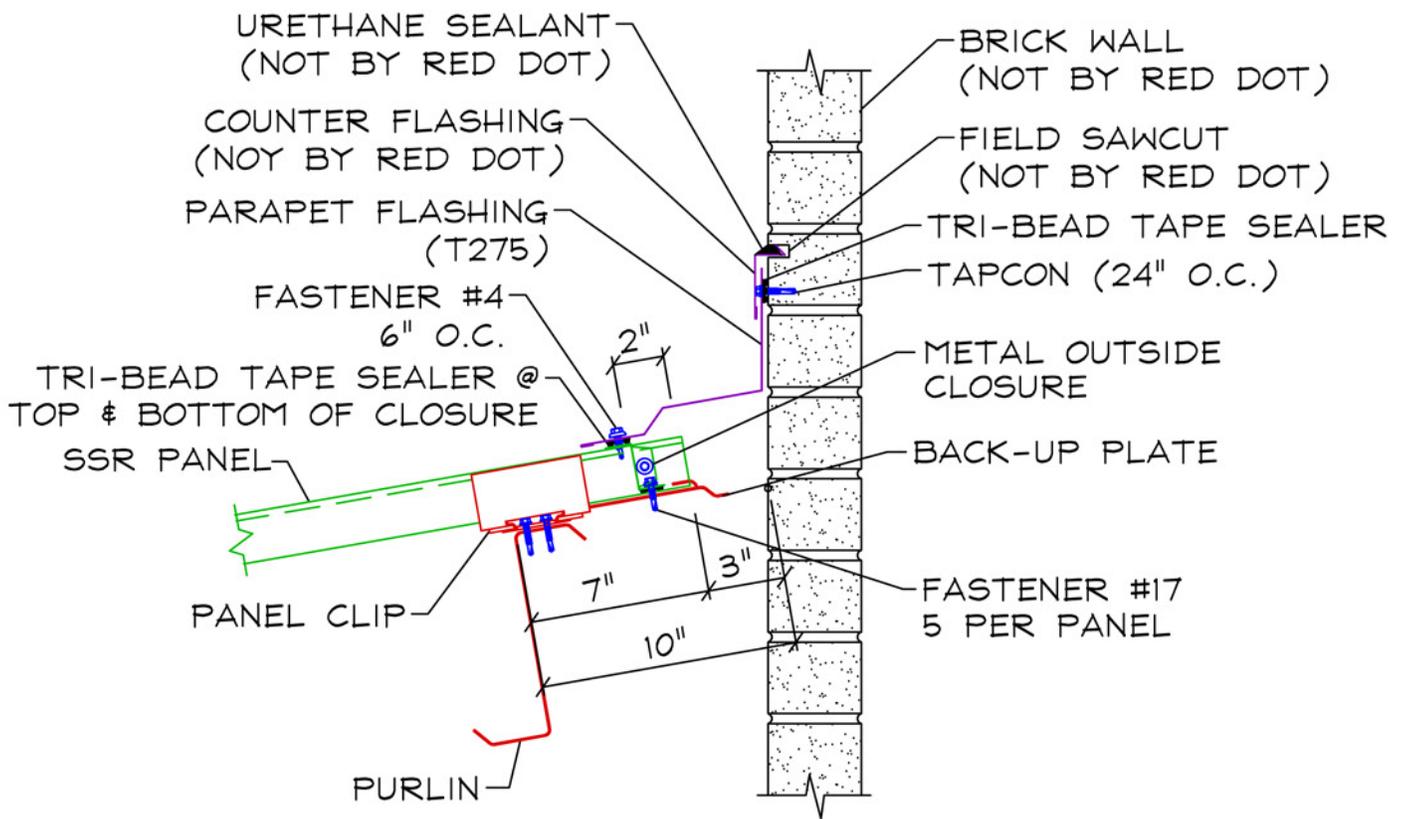


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Tie-in

TI13 - SIDEWALL (BLOCK) - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

INSULATION NOT SHOWN

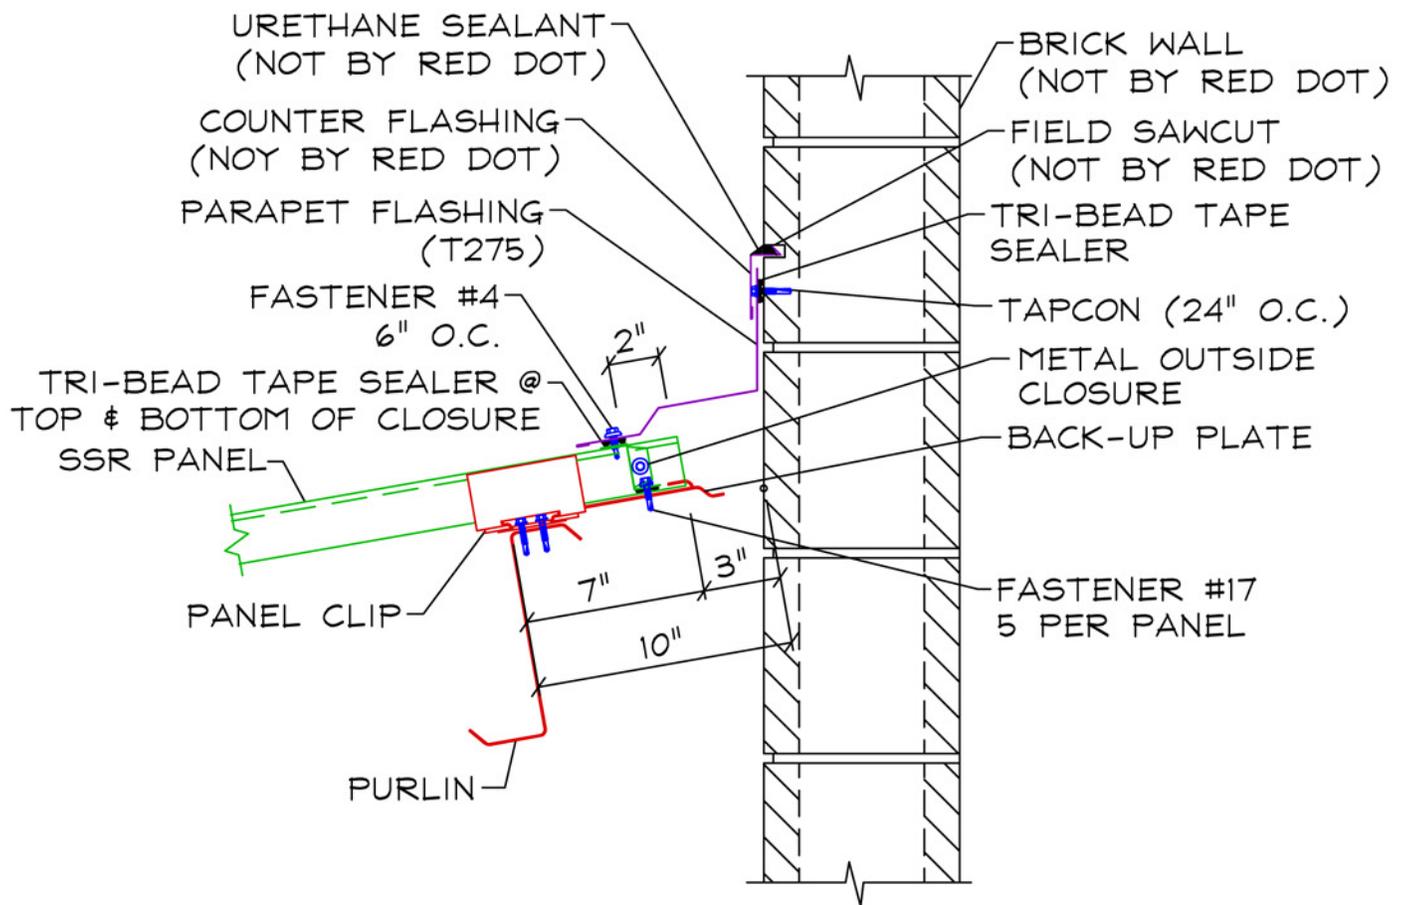


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR1 - LOW SIDEWALL

INSULATION NOT SHOWN

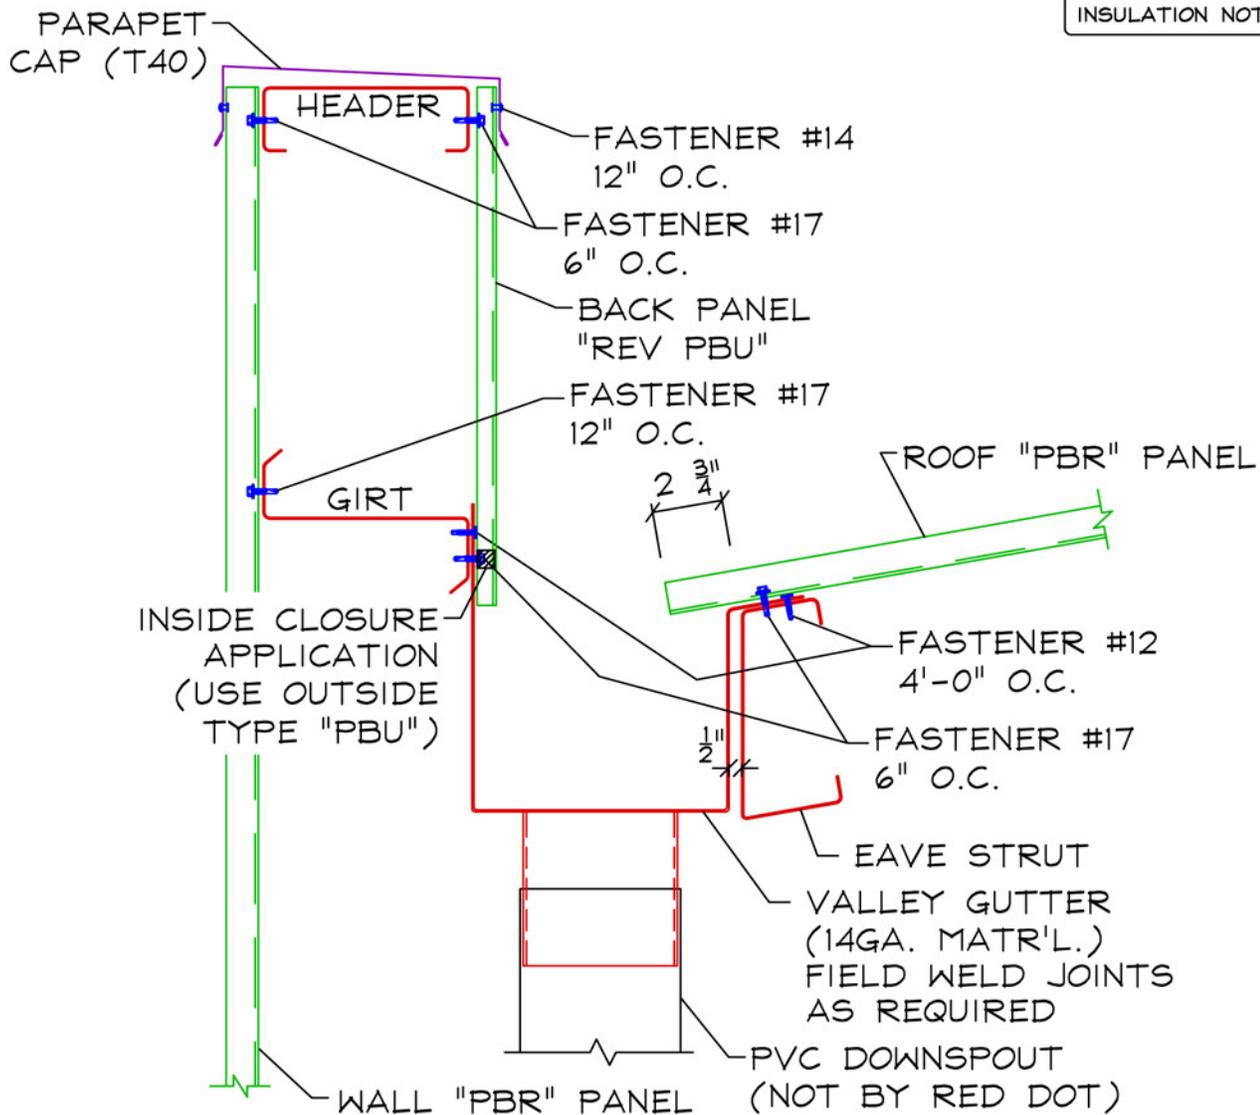


NOTES:

- 1) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR2 - HIGH SIDEWALL

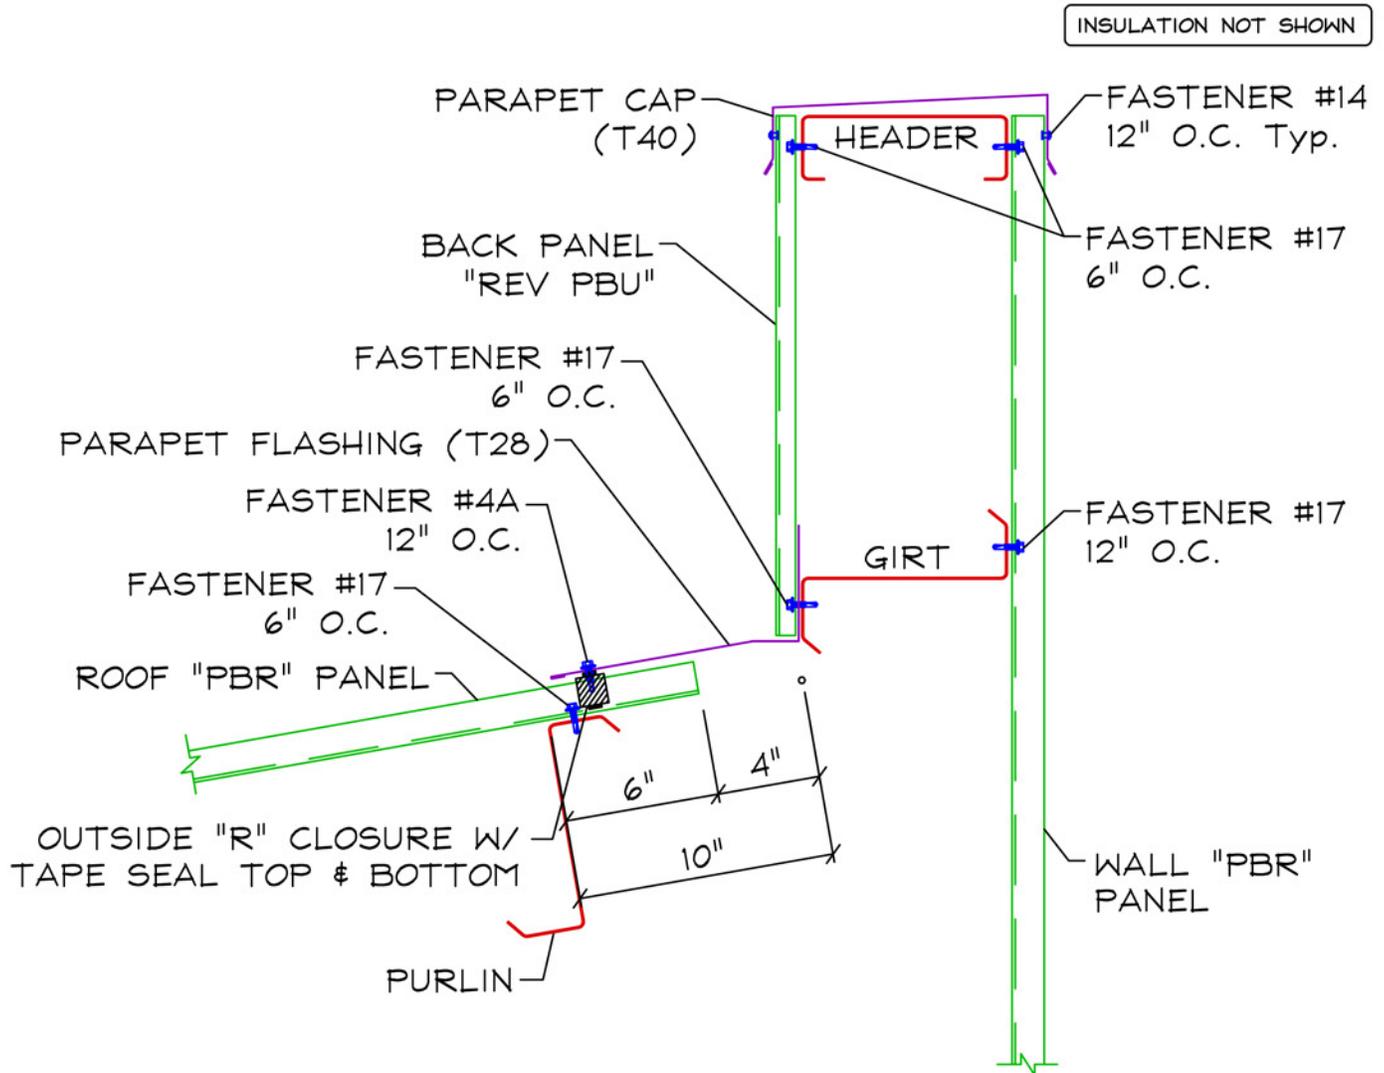


NOTES:

1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR3 - ENDWALL

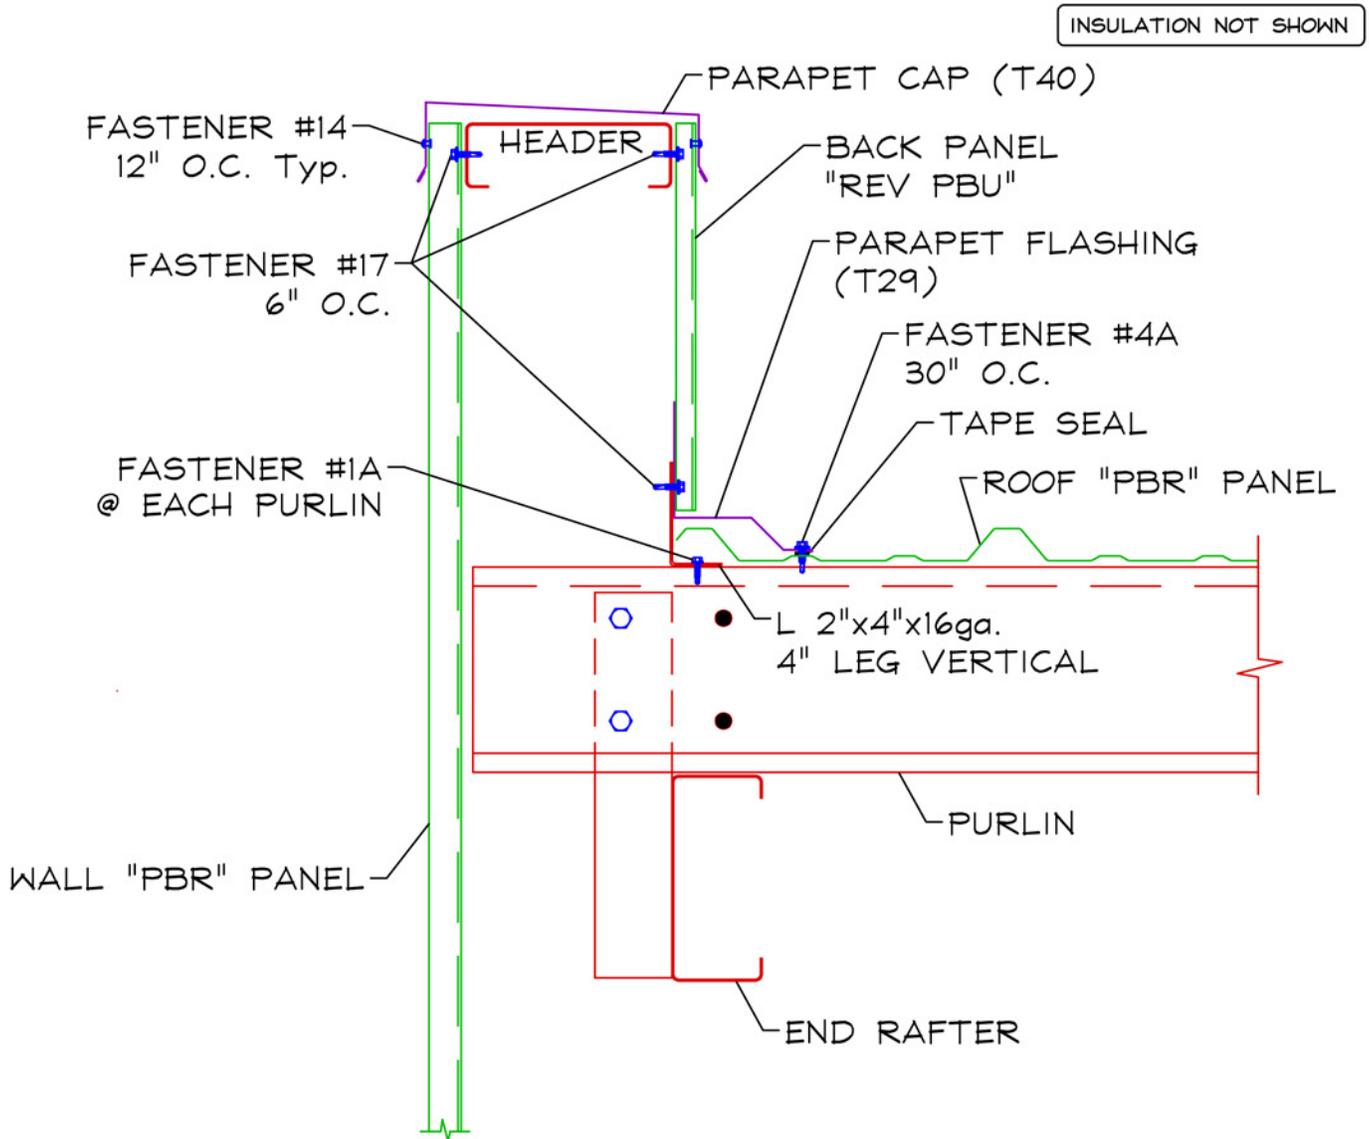


NOTES:

1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR4 - LOW SIDEWALL - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

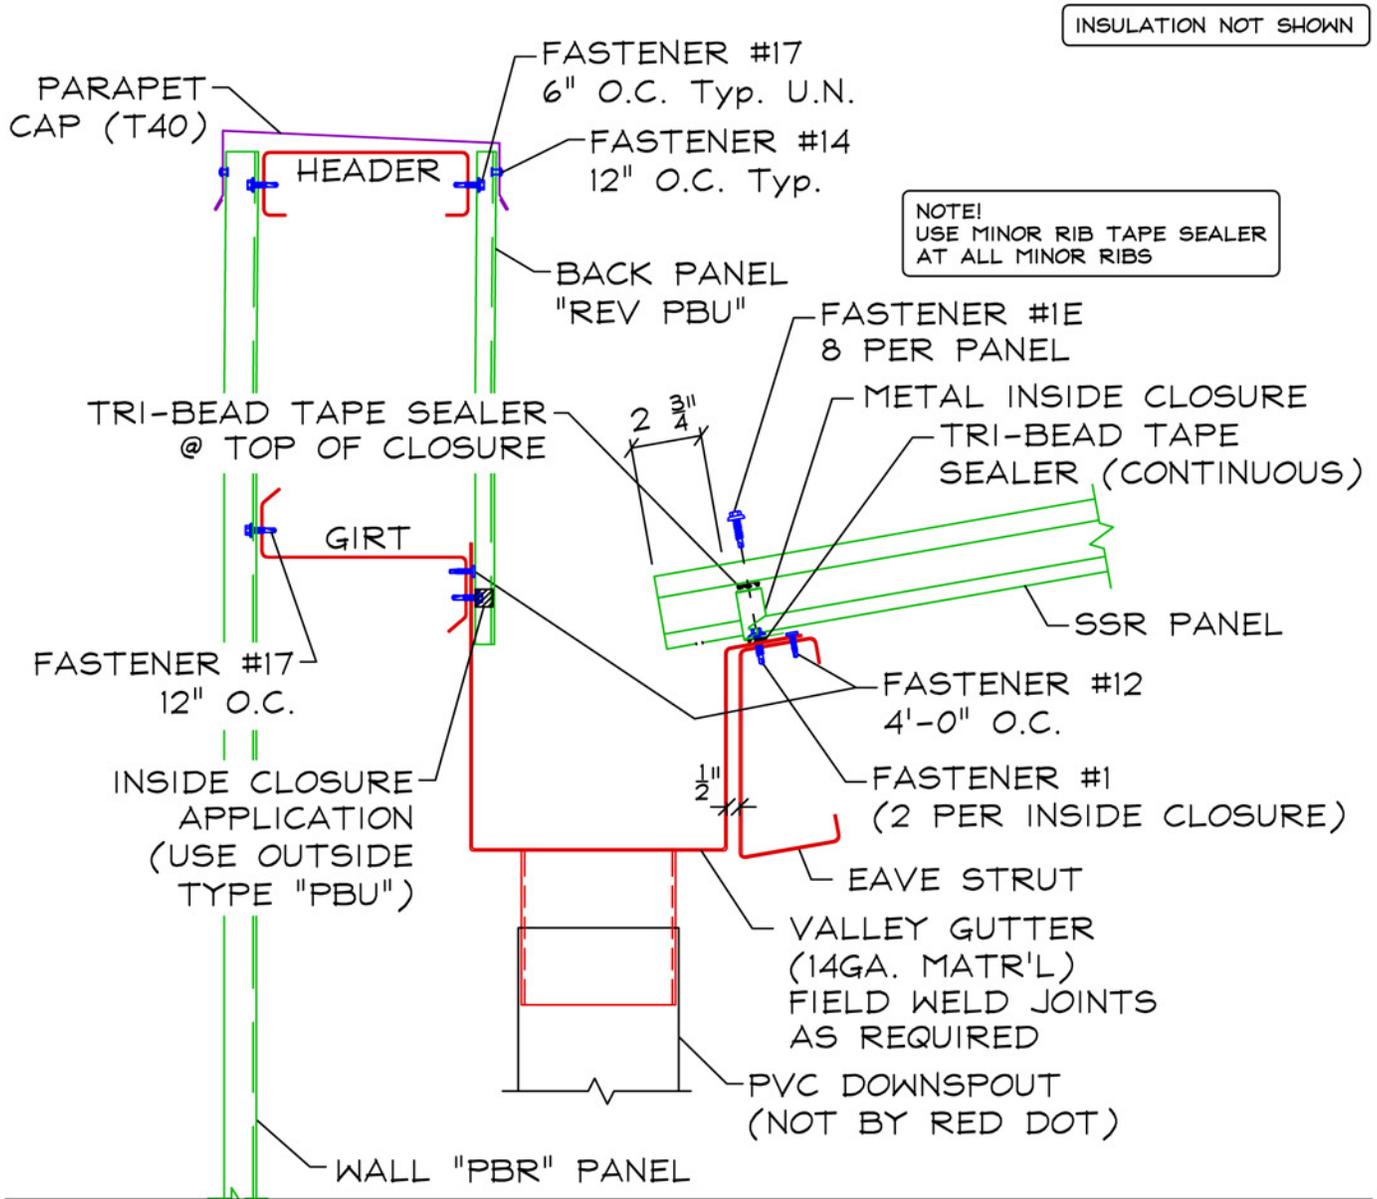


NOTES:

- 1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR5 - HIGH SIDEWALL - TRAPEZOIDAL ROOF PANEL (FIXED OR FLOATING)

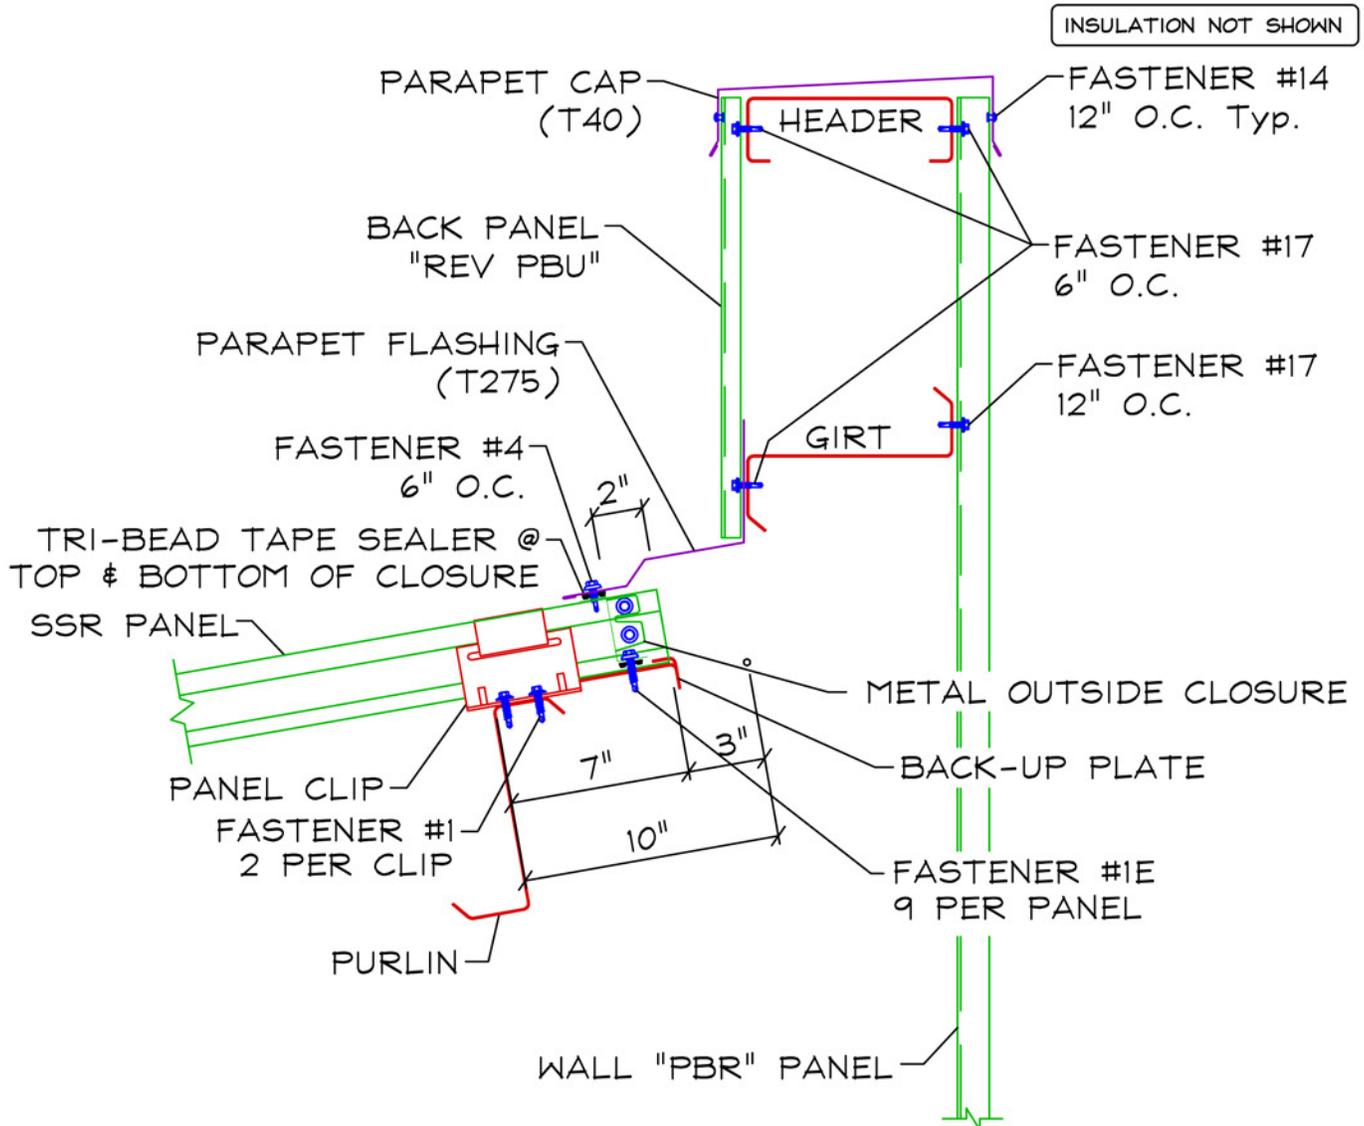


NOTES:

1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR6 - ENDWALL - TRAPEZOIDAL ROOF PANEL (FIXED)

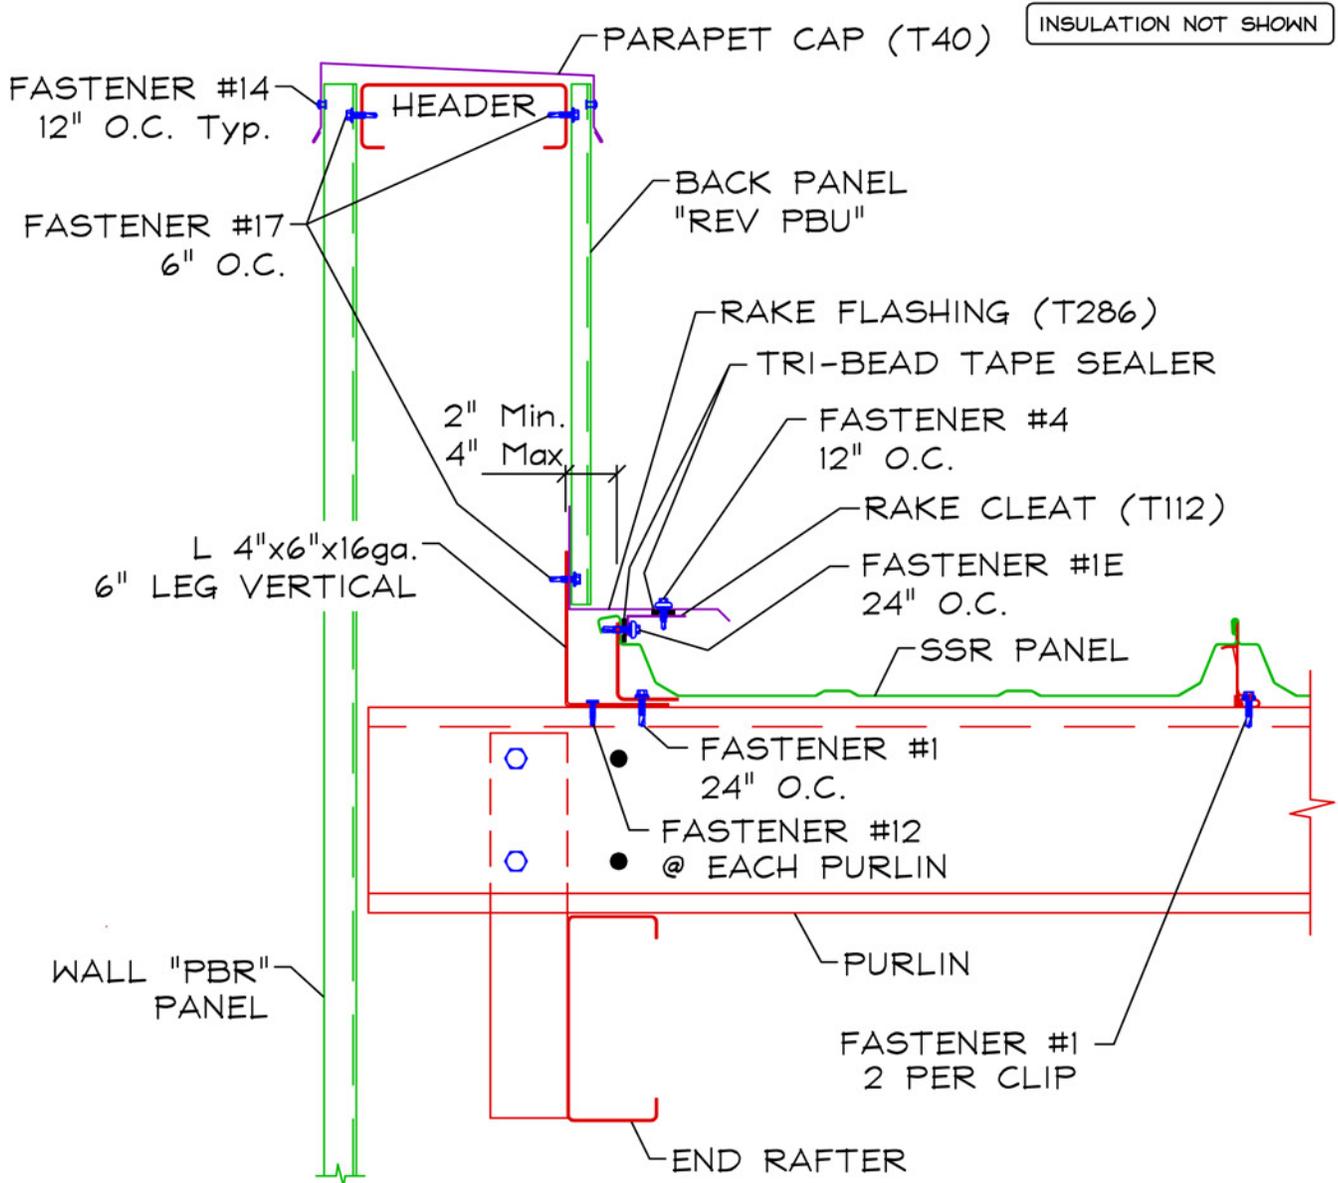


NOTES:

1) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR7 - ENDWALL - TRAPEZOIDAL ROOF PANEL (FLOATING)

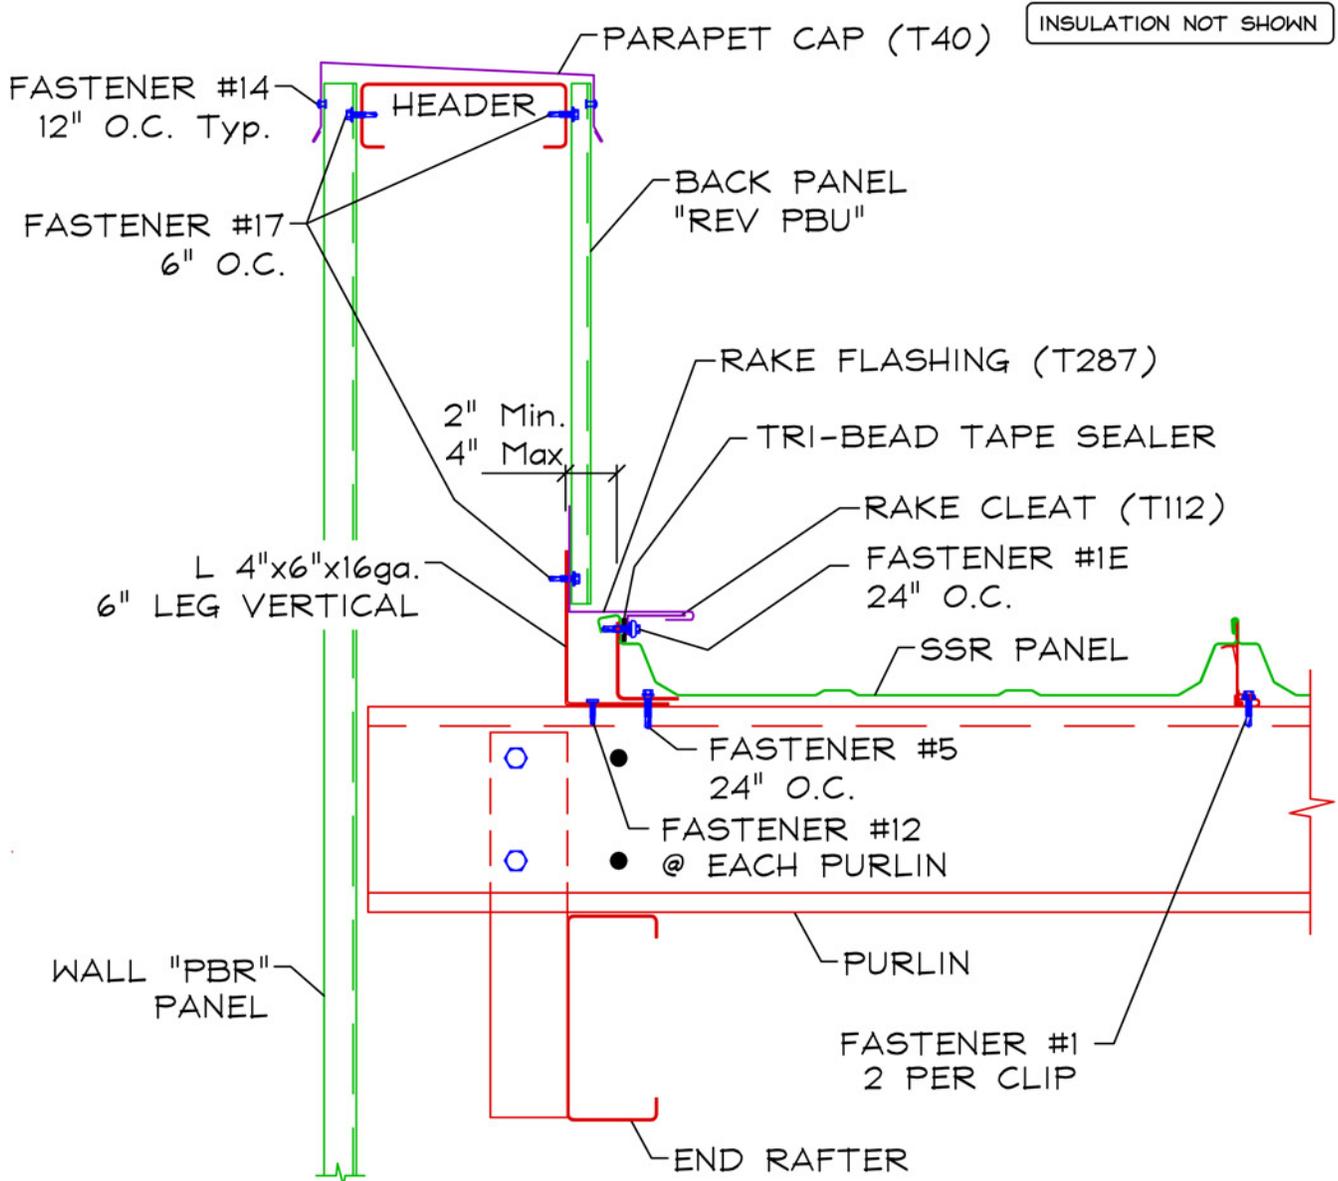


NOTES:

1) DOUBLE FACE TAPE FURNISHED BY INSULATION SUPPLIER.

Parapet

PR8 - LOW SIDEWALL - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

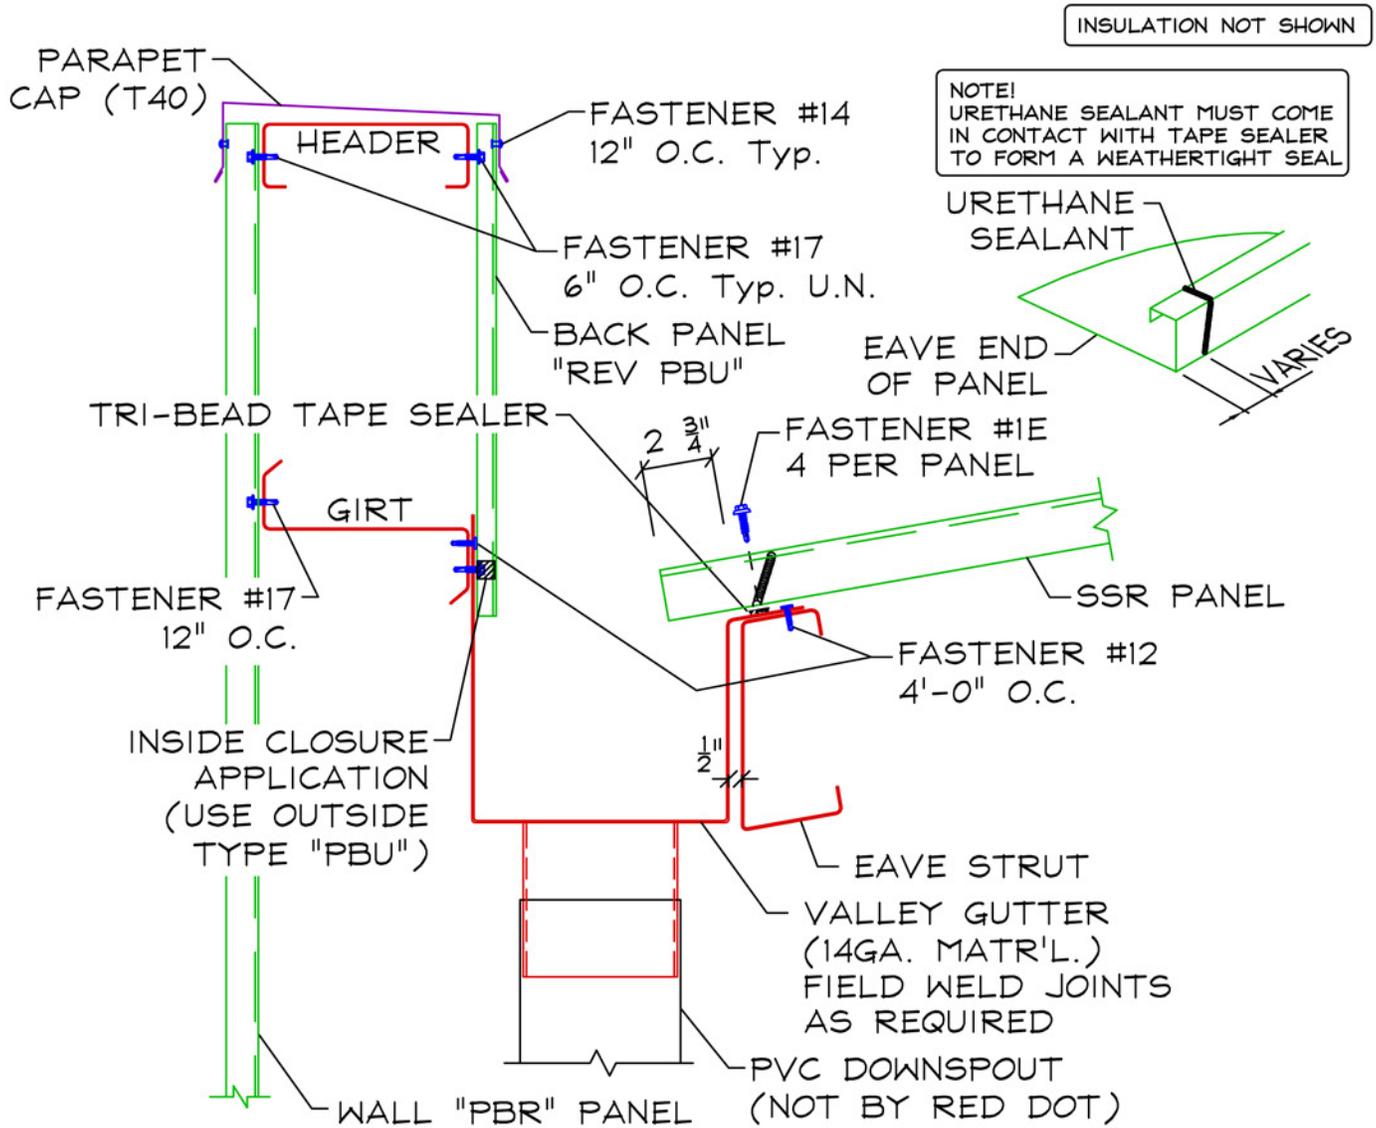


NOTES:

- 1) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR9 - HIGH SIDEWALL - VERTICAL LEG 180° OR 90° ROOF PANEL (FIXED OR FLOATING)

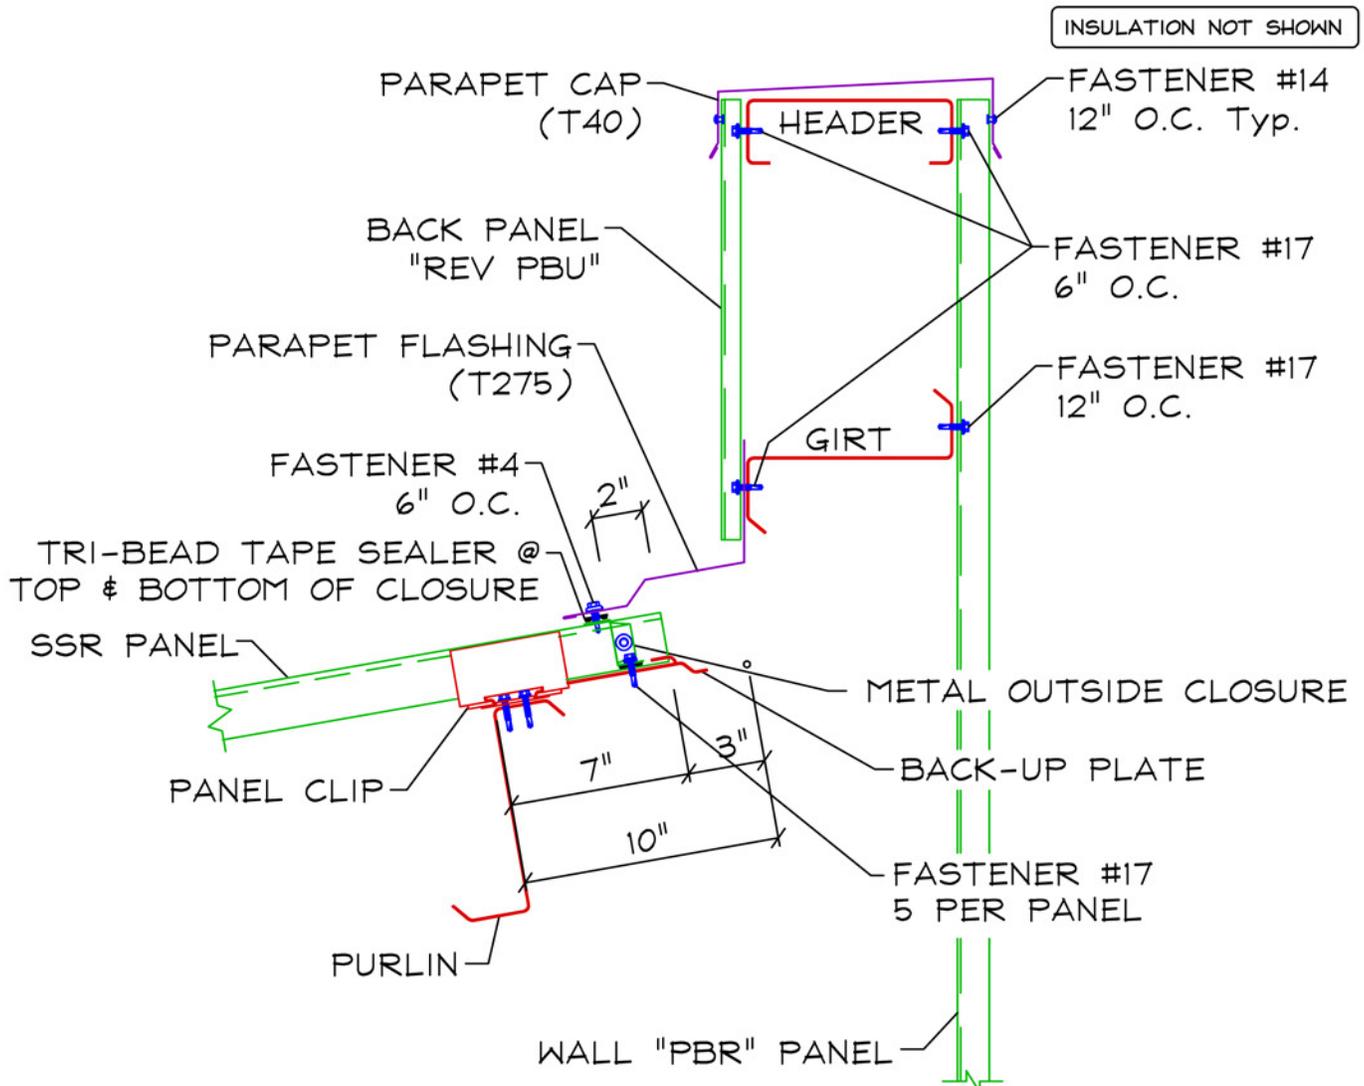


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR10 - ENDWALL - VERTICAL LEG 180° ROOF PANEL (FIXED)

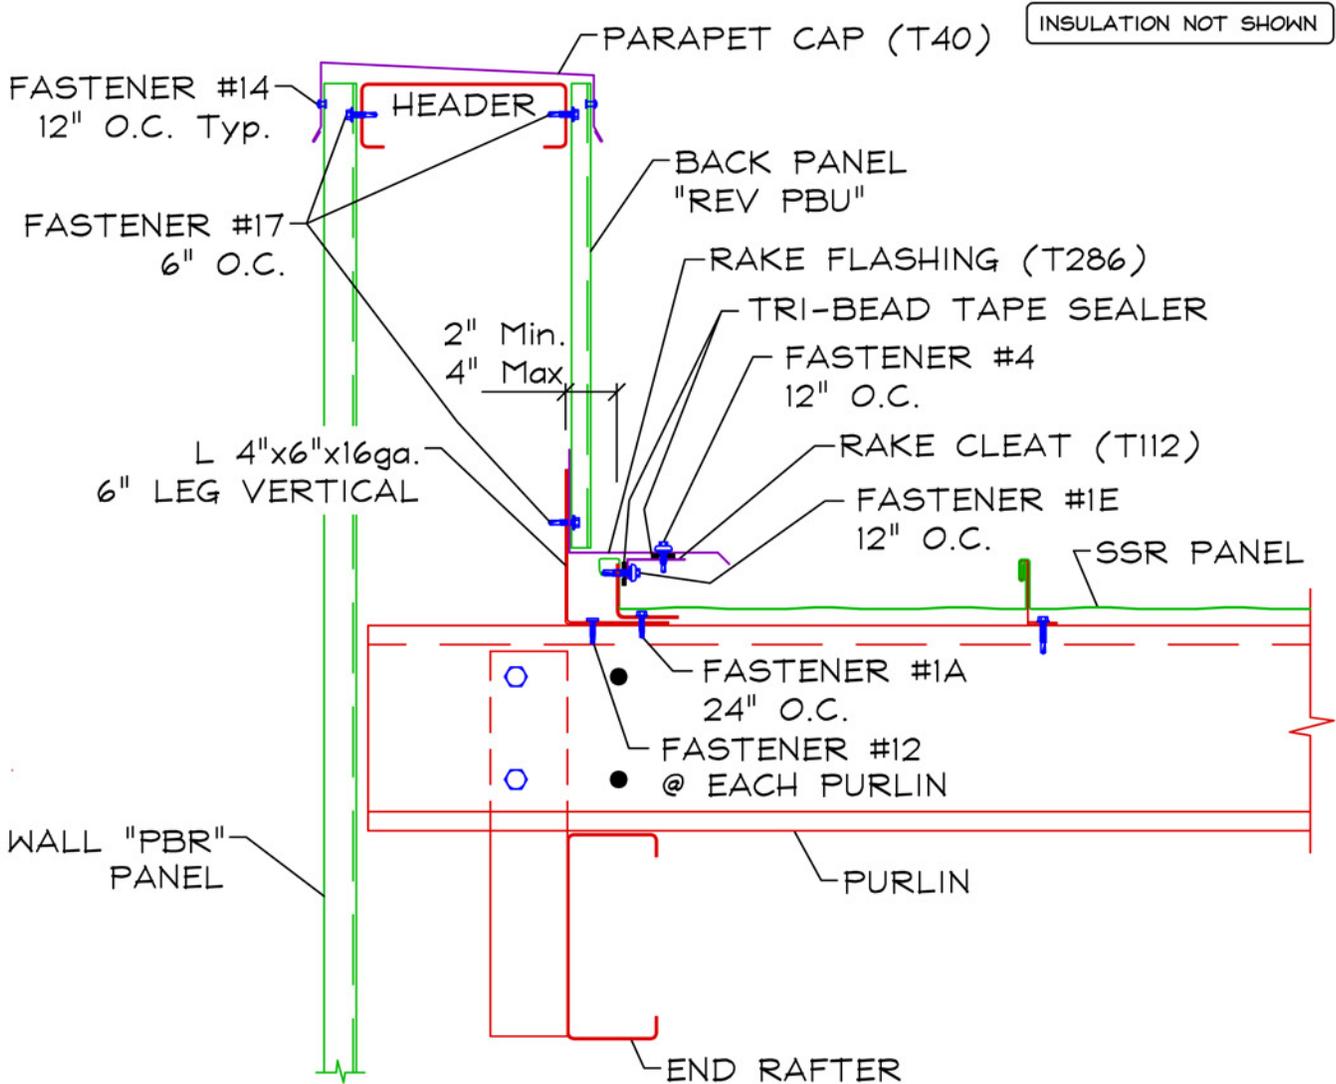


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR11 - ENDWALL - VERTICAL LEG 180° ROOF PANEL (FLOATING)

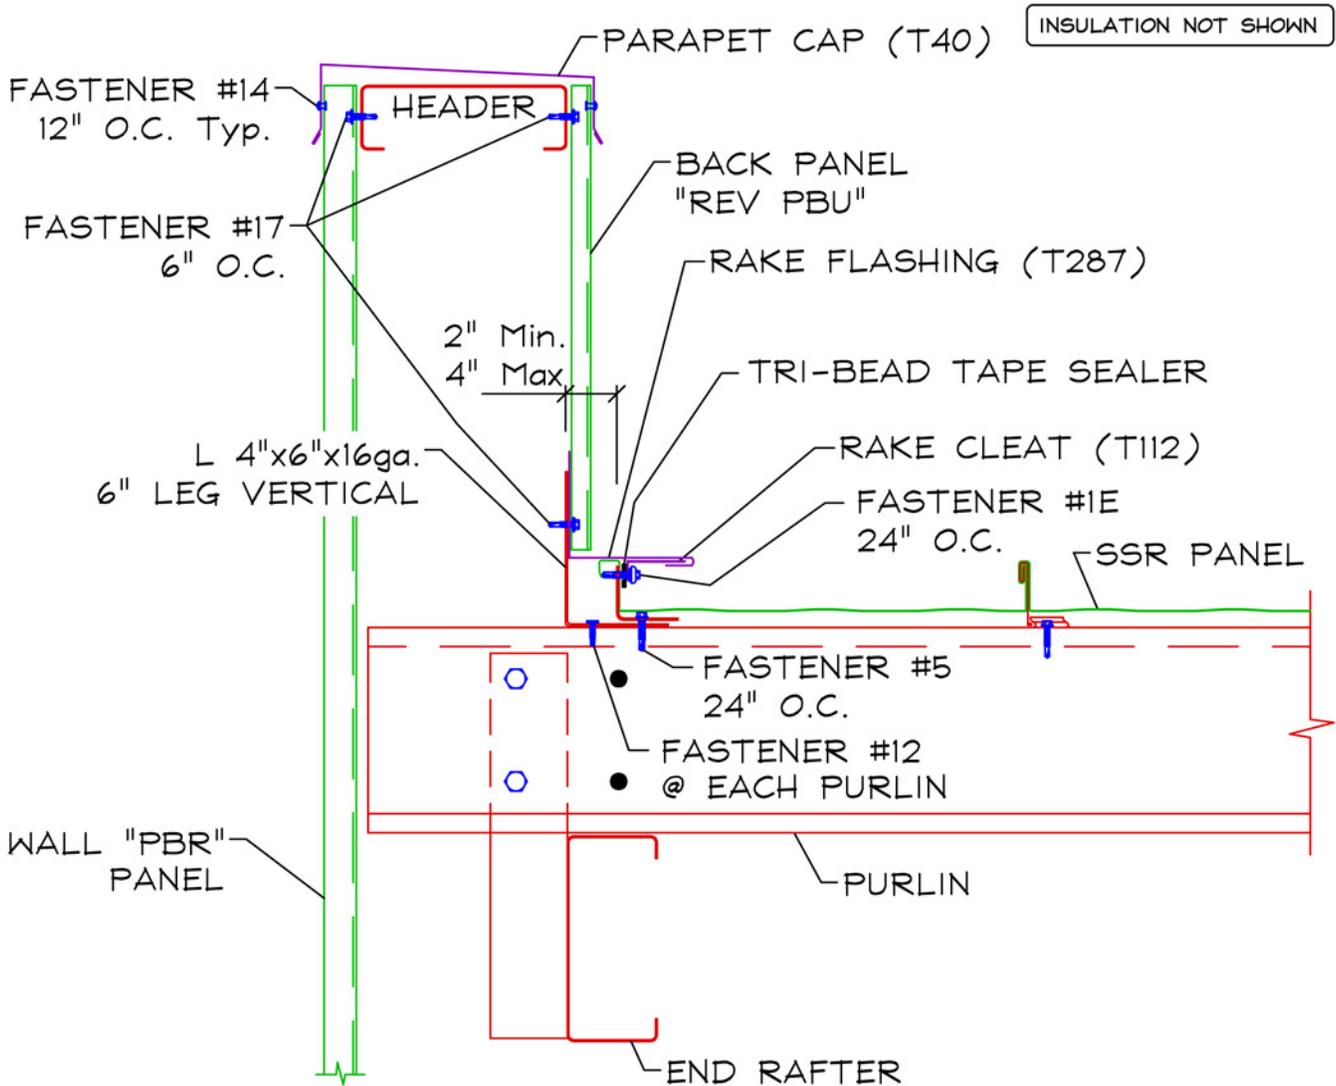


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR12 - ENDWALL - VERTICAL LEG 90° ROOF PANEL (FIXED)

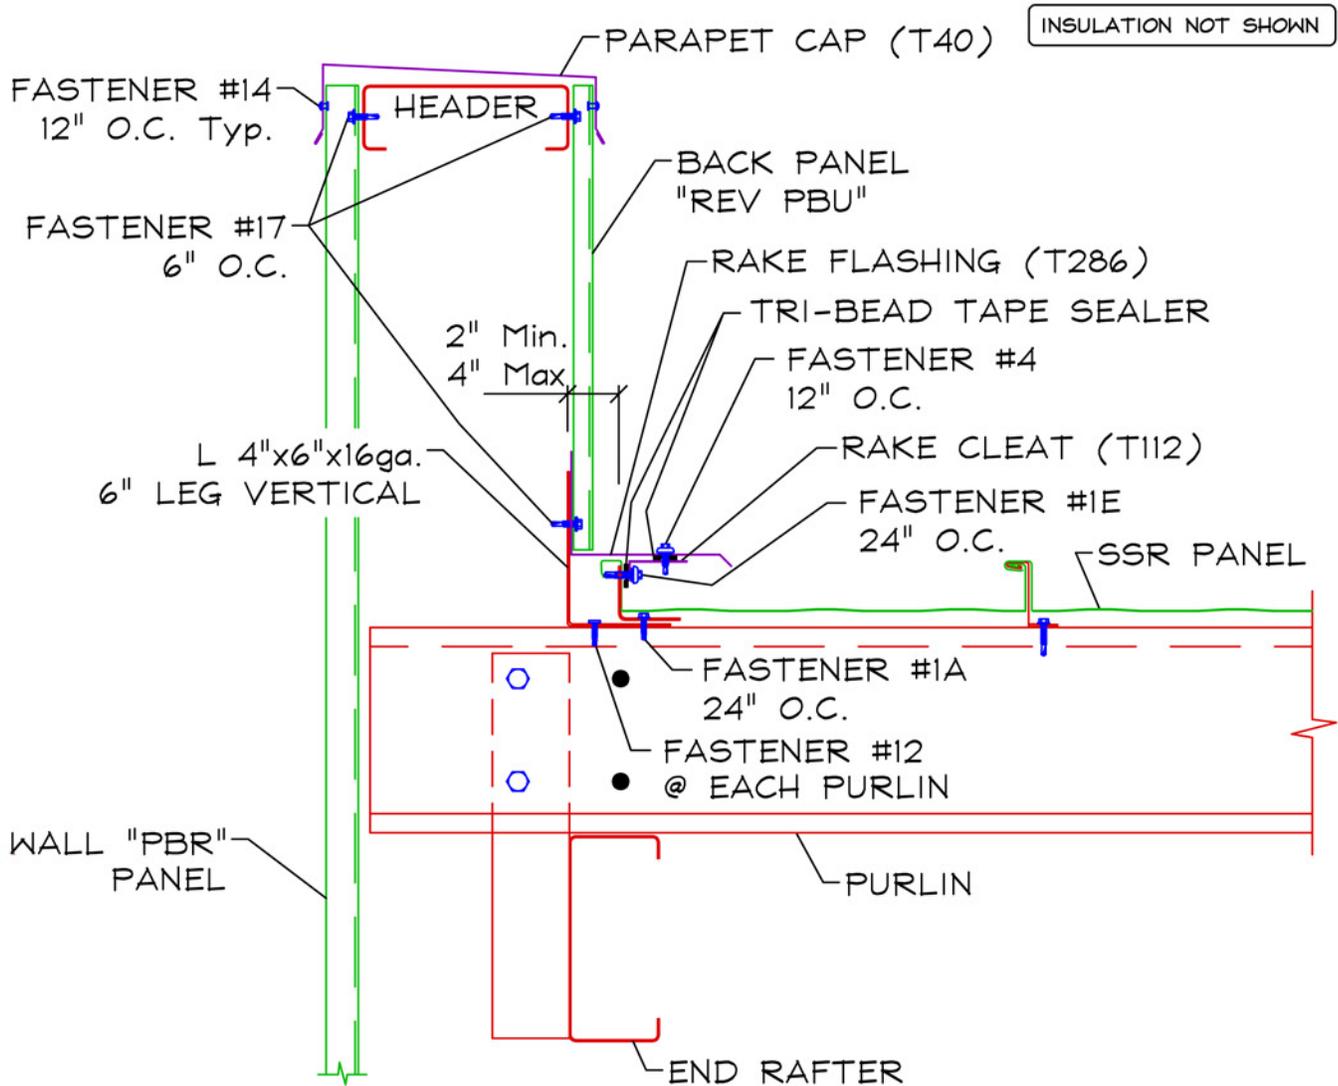


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.

Parapet

PR13 - ENDWALL - VERTICAL LEG 90° ROOF PANEL (FLOATING)

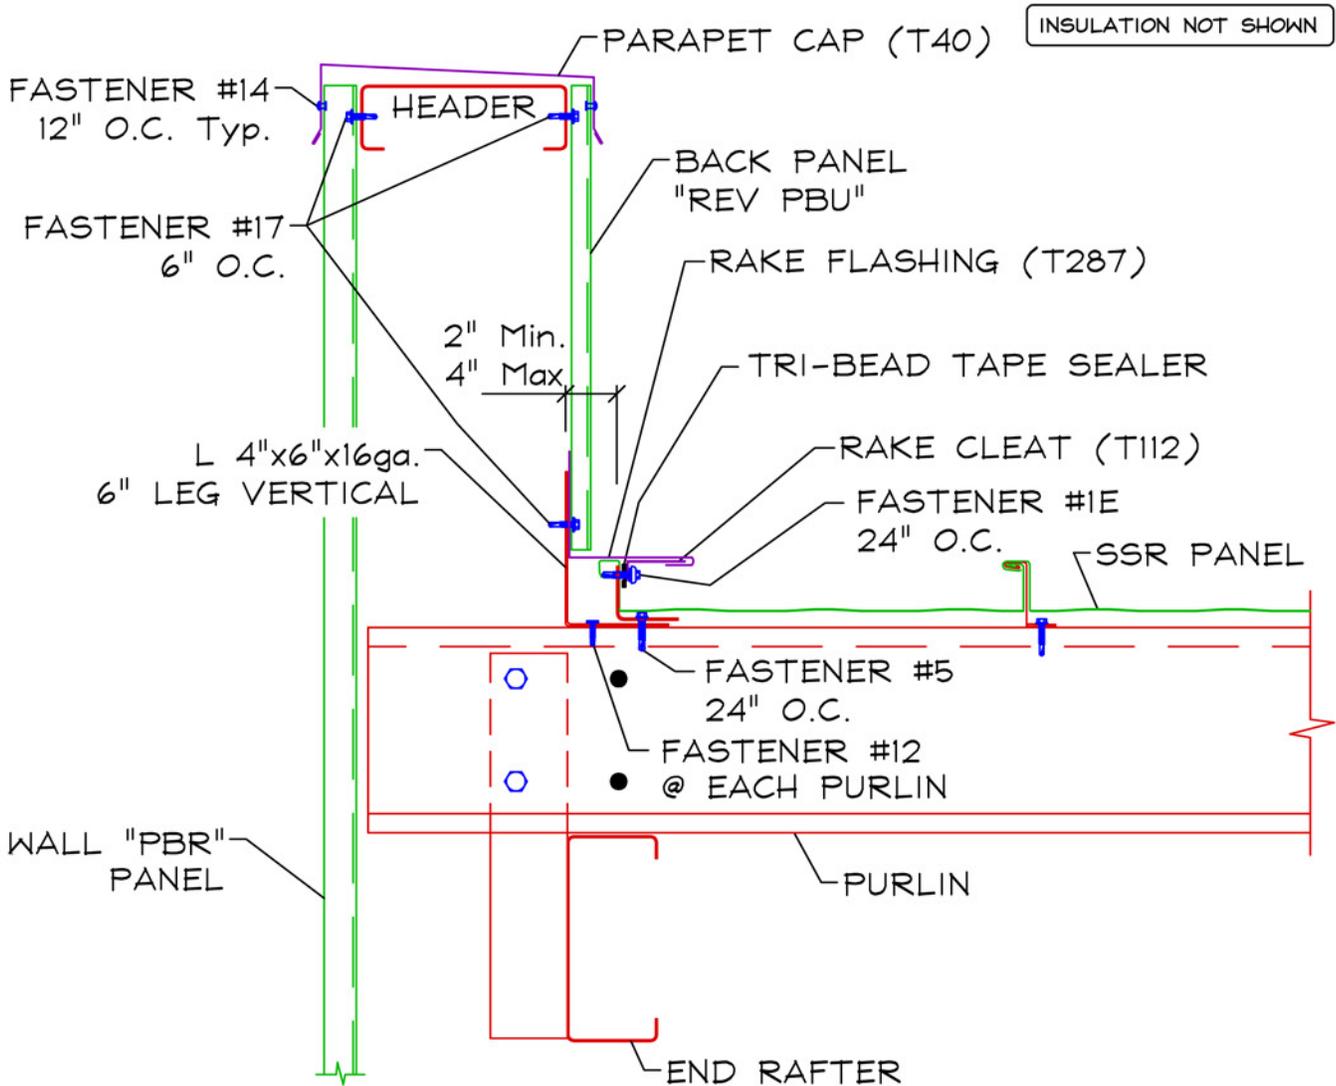


NOTES:

- 1) USE FASTENER #1B FOR VERTICAL 180° AND FASTENER #1A FOR VERTICAL 90° CLIP TO PURLIN ATTACHMENT.
- 2) DOUBLE FACE TAPE FURNISHED BY INSULATION PROVIDER.


Corner

C01 - OUTSIDE "PBR" PANEL

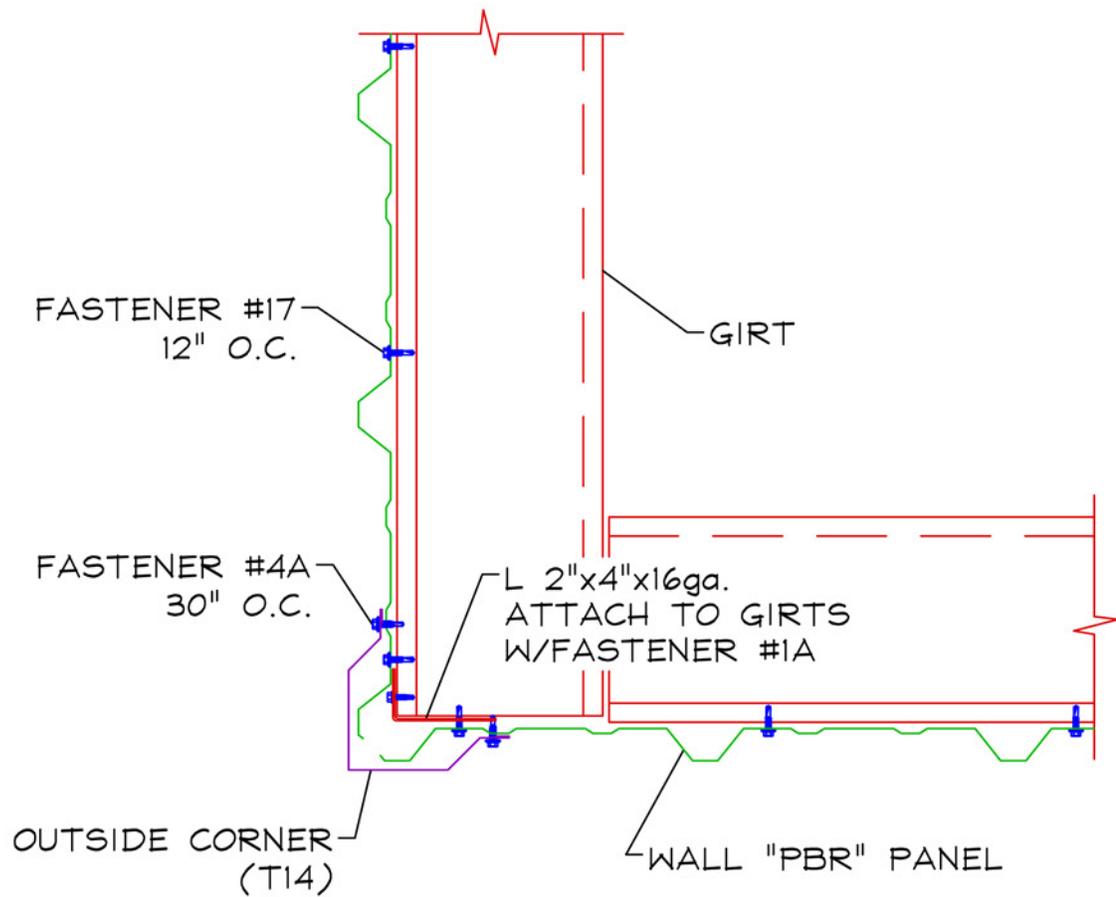


Corner

C02 - INSIDE "PBR" PANEL

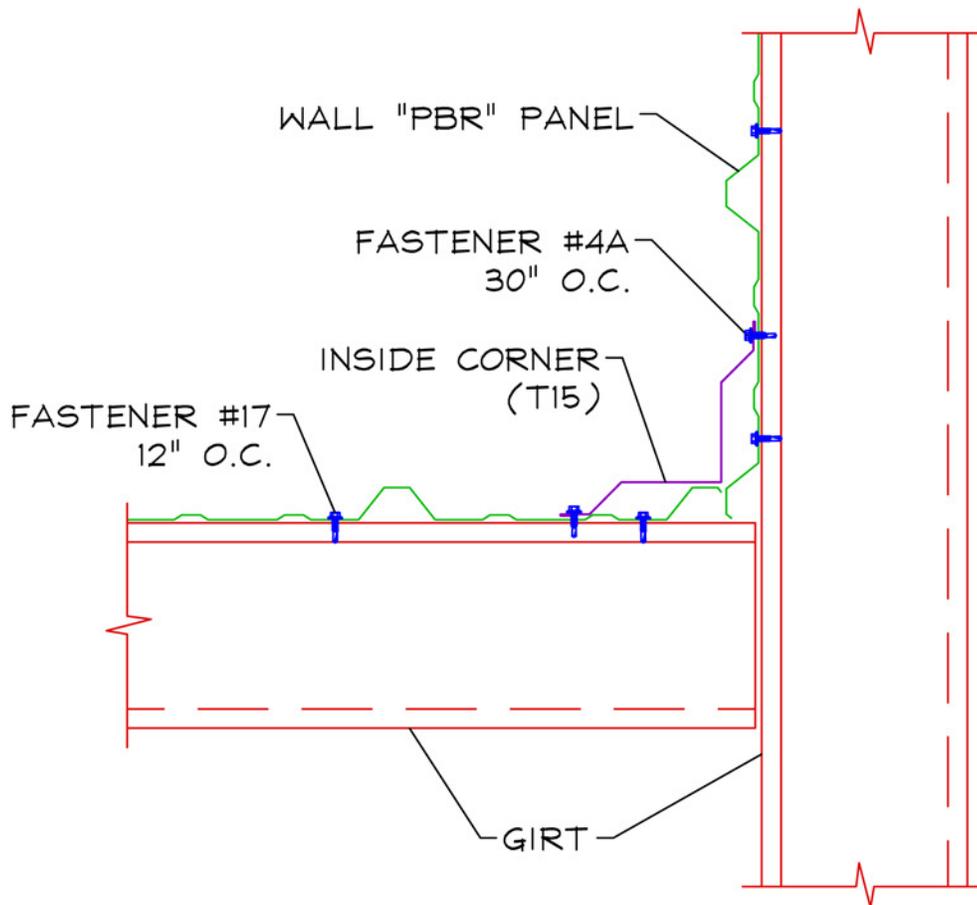


Corner

C03 - OUTSIDE "A" PANEL

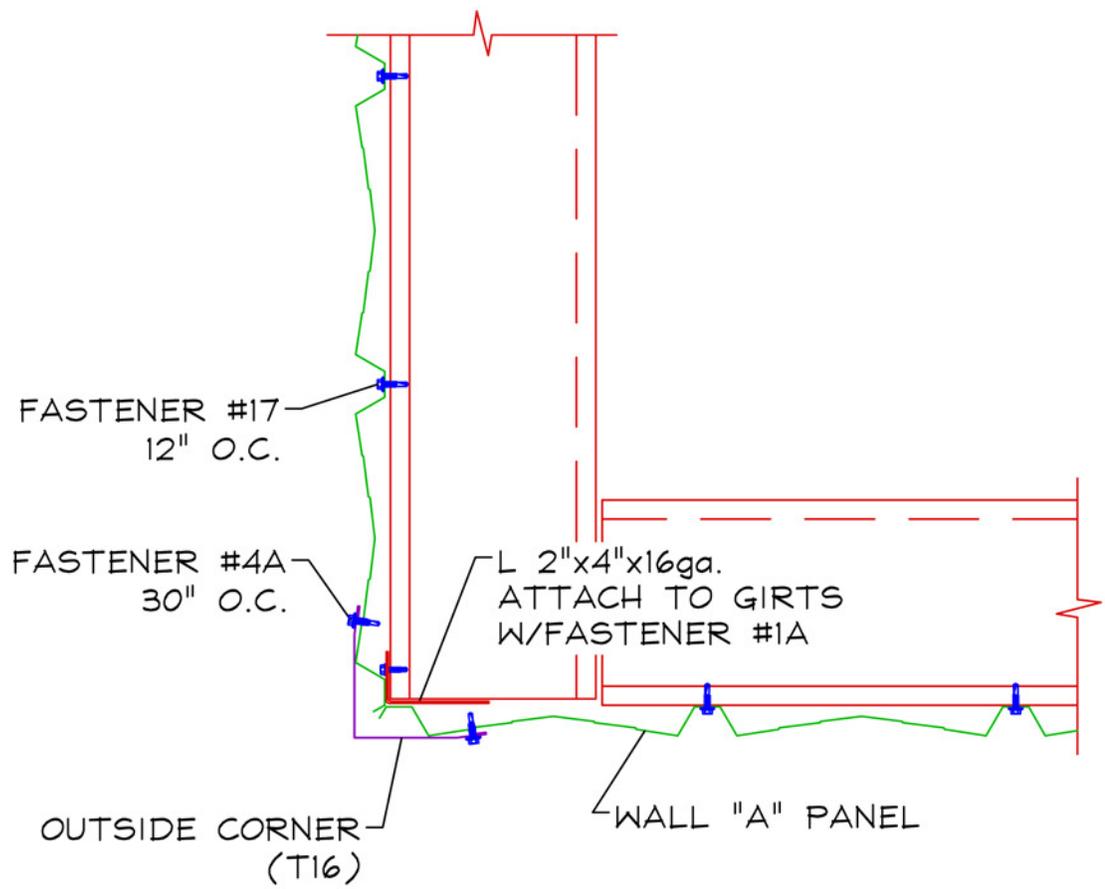


Corner

C04 - INSIDE "A" PANEL

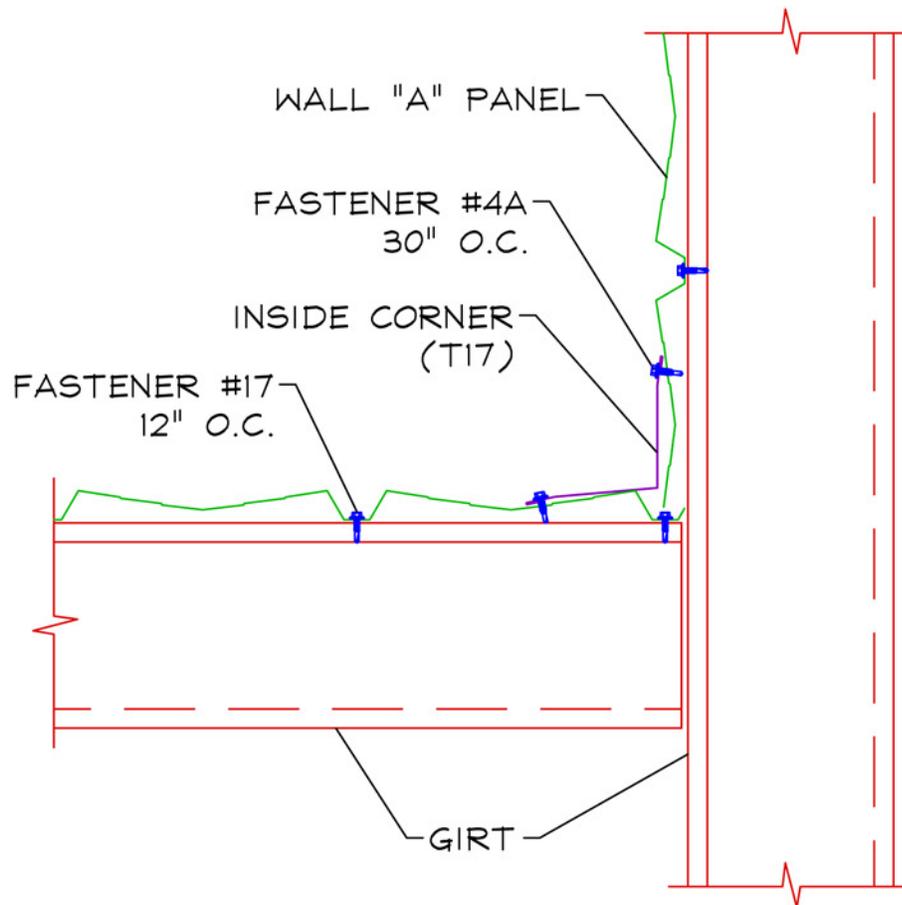


Corner

C05 - OUTSIDE "PBU" PANEL

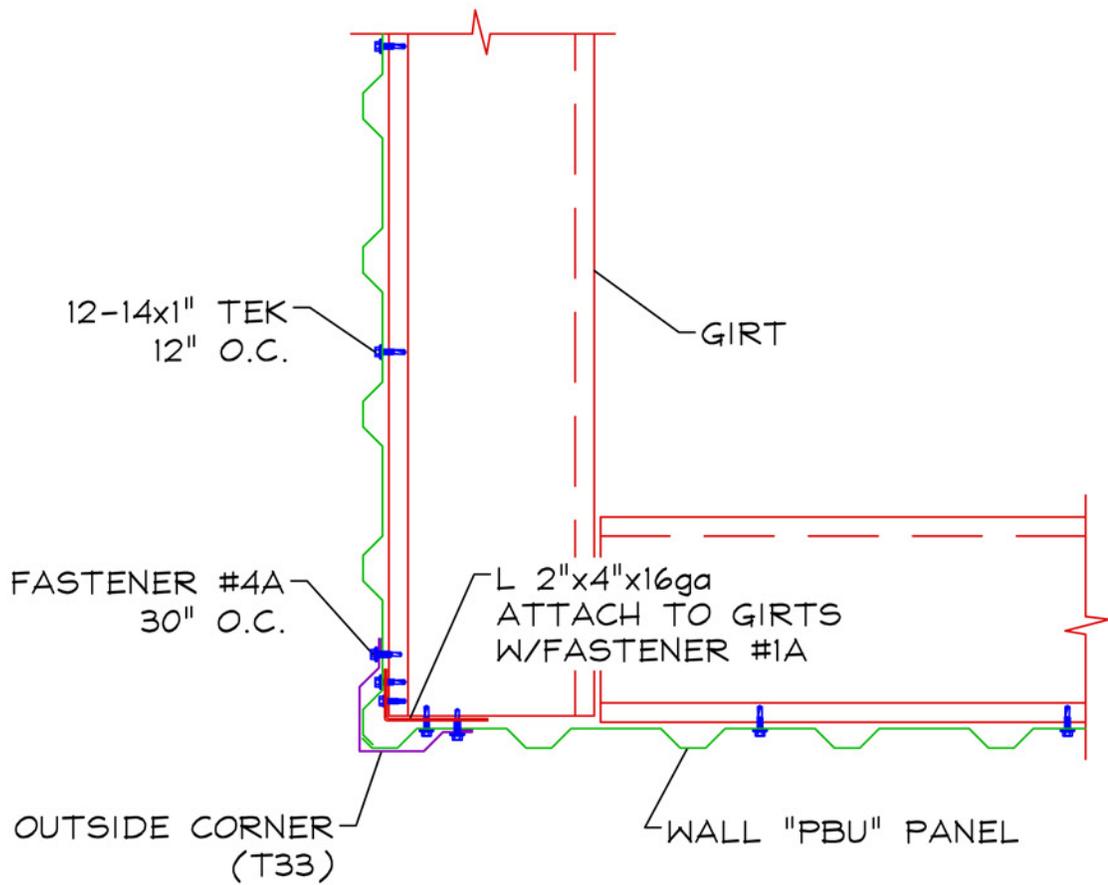


Corner

C06 - INSIDE "PBU" PANEL

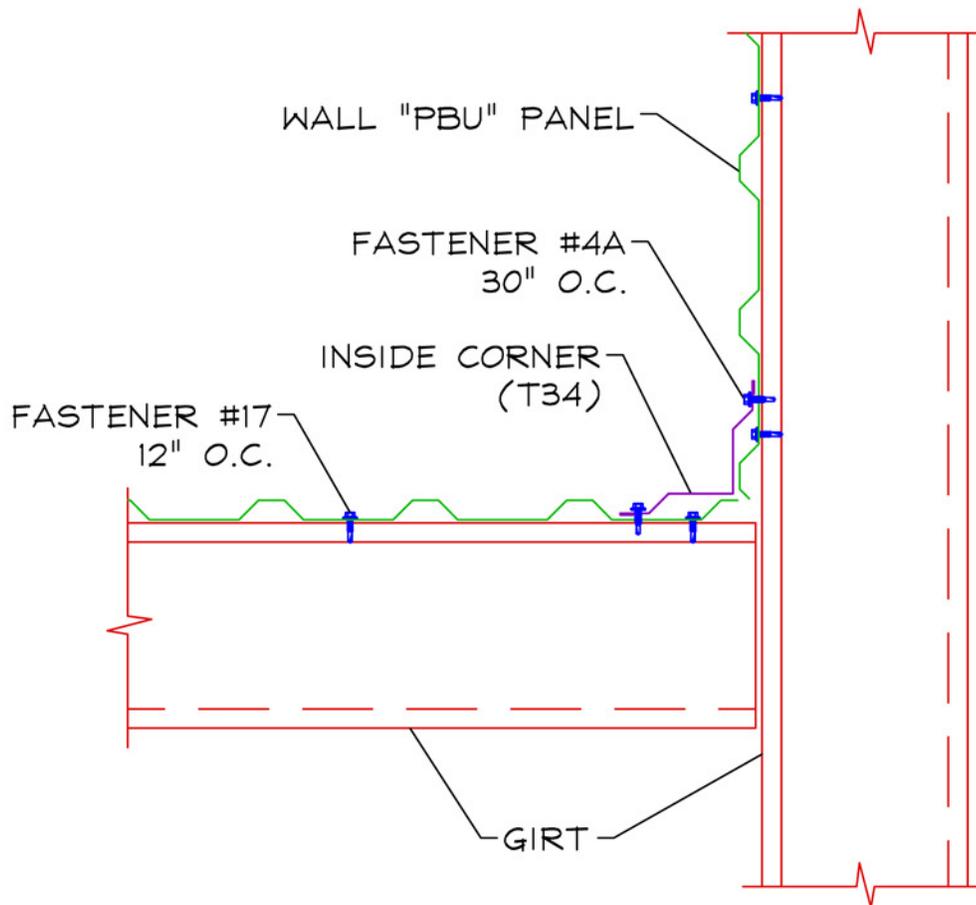


Corner

C07 - MASONRY OUTSIDE "PBR" PANEL

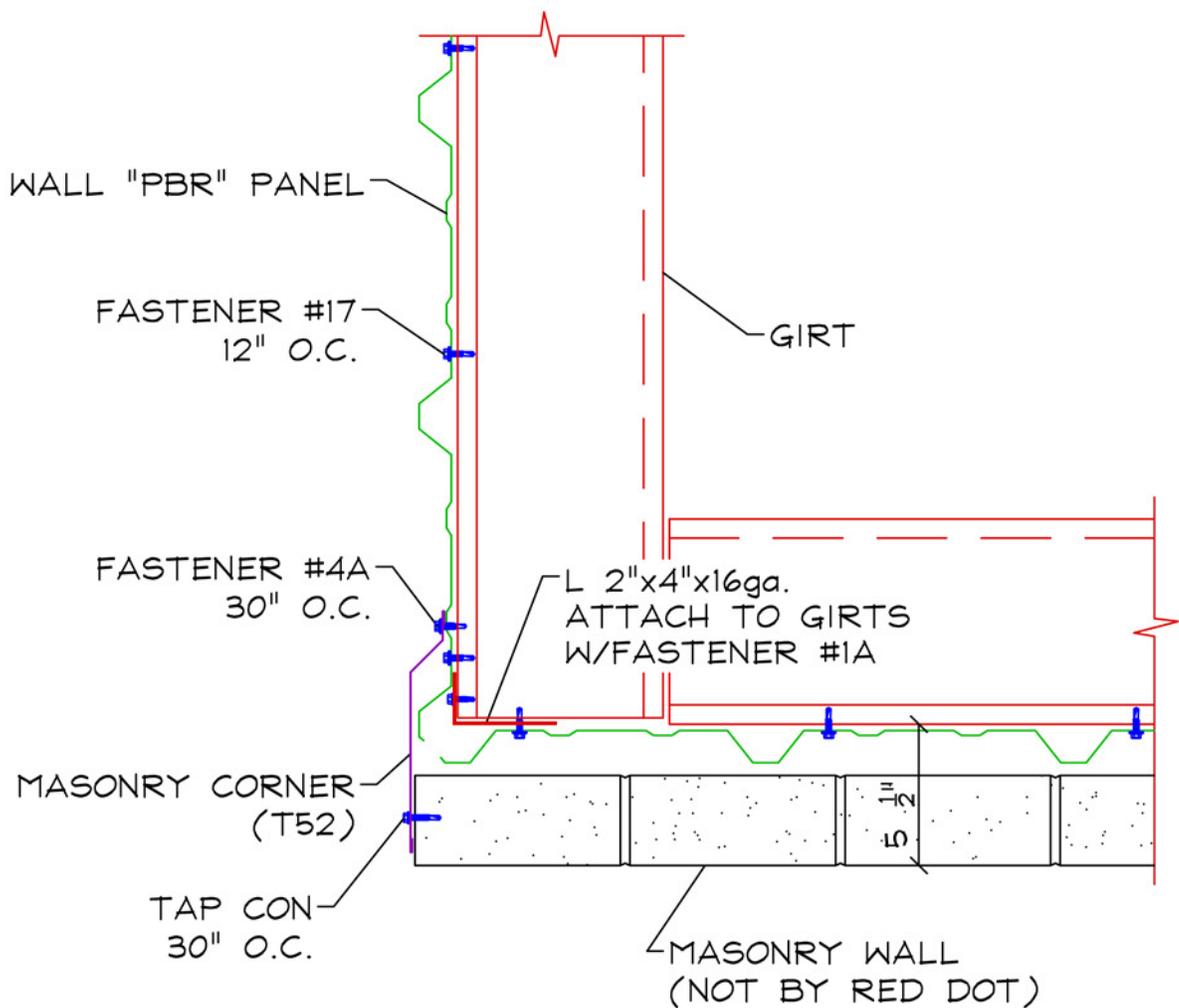


Corner

C08 - OUTSIDE "REV U" PANEL

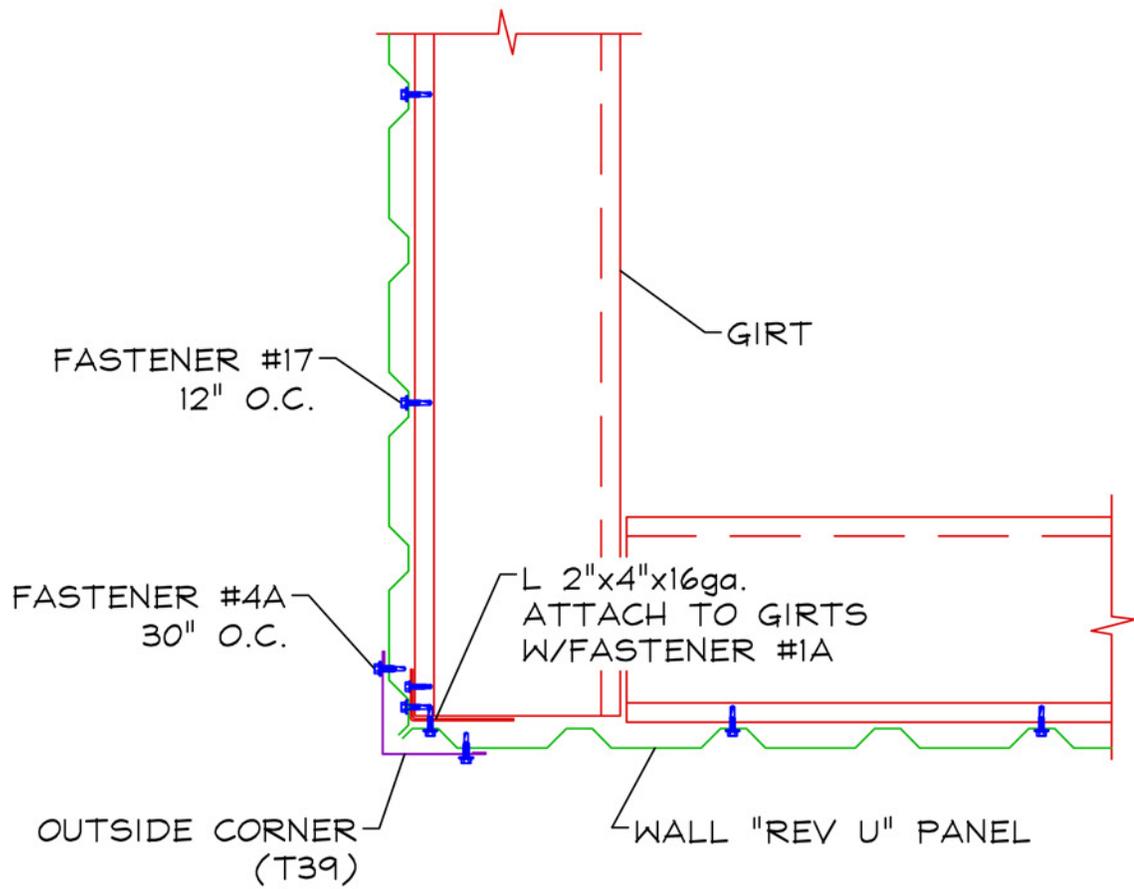


Corner

C09 - INSIDE "REV U" PANEL

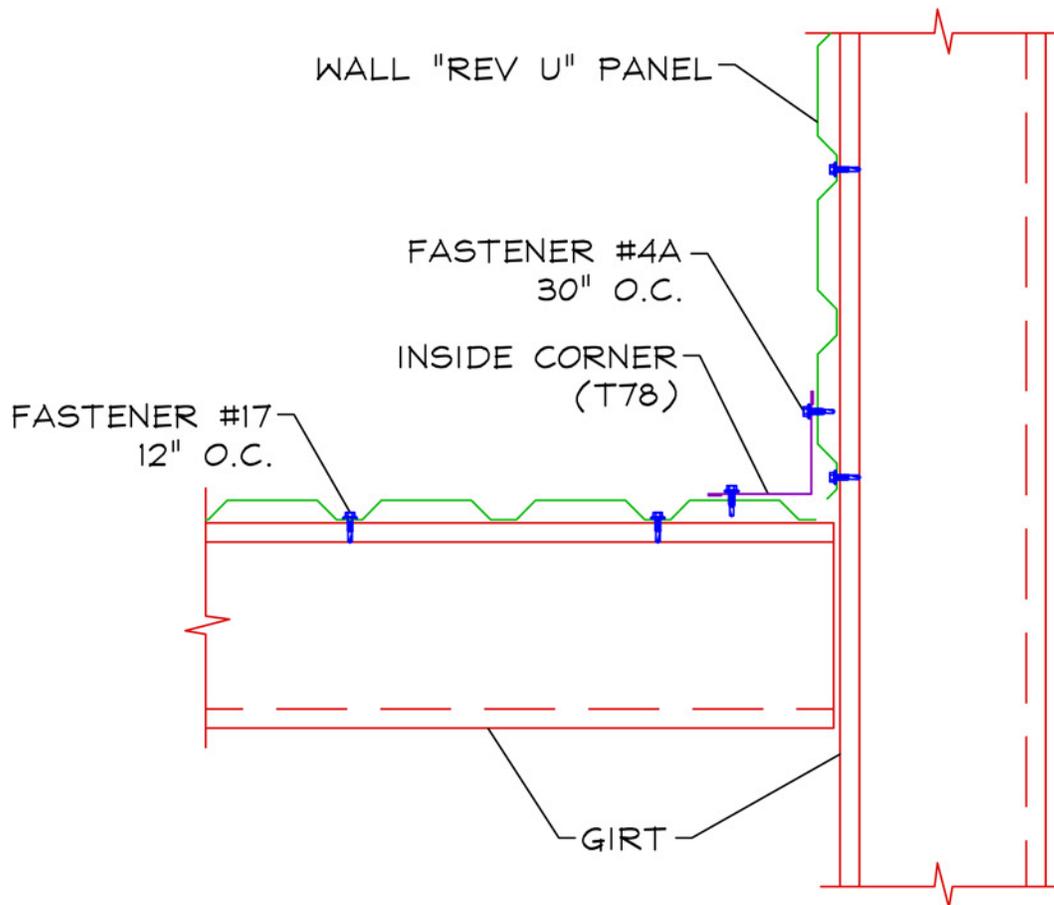

Framed Opening

FO01 - HEAD & JAMB

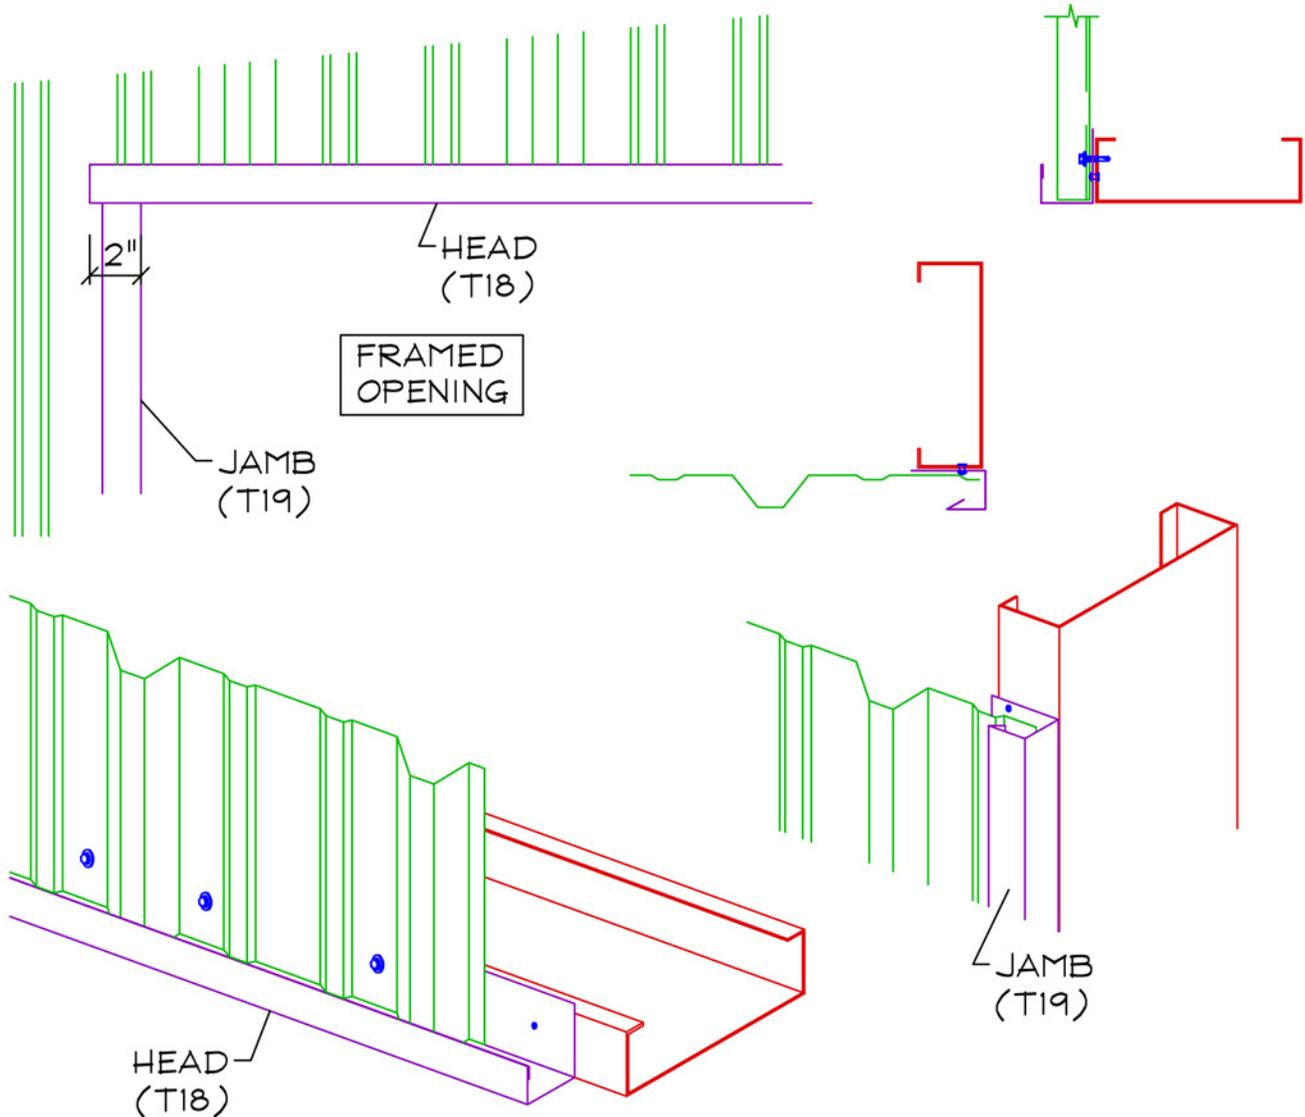


NOTES:

- 1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A POP RIVETS (24" O.C.)

Framed Opening

FO02 - 3070 HEAD & JAMB

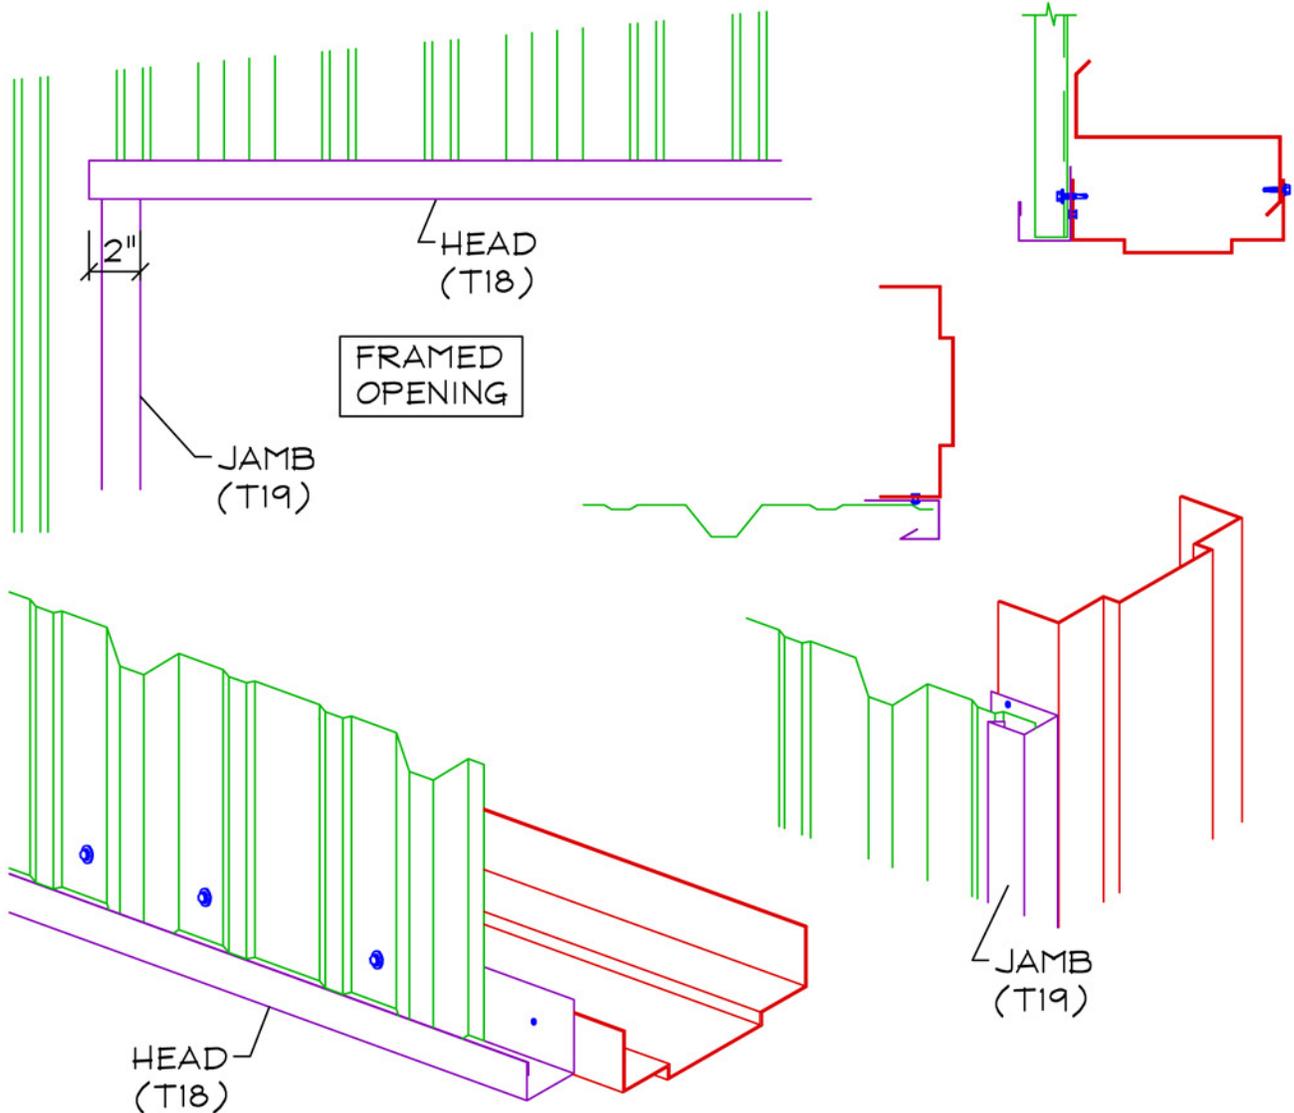


NOTES:

- 1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A POP RIVETS (24" O.C.)

Framed Opening

FO03 - ANGLE / HEAD & JAMB

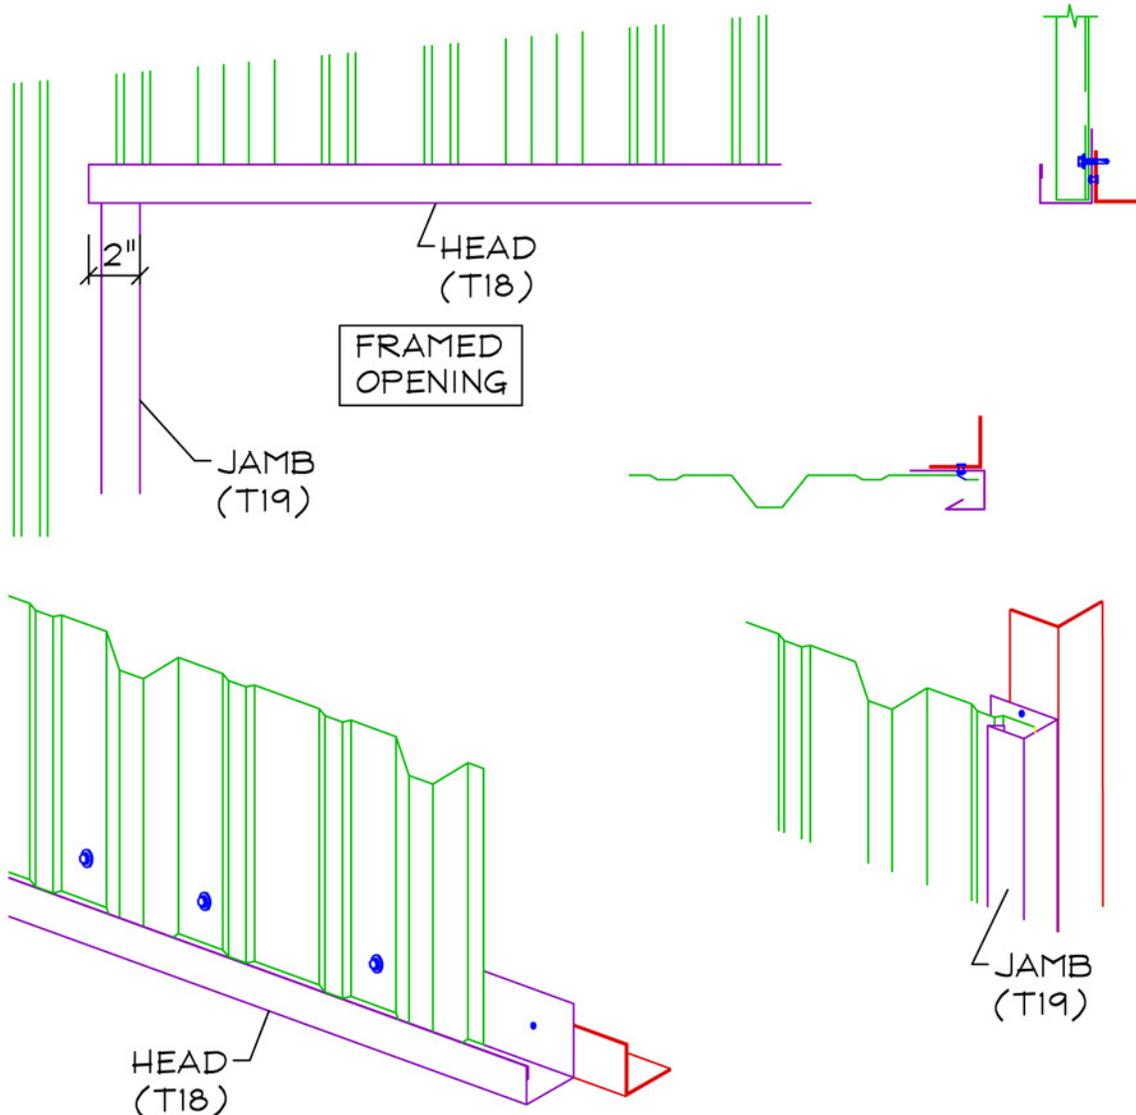


NOTES:

- 1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A POP RIVETS (24" O.C.)

Framed Opening

FO04 - SILL

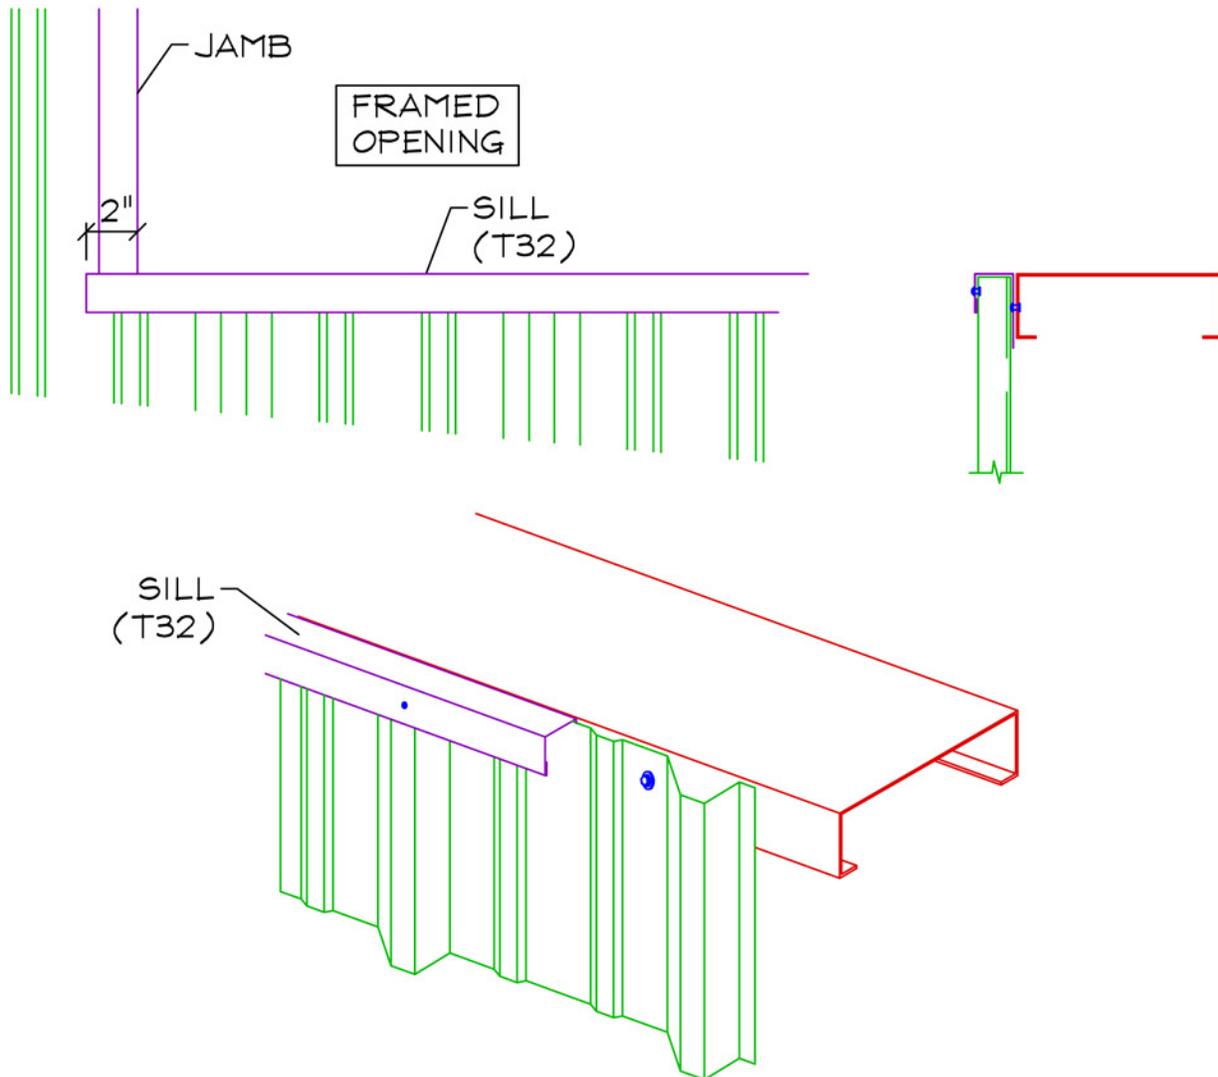


NOTES:

- 1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A POP RIVETS (24" O.C.)

Framed Opening

FO05 - ANGLE SILL

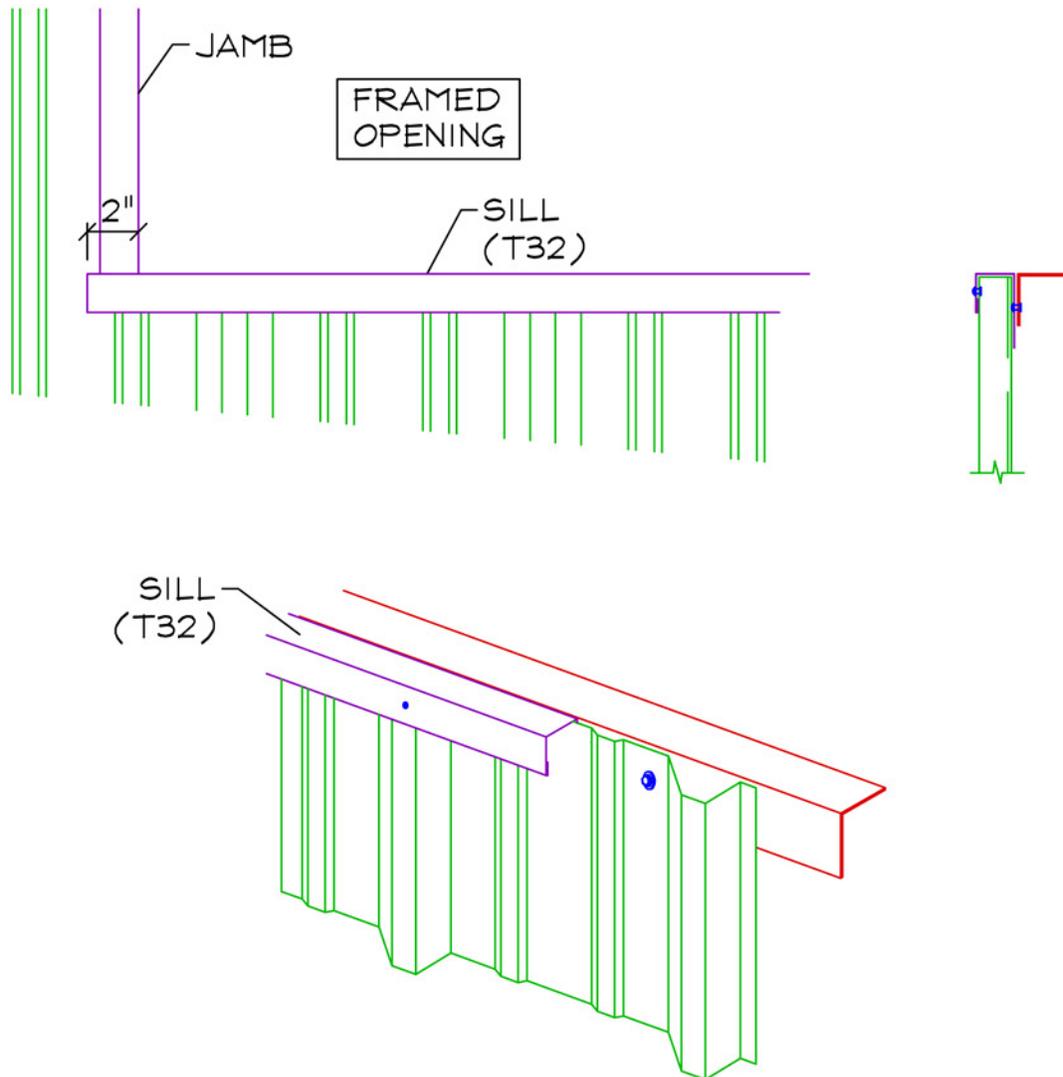


NOTES:

- 1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A POP RIVETS (24" O.C.)

Framed Opening

FO06 - HEAD & JAMB CHANNEL COVER

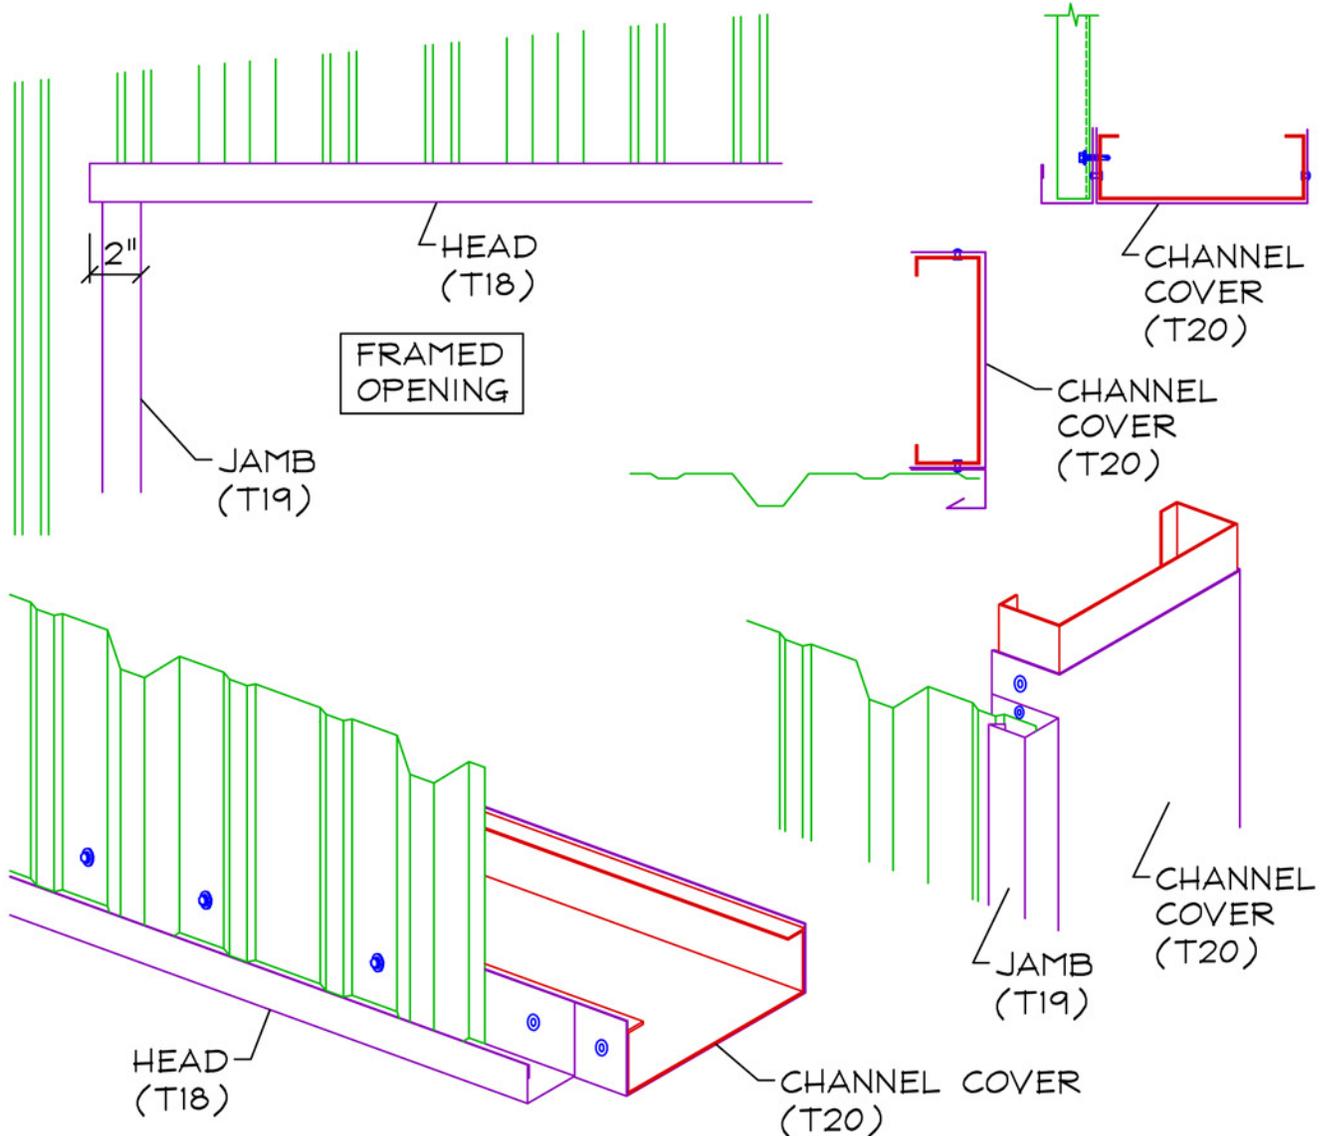


NOTES:

- 1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A POP RIVETS (24" O.C.)

Framed Opening

FO07 - HEAD & JAMB (REV. PBU)

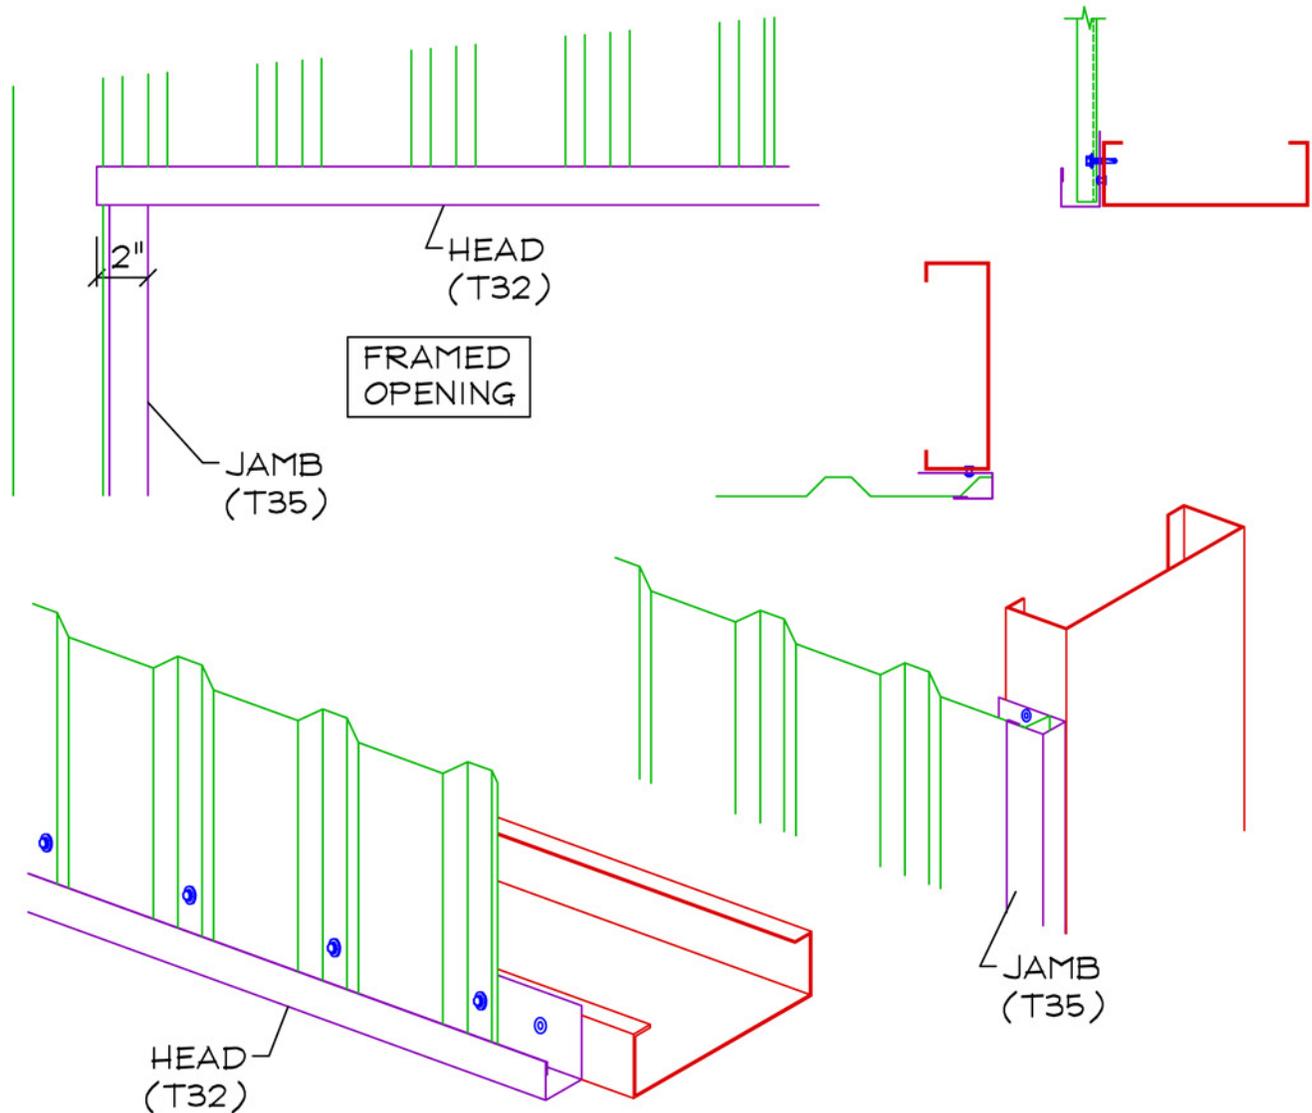


NOTES:

- 1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A POP RIVETS (24" O.C.)

Framed Opening

FO12 - HEAD & JAMB CHANNEL COVER (REV. PBU)

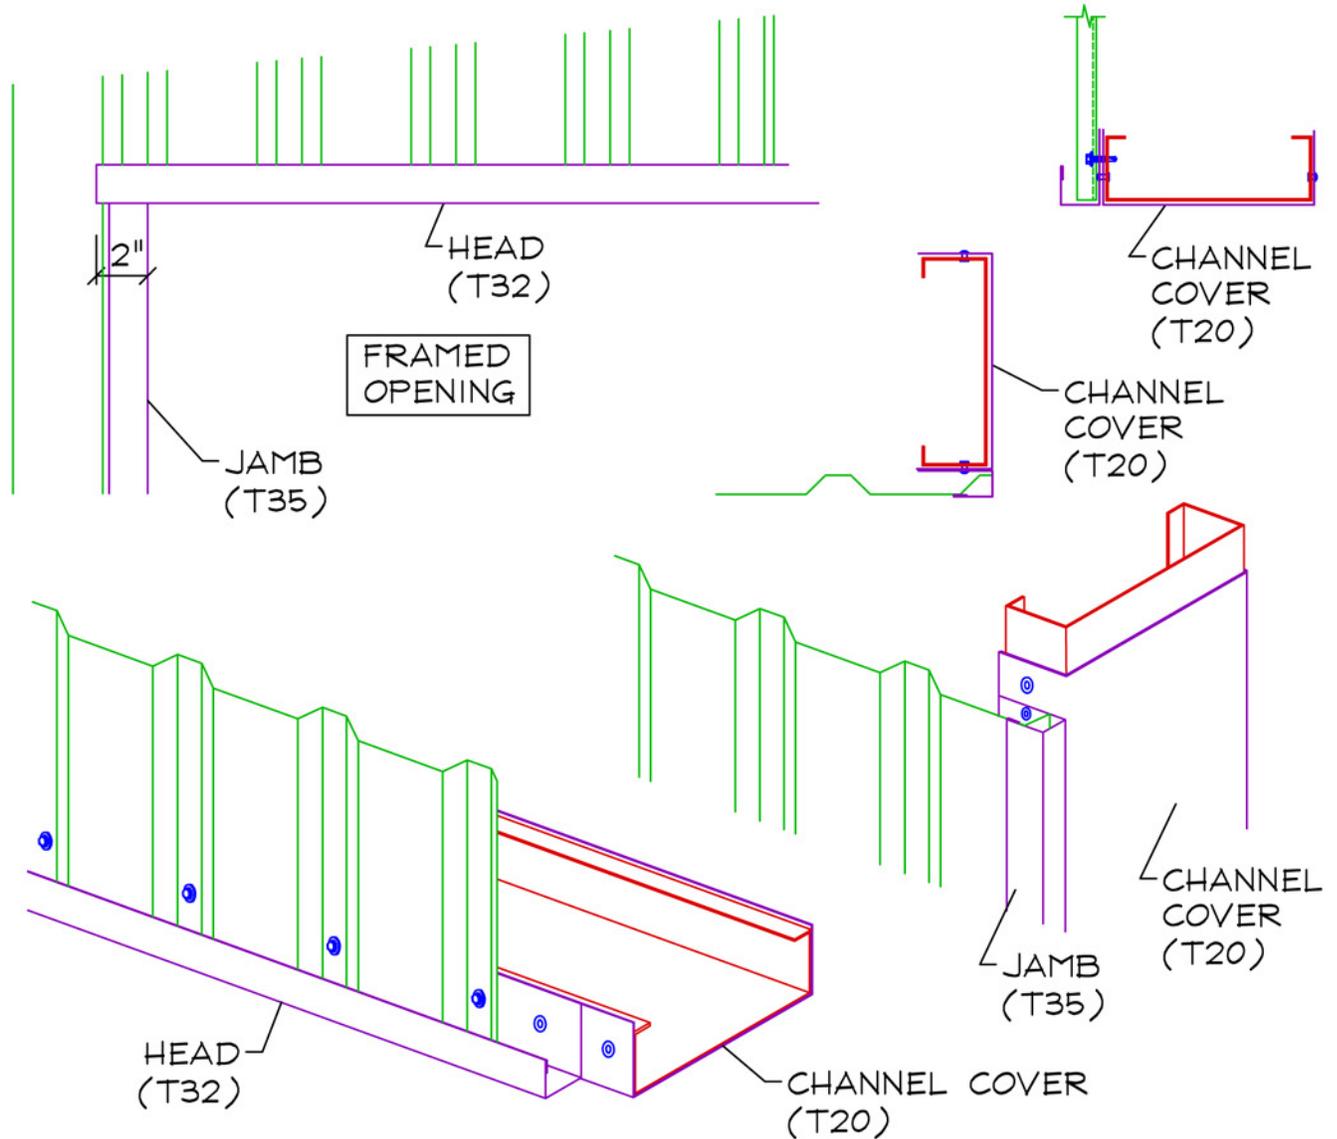


NOTES:

- 1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A POP RIVETS (24" O.C.)

TRIM SECTIONS

Base

B01 - ANGLE ATTACHMENT

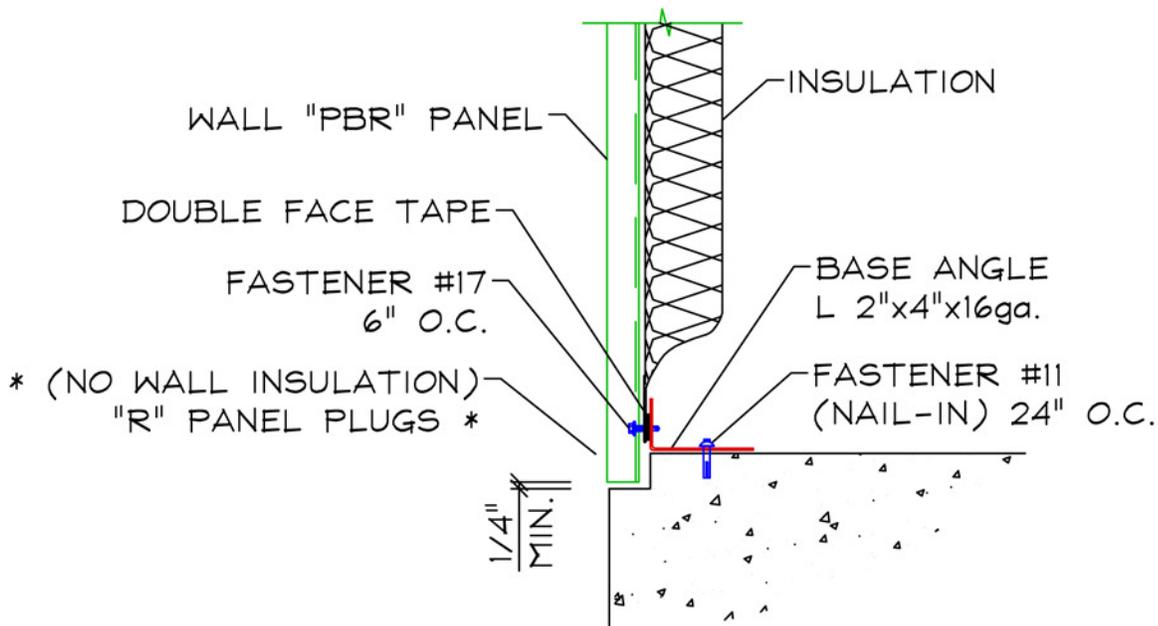


NOTES:

- 1) WALL WITH INSULATION, PULL BACK FIBERGLASS APPROXIMATELY 4" PULL OVER END AND STAPLE. APPLY DOUBLE FACE TAPE TO BASE ANGLE AND STICK INSULATION TO IT BEFORE APPLYING PANEL
- 2) INSTALL "R" PANEL PLUGS WHEN INSULATION IS NOT PRESENT.

Base

B02 - CEE ATTACHMENT

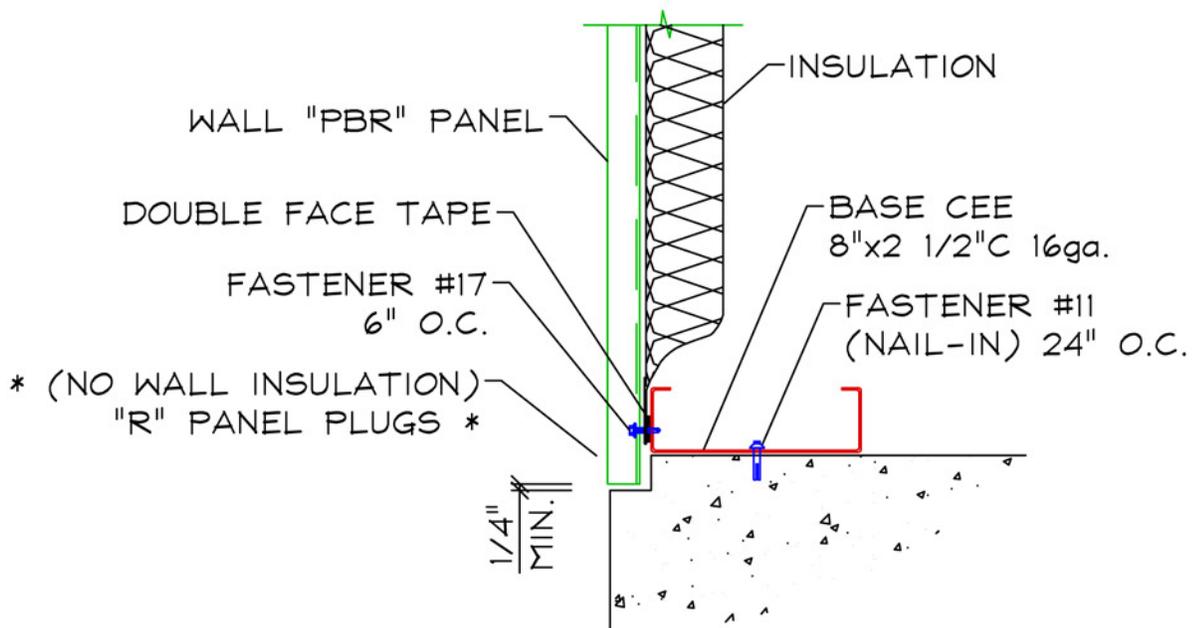


NOTES:

- 1) WALL WITH INSULATION, PULL BACK FIBERGLASS APPROXIMATELY 4" PULL OVER END AND STAPLE. APPLY DOUBLE FACE TAPE TO BASE CEE AND STICK INSULATION TO IT BEFORE APPLYING PANEL.
- 2) INSTALL "R" PANEL PLUGS WHEN INSULATION IS NOT PRESENT.

Base

B03 - BASE GIRT CONDITION

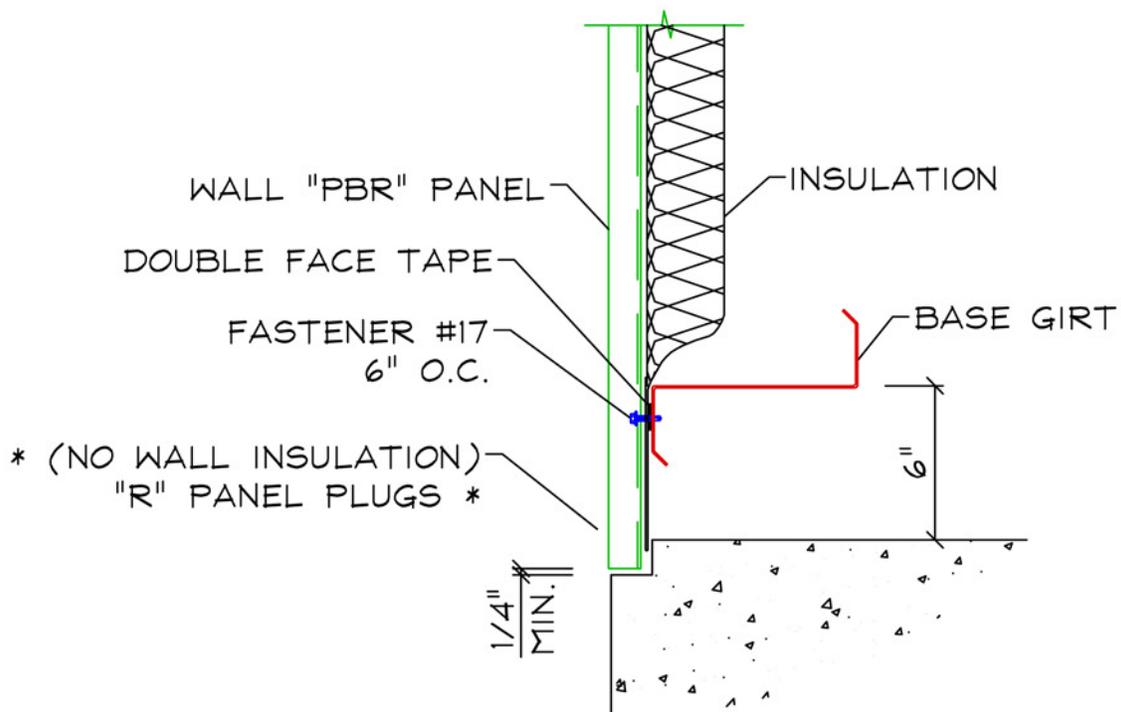


NOTES:

- 1) WALL WITH INSULATION, PULL BACK FIBERGLASS APPROXIMATELY 4", PULL OVER END AND STAPLE. APPLY DOUBLE FACE TAPE TO BASE GIRT AND STICK INSULATION TO IT BEFORE APPLYING PANEL
- 2) INSTALL "R" PANEL PLUGS WHEN INSULATION IS NOT PRESENT.

Base

B04 - ANGLE ATTACHMENT WITH BASE TRIM

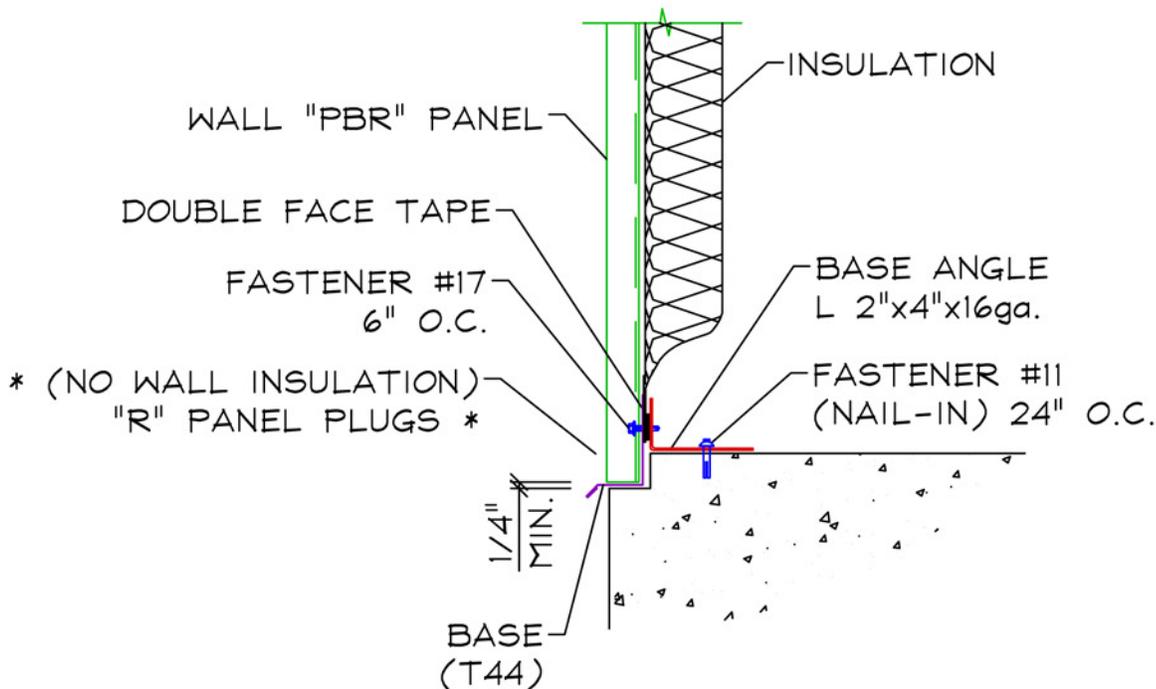


NOTES:

- 1) WALL WITH INSULATION, PULL BACK FIBERGLASS APPROXIMATELY 4" PULL OVER END AND STAPLE. APPLY DOUBLE FACE TAPE TO BASE ANGLE AND STICK INSULATION TO IT BEFORE APPLYING PANEL
- 2) TEMPORARILY ATTACH BASE TRIM TO BASE ANGLE WITH TWO POP RIVETS UNTIL PANELS ARE INSTALLED.
- 3) INSTALL "R" PANEL PLUGS WHEN INSULATION IS NOT PRESENT.

Base

B05 - ANGLE ATTACHMENT WITH BASE TRIM - NO NOTCH

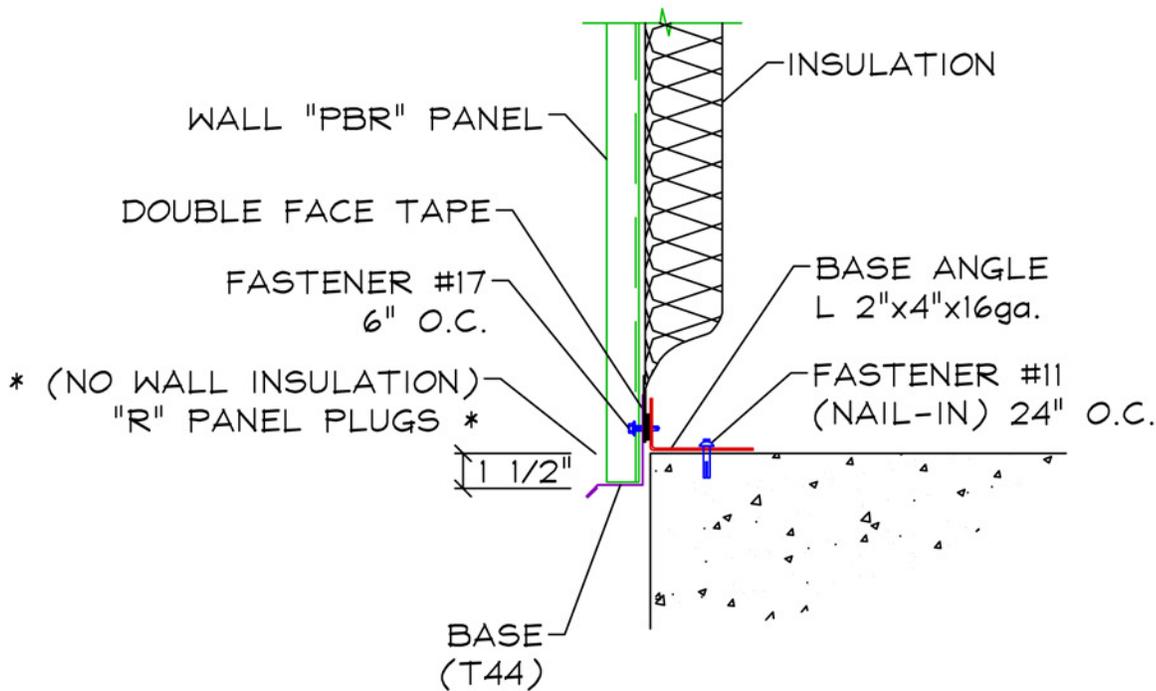


NOTES:

- 1) WALL WITH INSULATION, PULL BACK FIBERGLASS APPROXIMATELY 4" PULL OVER END AND STAPLE. APPLY DOUBLE FACE TAPE TO BASE ANGLE AND STICK INSULATION TO IT BEFORE APPLYING PANEL
- 2) TEMPORARILY ATTACH BASE TRIM TO BASE ANGLE WITH TWO FASTENER #14A POP RIVETS UNTIL PANELS ARE INSTALLED.
- 3) INSTALL "R" PANEL PLUGS WHEN INSULATION IS NOT PRESENT.

Base

B06 - MASONRY ANGLE ATTACHMENT

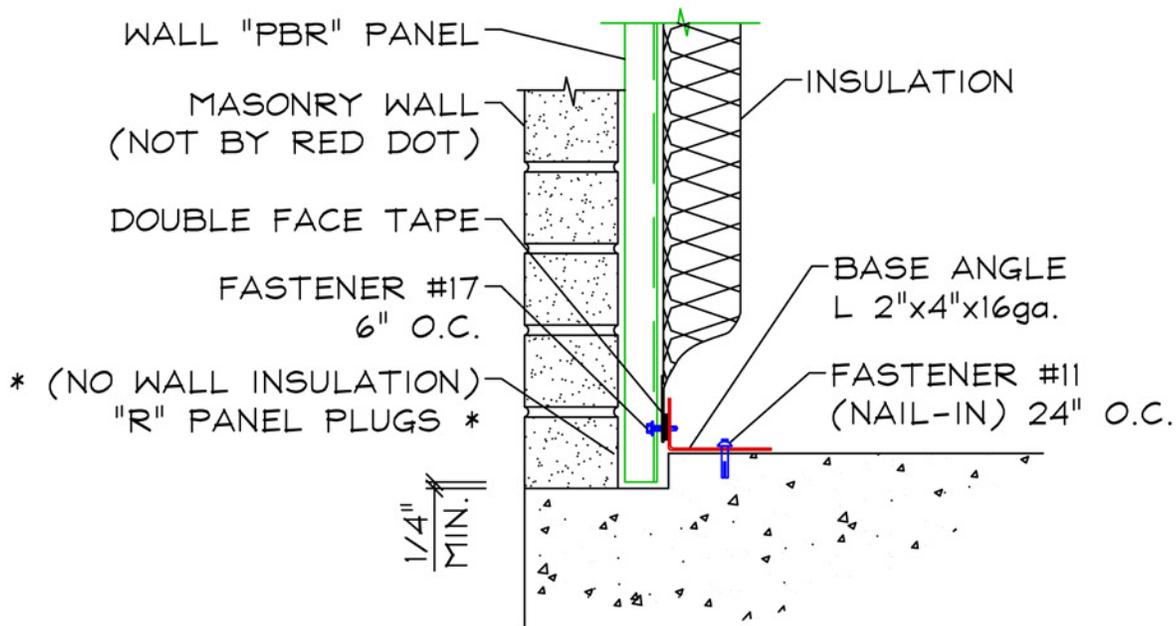


NOTES:


- 1) WALL WITH INSULATION, PULL BACK FIBERGLASS APPROXIMATELY 4" PULL OVER END AND STAPLE. APPLY DOUBLE FACE TAPE TO BASE ANGLE AND STICK INSULATION TO IT BEFORE APPLYING PANEL
- 2) INSTALL "R" PANEL PLUGS WHEN INSULATION IS NOT PRESENT.

Screw Spacing

SSP01 - ROOF "PBR" PANEL

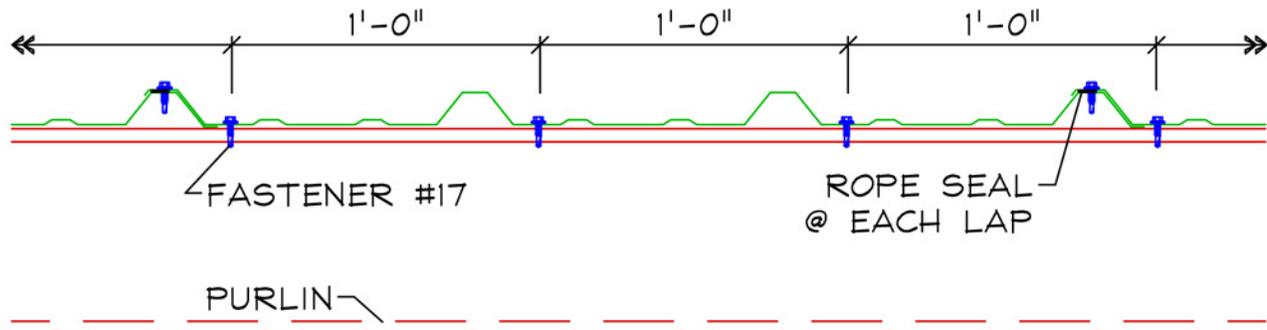

SCREWS CONNECTING PANELS TO INTERMEDIATE LOCATIONS.

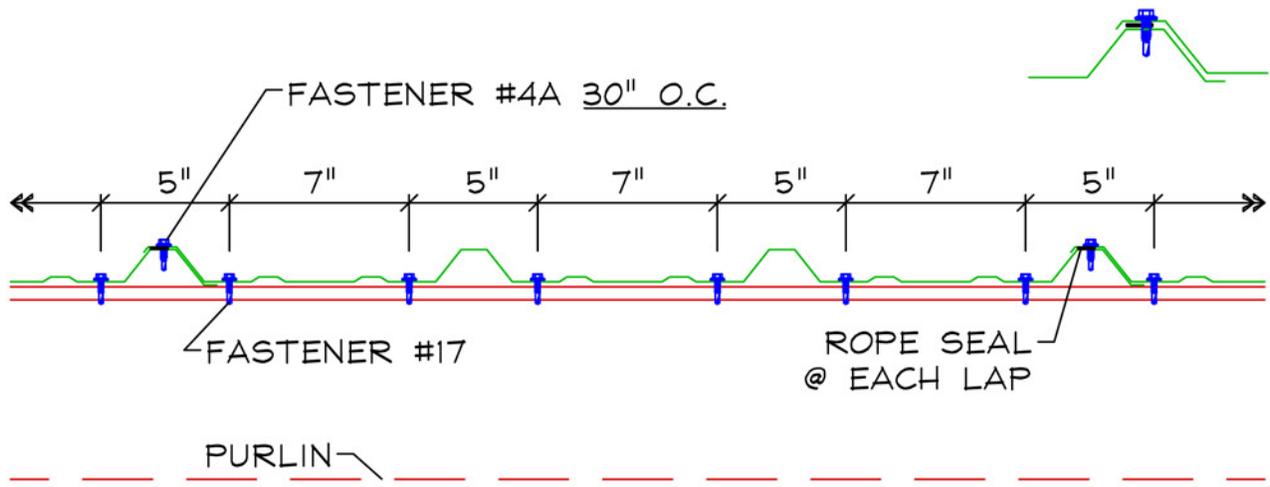


SCREWS CONNECTING PANELS TO EAVE, LAP & PEAK.

NOTES:


- 1) TAPE SEALER MUST BE INSTALLED BETWEEN WEATHER INFILTRATION POINT AND FASTENER.

Screw Spacing

SSP02 - ROOF "PBR" PANEL (UL-90)

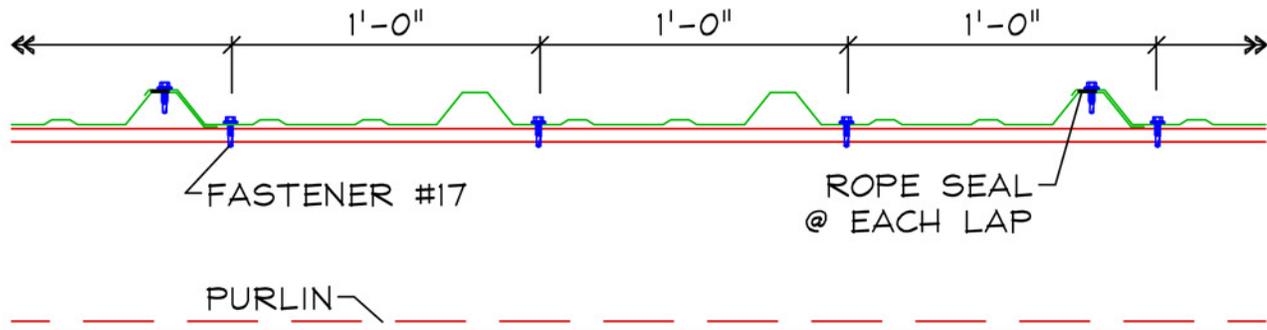

SCREWS CONNECTING PANELS TO INTERMEDIATE LOCATIONS.

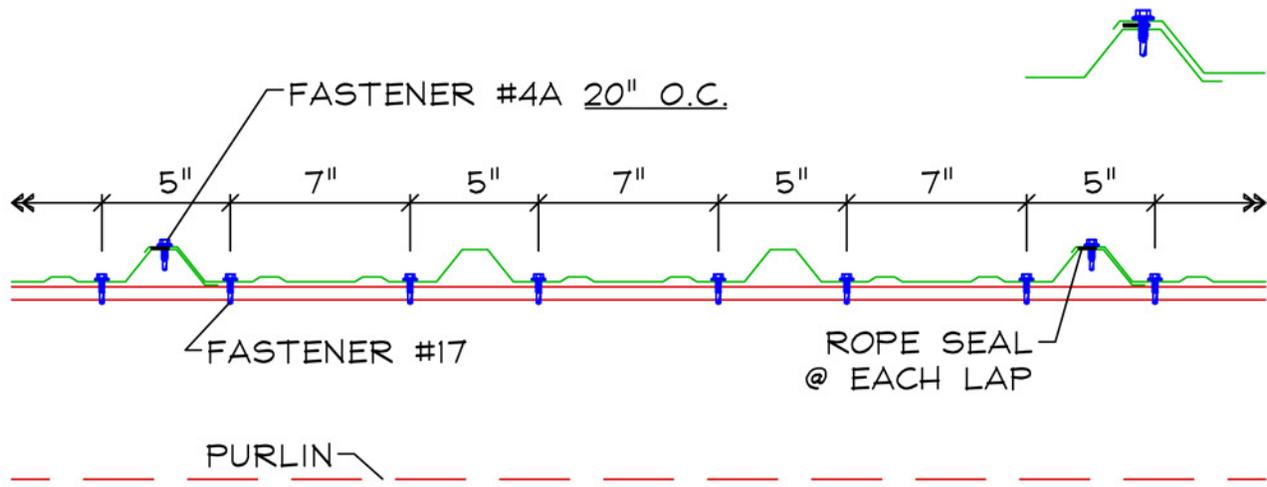


SCREWS CONNECTING PANELS TO EAVE, LAP & PEAK.

NOTES:

- 1) TAPE SEALER MUST BE INSTALLED BETWEEN WEATHER INFILTRATION POINT AND FASTENER.


Screw Spacing

SSP03 - WALL "PBR" PANEL

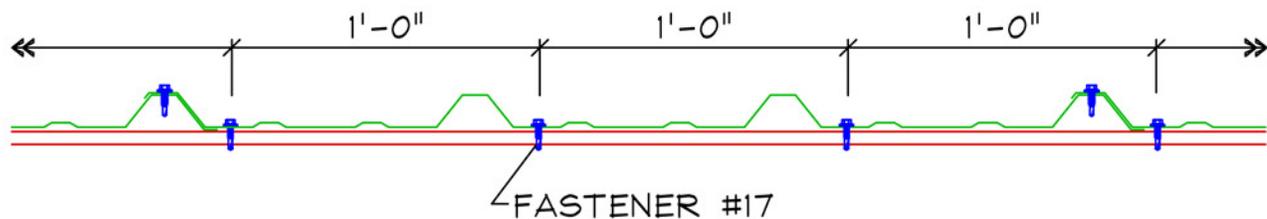

GIRT

SCREWS CONNECTING PANELS TO INTERMEDIATE LOCATIONS.


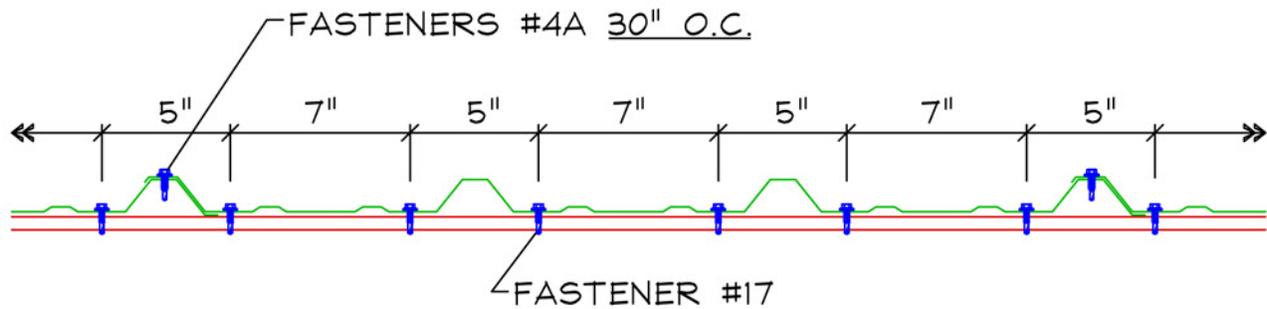


GIRT

SCREWS CONNECTING PANELS TO BASE, LAP & EAVE


Screw Spacing

SSP04 - WALL "PBA" PANEL

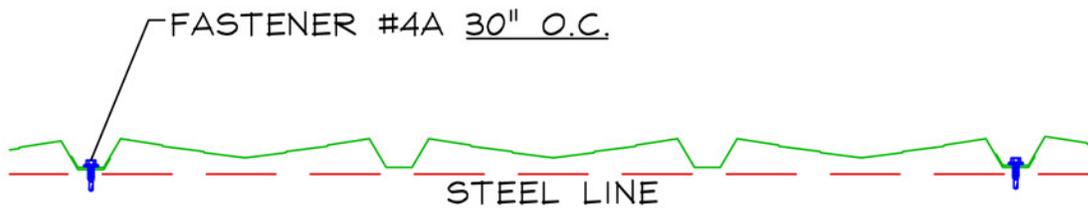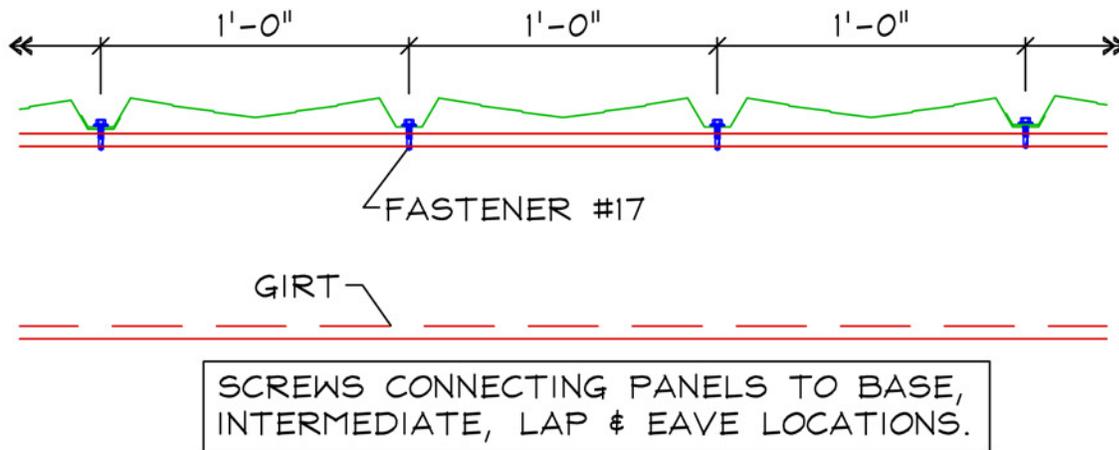


Screw Spacing

SSP05 - WALL "PBU" PANEL

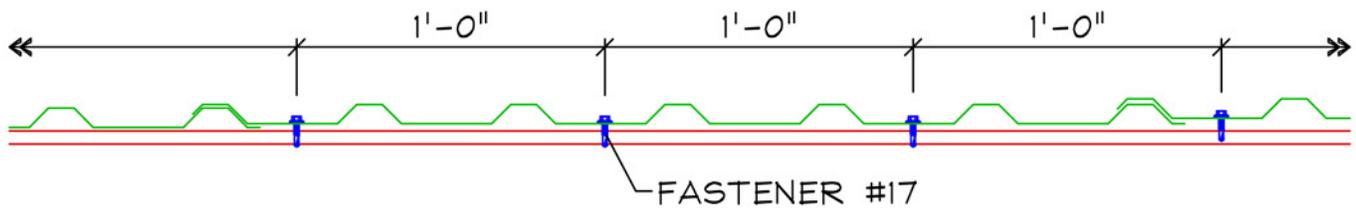

GIRT

SCREWS CONNECTING PANELS TO INTERMEDIATE LOCATIONS.


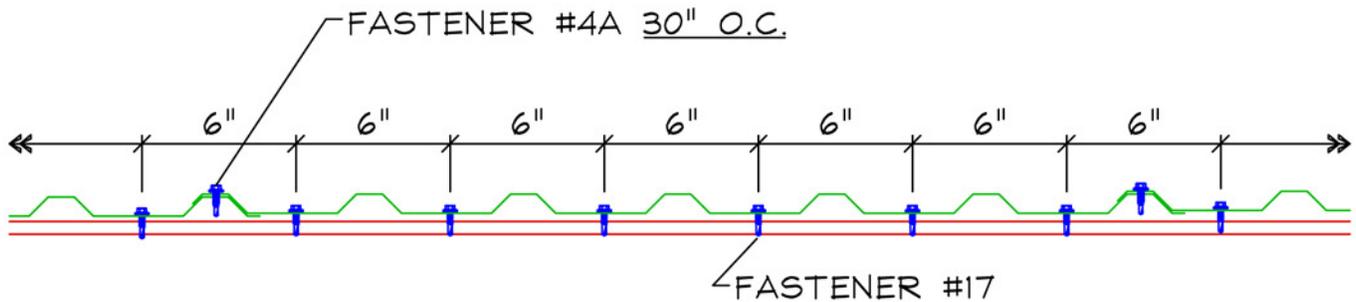


GIRT

SCREWS CONNECTING PANELS TO BASE, LAP & EAVE



Screw Spacing

SSP06 - WALL "REV PBU" PANEL

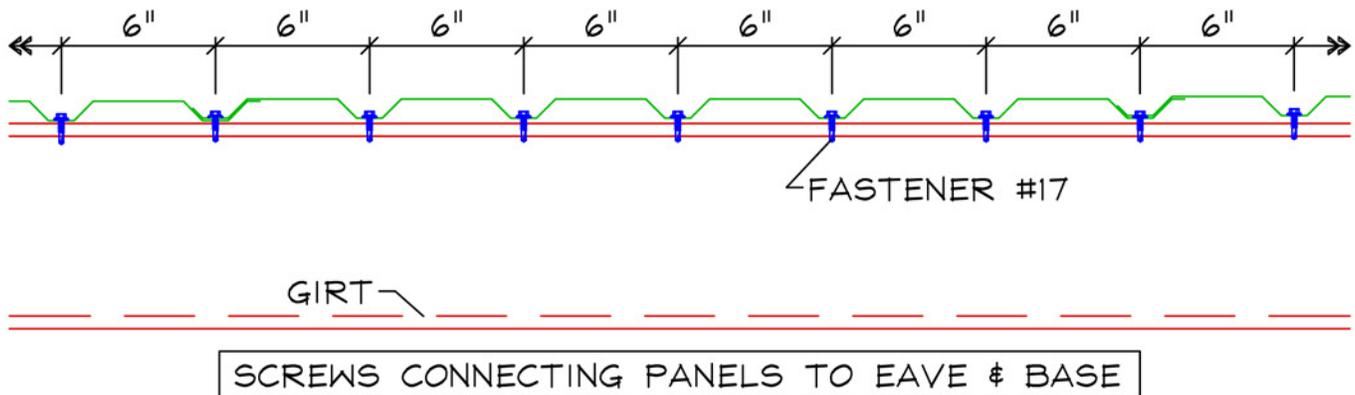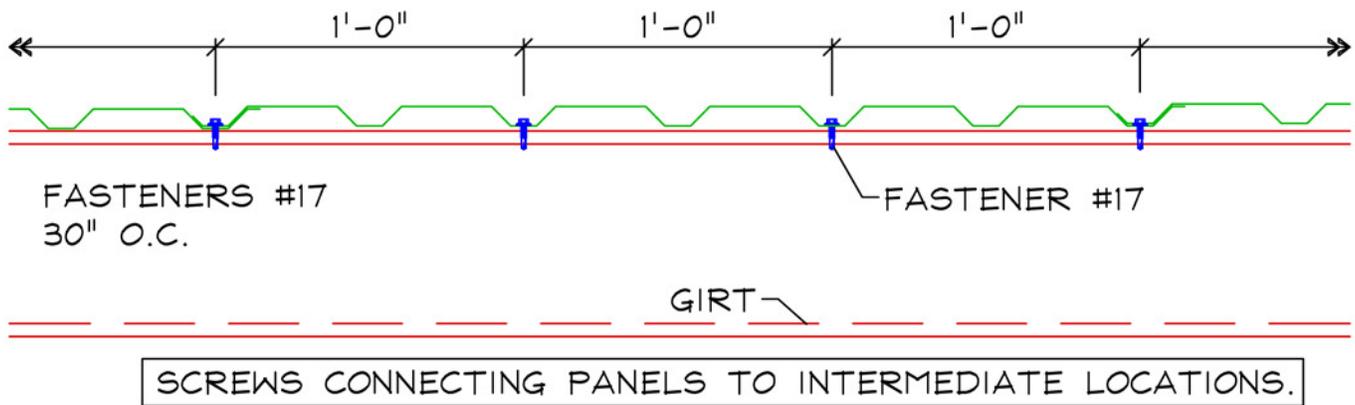

Screw Spacing

SSP07 - ROOF "PBU" PANEL

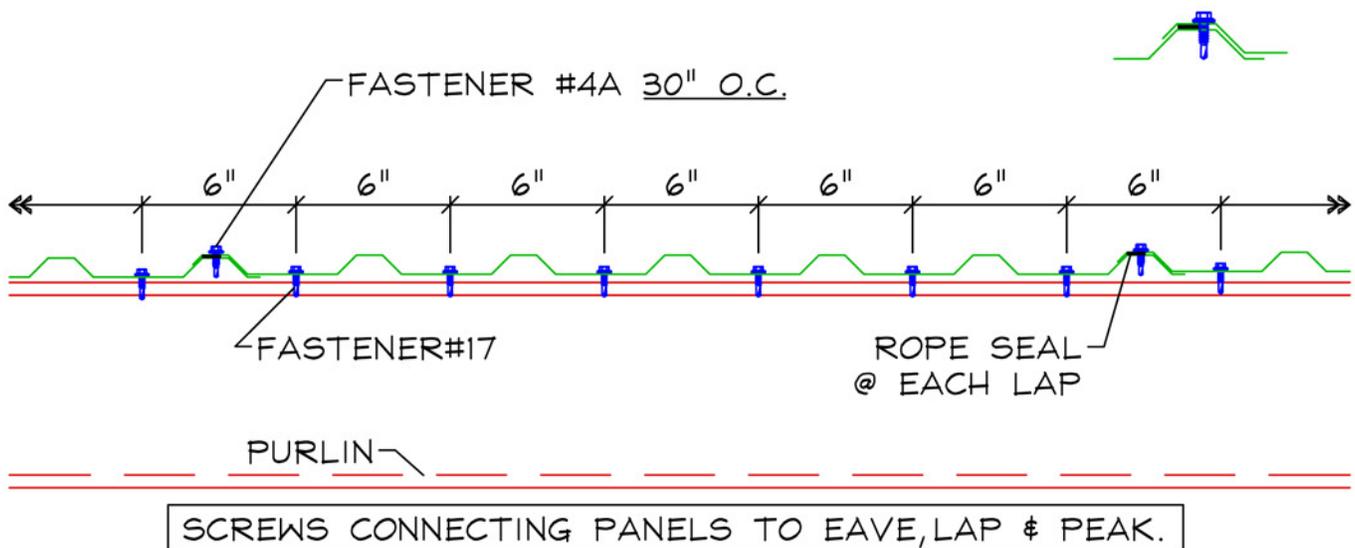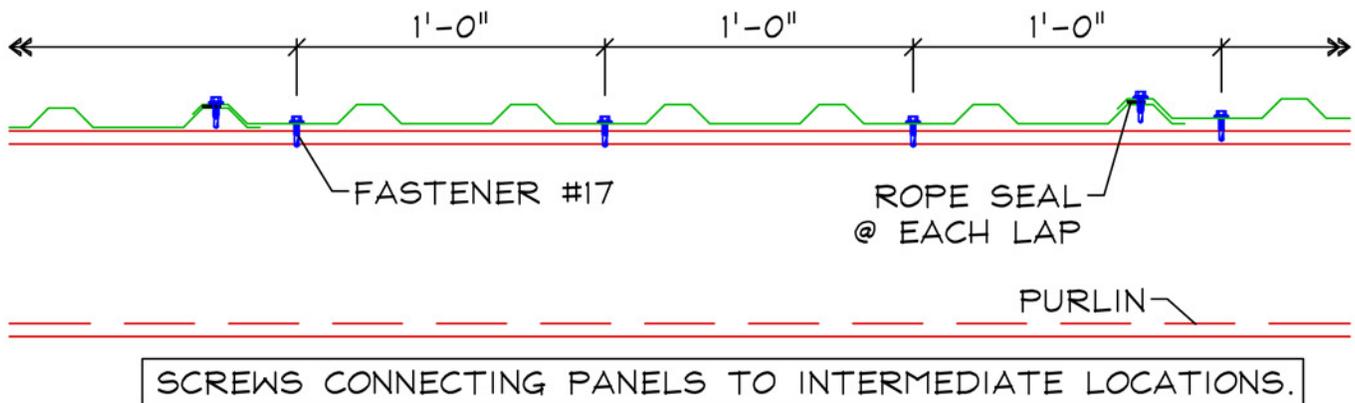


NOTES:

- 1) TAPE SEALER MUST BE INSTALLED BETWEEN WEATHER INFILTRATION POINT AND FASTENER.

Liner

L01 - BASE

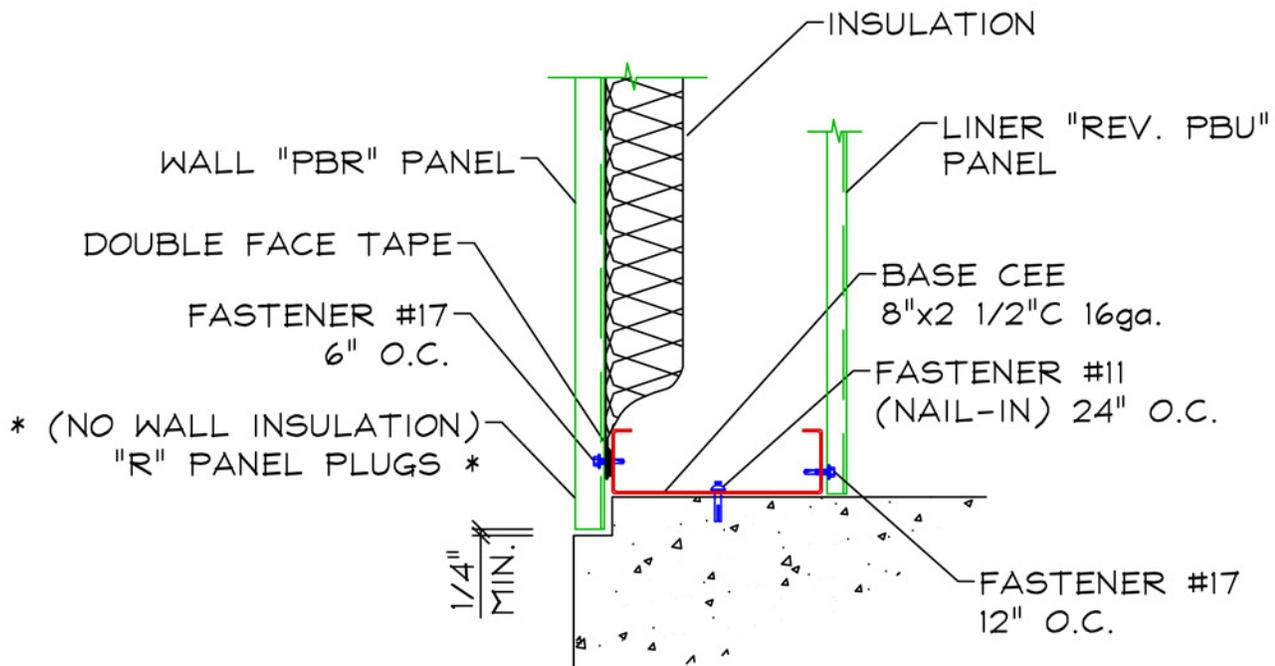


NOTES:

- 1) WALL WITH INSULATION, PULL BACK FIBERGLASS APPROXIMATELY 4" PULL OVER END AND STAPLE. APPLY DOUBLE FACE TAPE TO BASE CEE AND STICK INSULATION TO IT BEFORE APPLYING PANEL.
- 2) INSTALL "R" PANEL PLUGS WHEN INSULATION IS NOT PRESENT.

Liner

L10 - RAKE (FULL HEIGHT LINER)

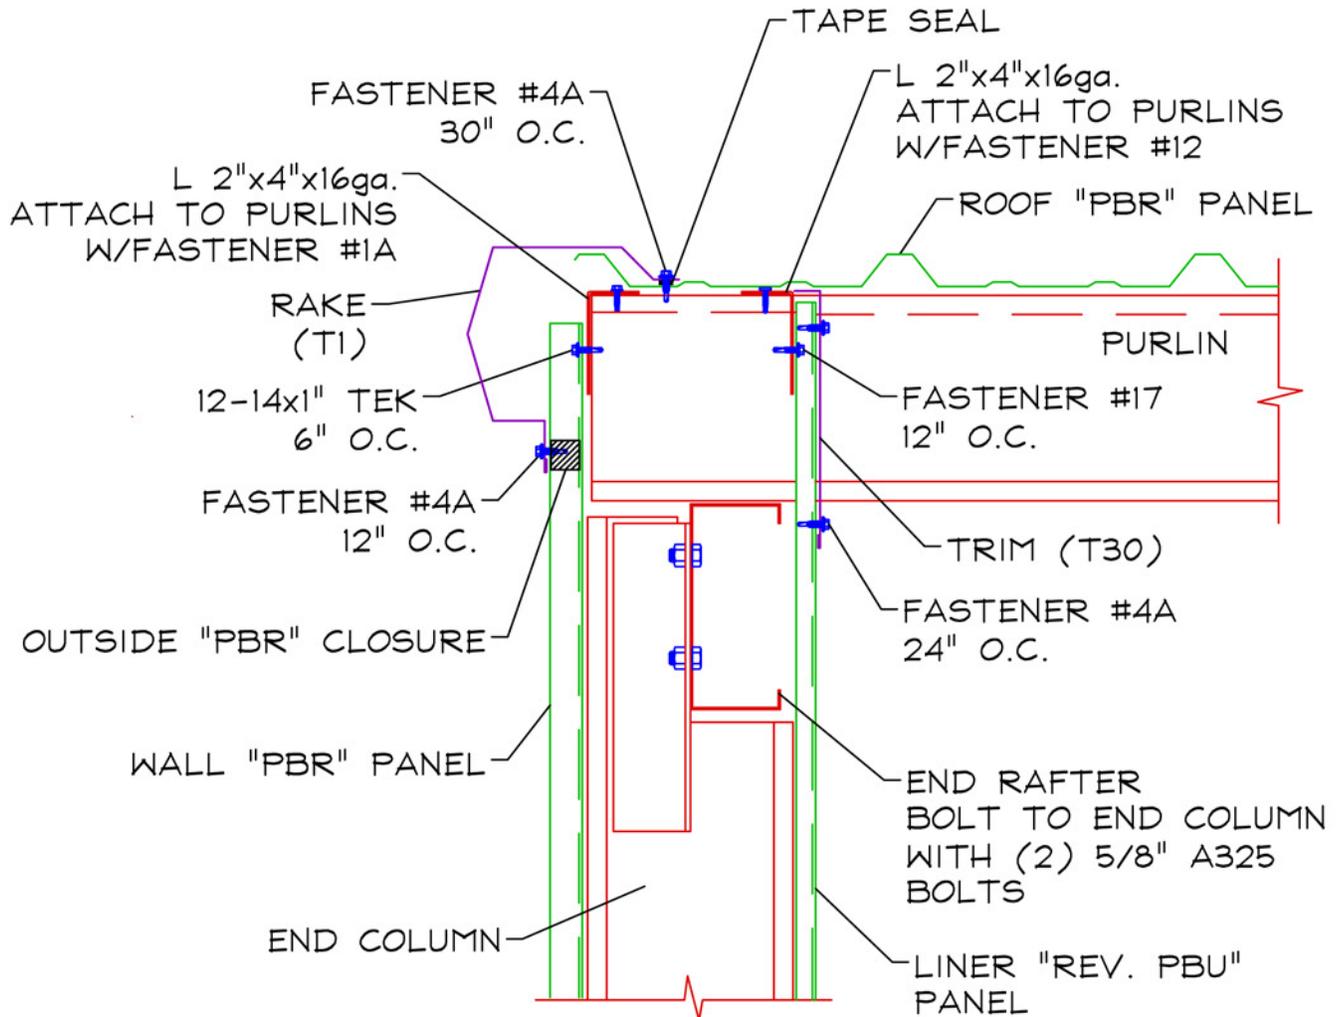


NOTES:

- 1) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.
- 2) INSTALL TAPE SEAL TO BOTTOM SIDE OF RAKE TRIM LEG CONTINUOUS.


Liner

L11 - INSIDE CORNER

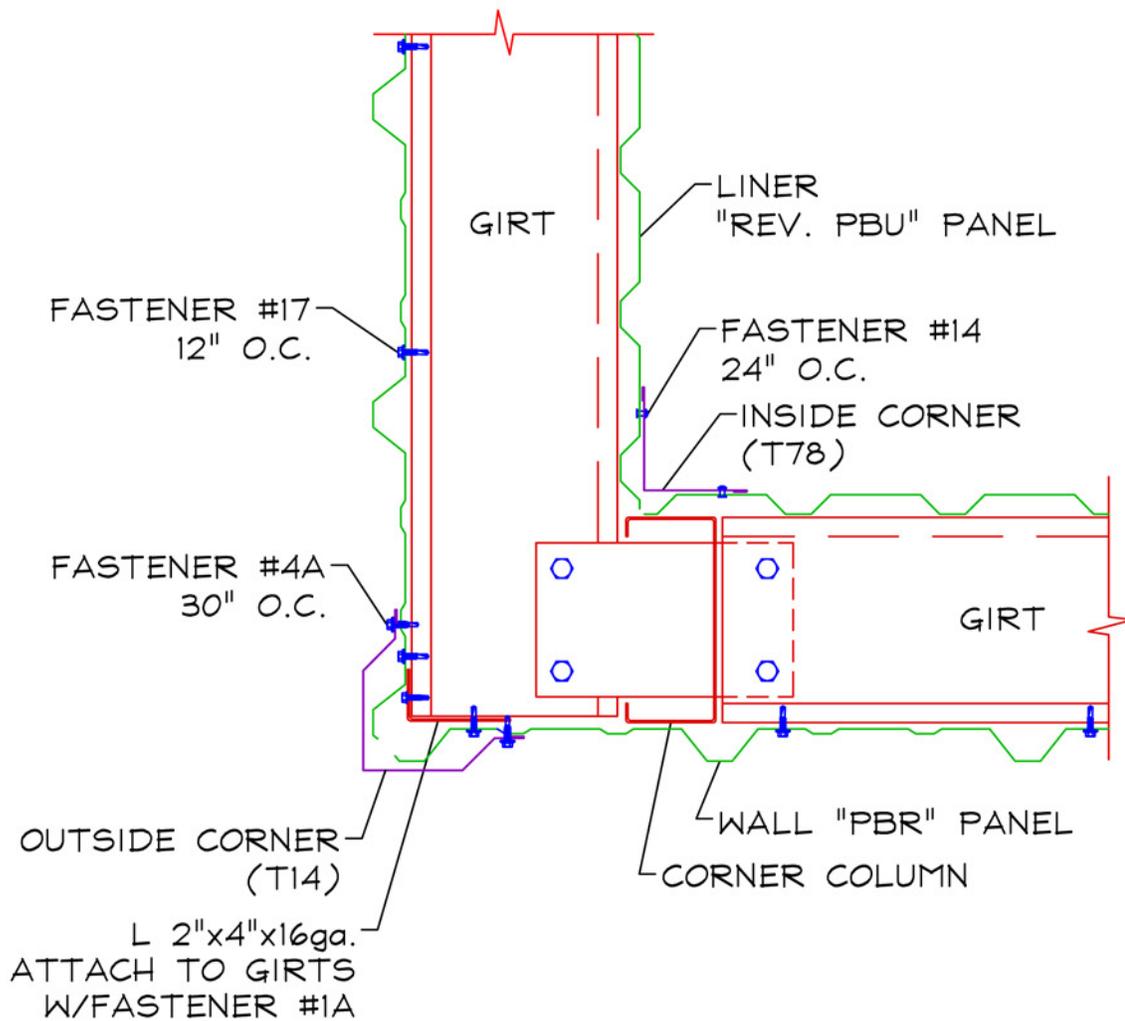


Liner

L02 - CAP

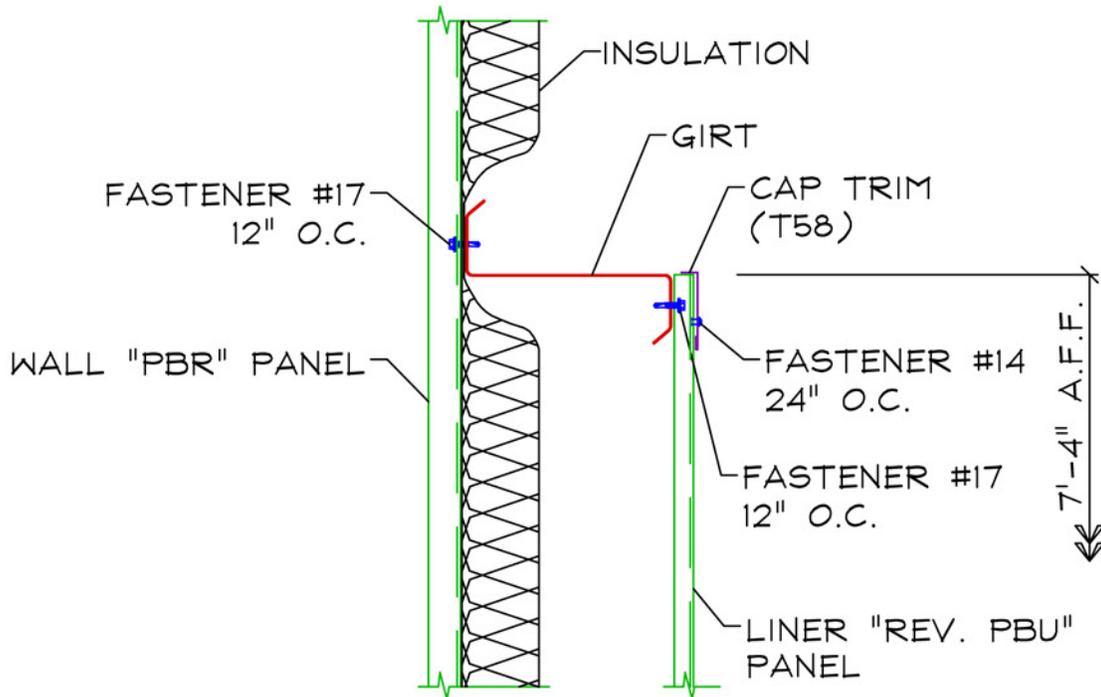


Liner

L03 - TERMINATION (FLUSH GIRTS)

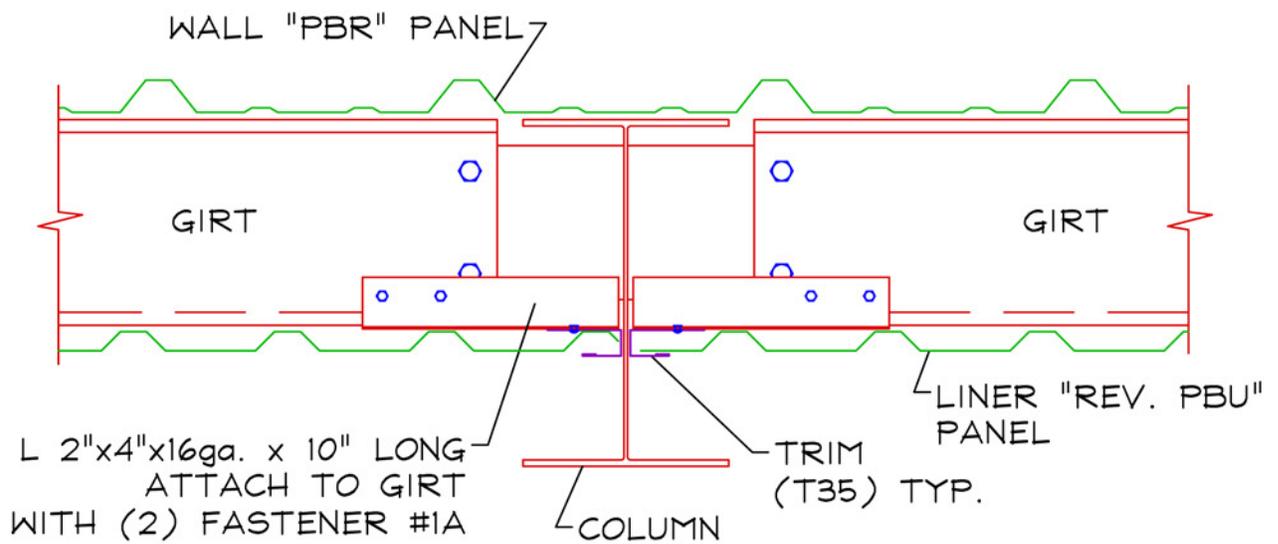


Liner

L04 - TERMINATION (BYPASS GIRTS)

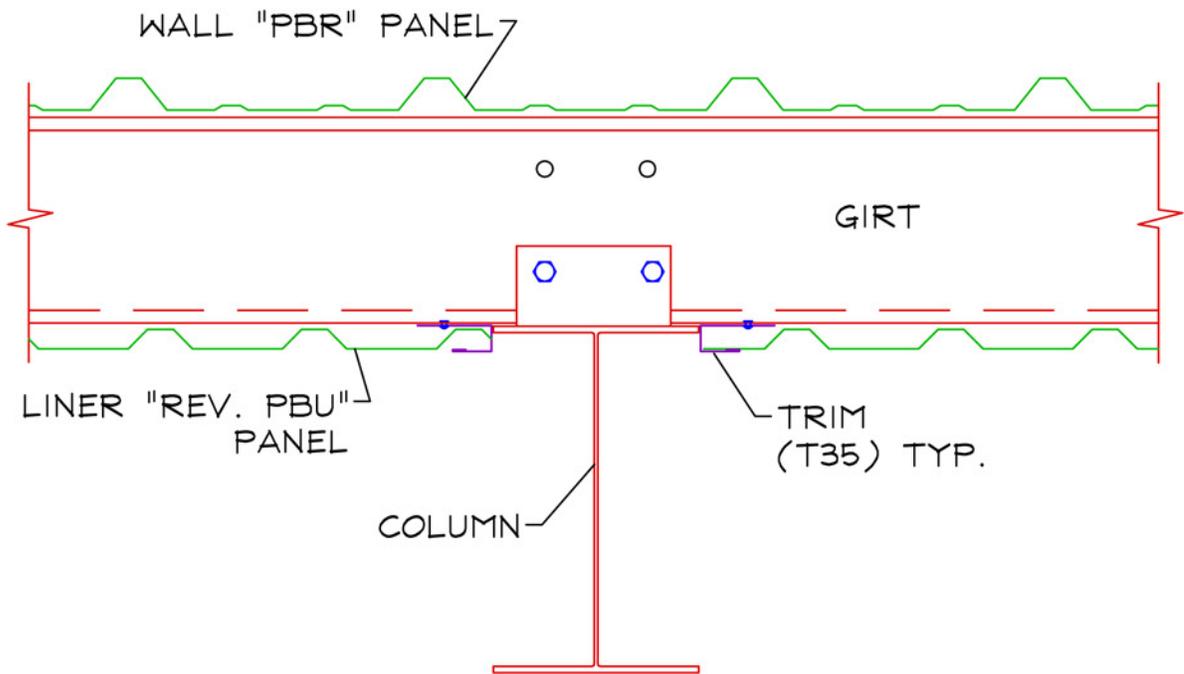



Liner

L05 - JAMB @ OVERHEAD DOOR

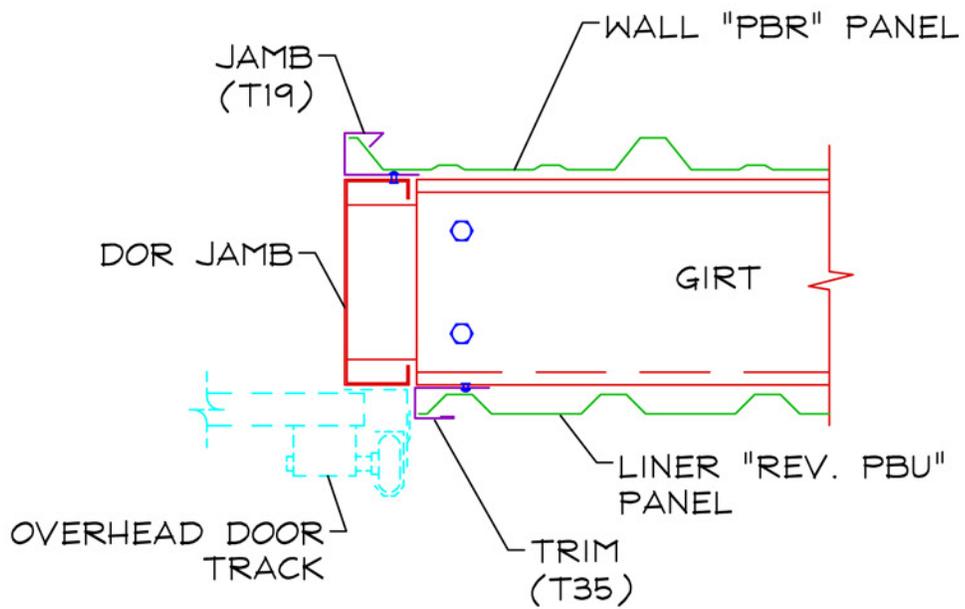


Liner

L06 - JAMB @ OVERHEAD DOOR (FULL HEIGHT LINER)

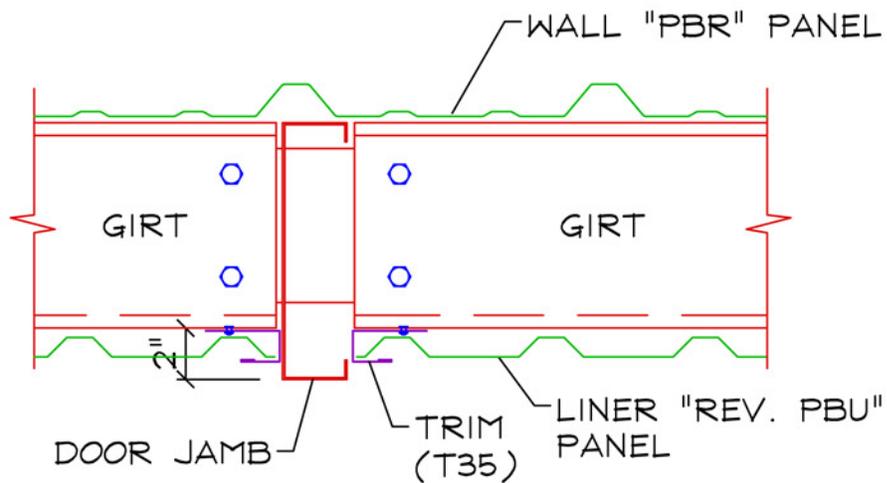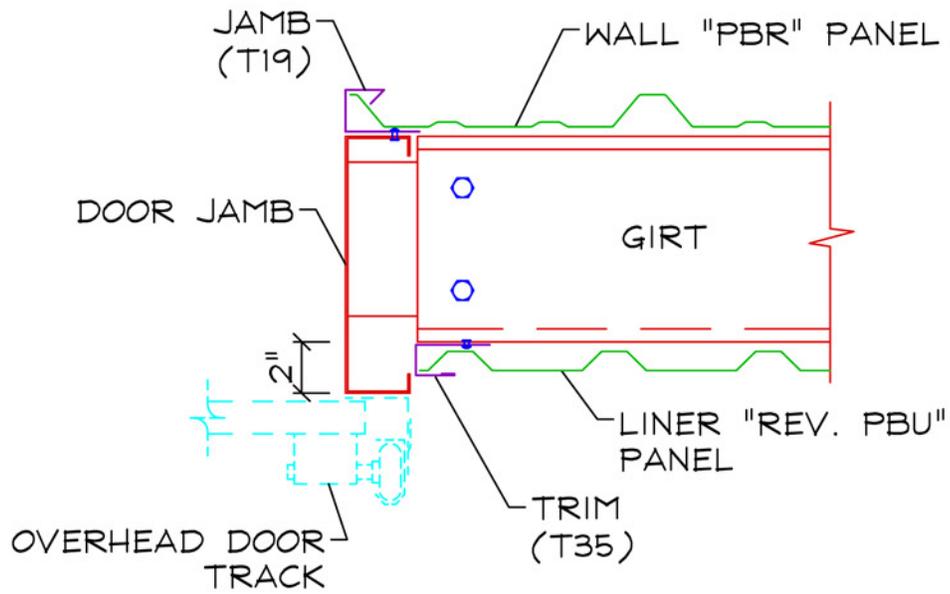

Liner

L07 - HEAD @ OVERHEAD DOOR (FULL HEIGHT LINER)

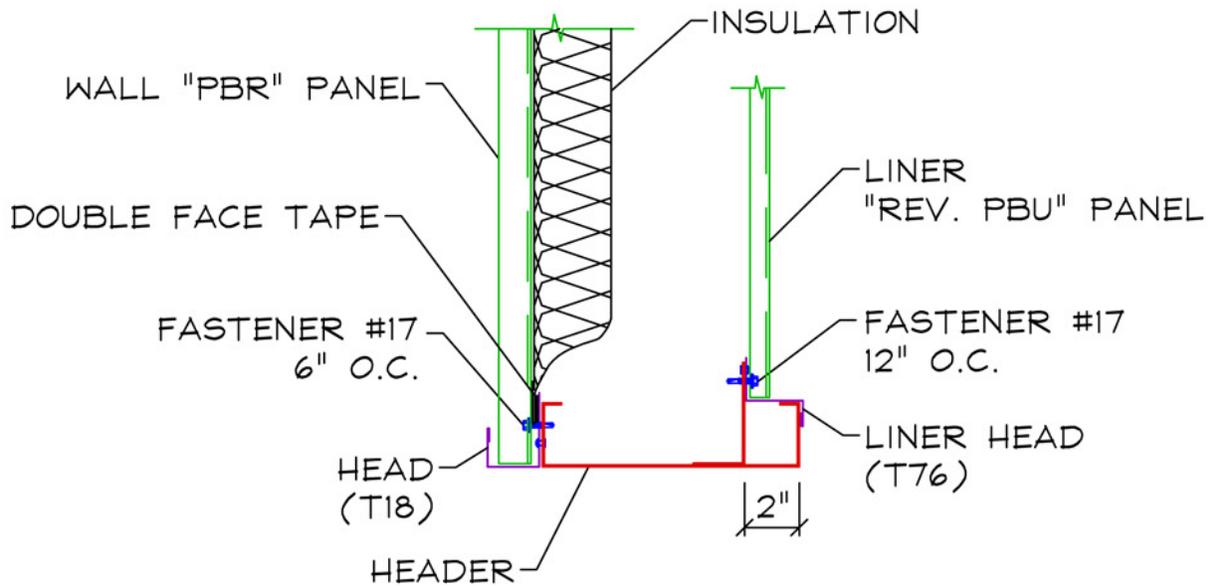


DRAFTING NOTE:
SHOP WELD SHEETING ANGLE TO HEADER

NOTES:
1) INSTALL ALL TRIM TO FRAMING WITH FASTENER #14A (24" O.C.)


Liner

L08 - HEAD @ PERSONNEL DOOR

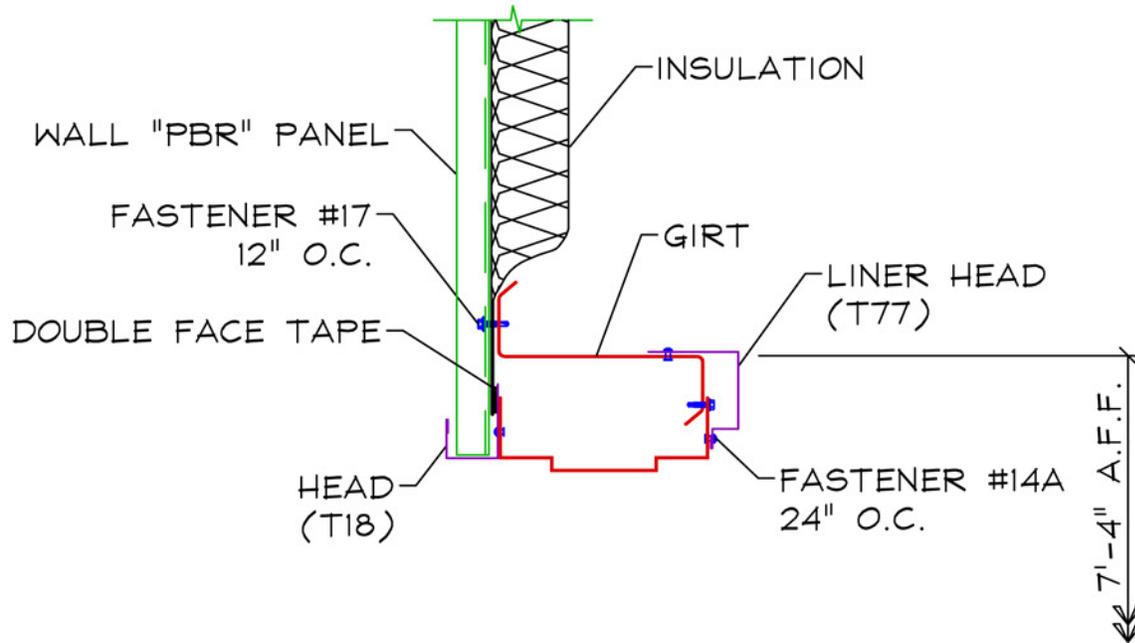

Liner

L09 - EAVE (FULL HEIGHT LINER)

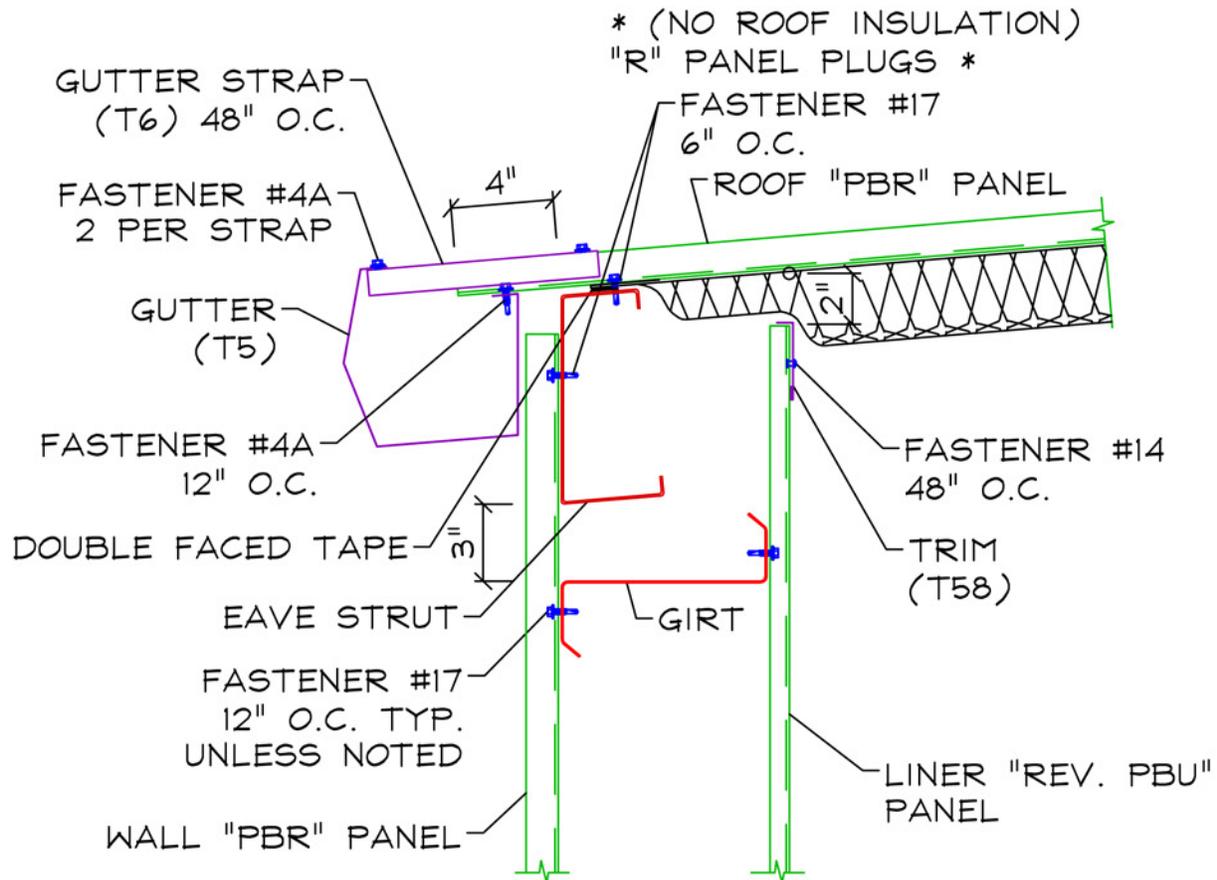


NOTES:

- 1) INSTALL "R" PANEL PLUGS WHEN ROOF INSULATION IS NOT PRESENT.
- 2) PULL BACK FIBERGLASS APPROXIMATELY 4" @ TOP OF EAVE STRUT.
- 3) GUTTER LAPS SHOULD BE APPROXIMATELY 3" WITH A BEAD OF URETHANE SEALANT IN BETWEEN.

Partition

P01 - TRANSVERSE

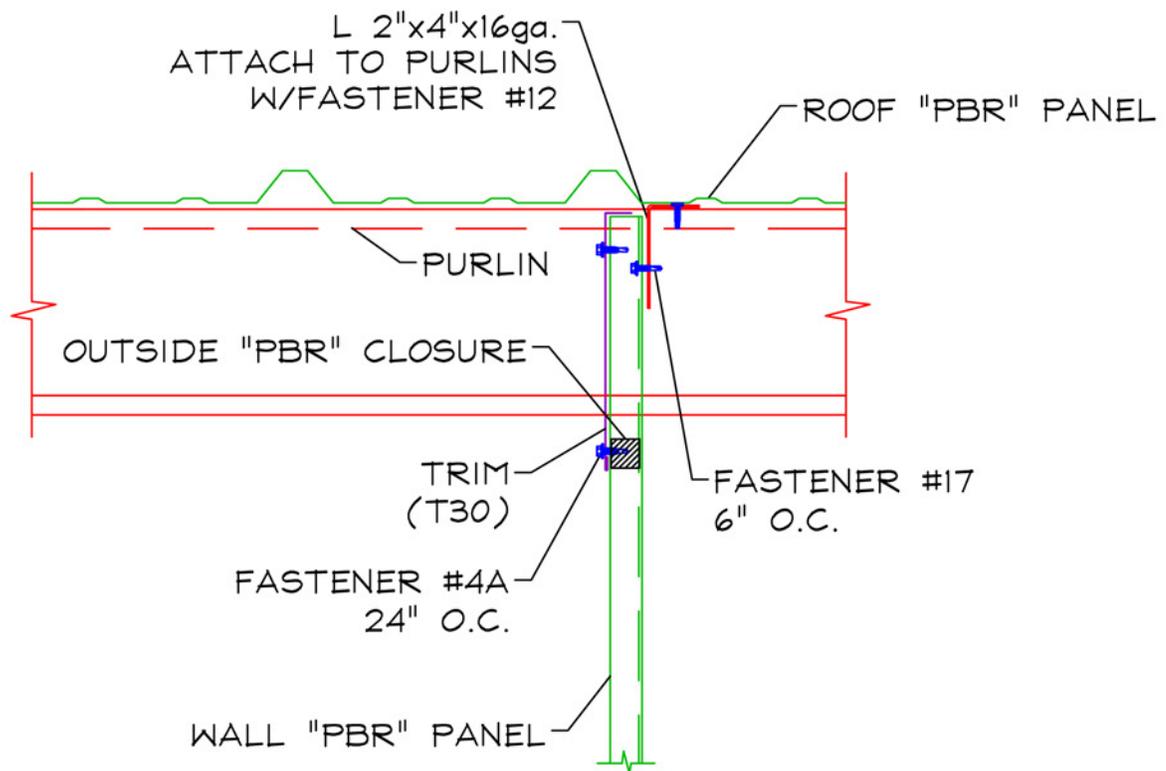


NOTES:

- 1) SHEETING ANGLE MUST BE NOTCHED AROUND PURLINS.
- 2) OUTSIDE CLOSURES ARE NOT PROVIDED FOR ROOF SLOPES OF 3:12 AND GREATER.


Partition

P02 - LONGITUDINAL

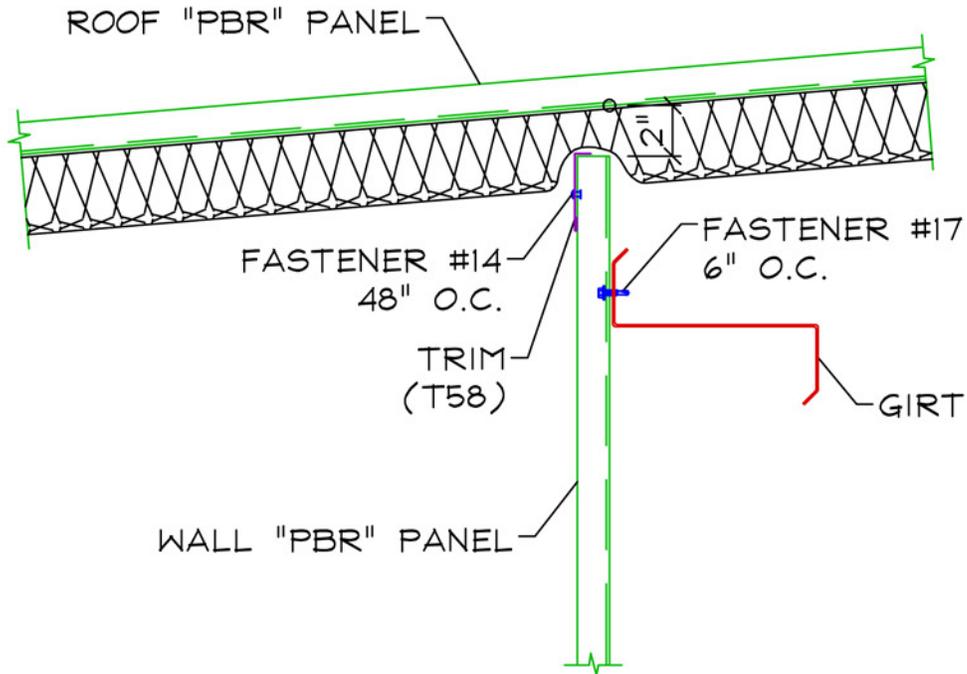

Partition

P03 - CORNER

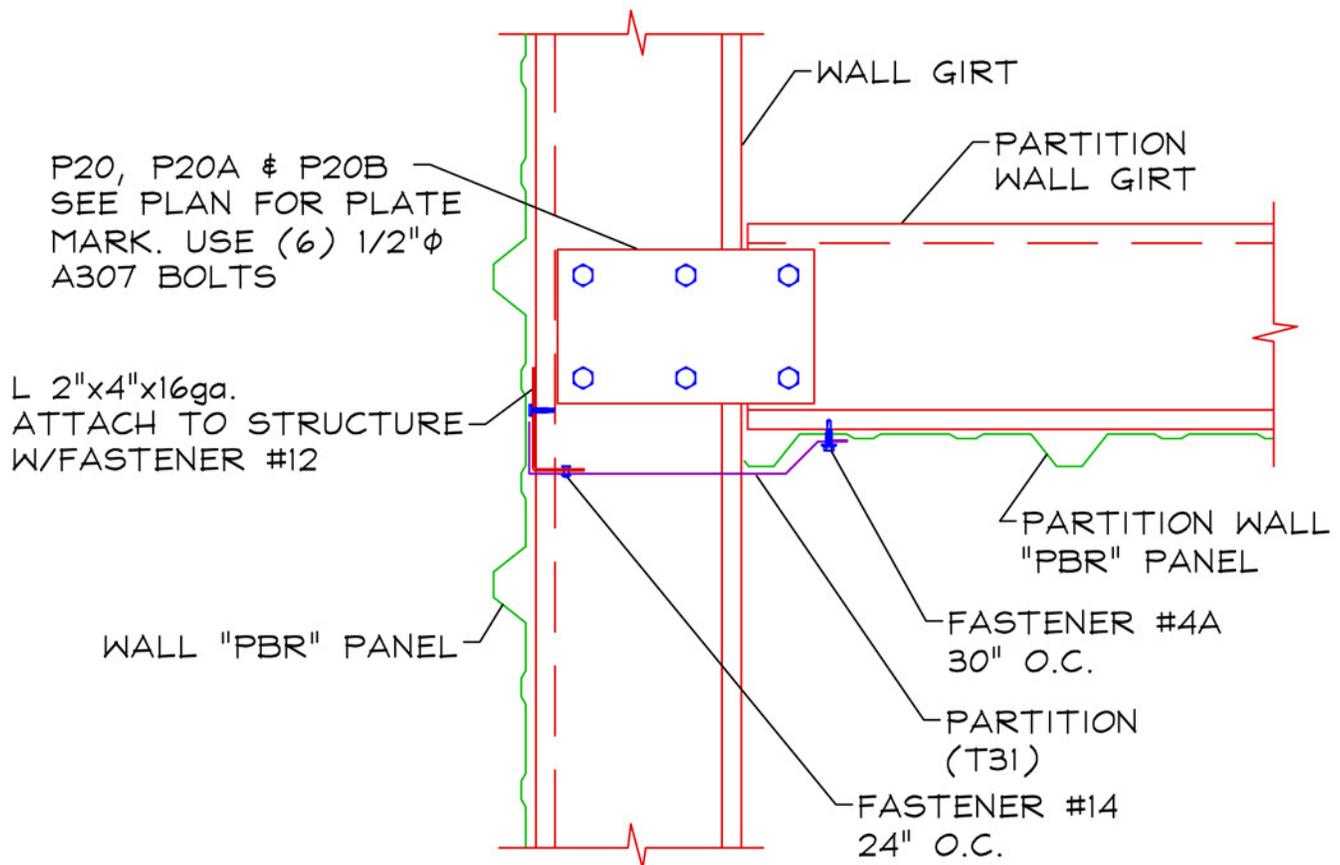


NOTES:

- 1) SHEETING ANGLE MUST BE NOTCHED @ BASE MEMBER, GIRT AND EAVE STRUT
- 2) T31 PARTITION TRIM WILL BE SENT FULL LENGTH. CUTTING THIS TRIM TO FIT BETWEEN THE GIRTS WILL BE REQUIRED ALONG WITH NOTCHING THE TRIM AROUND WALL MEMBERS.

Light Panel

LP01 - ROOF

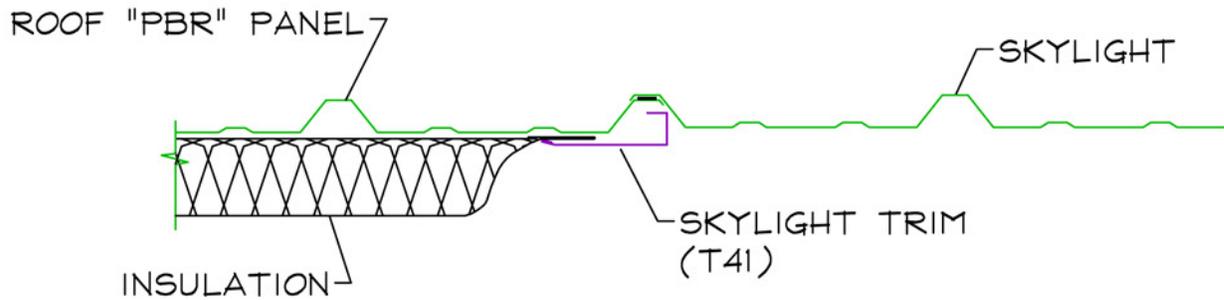


NOTES:

- 1) TO BE USED ON INSULATED BUILDINGS WITHOUT WIRE.
- 2) ATTACH T41 SKYLIGHT TRIM TO TOP OF PURLINS WITH FASTENER #12 (3) PER TRIM PIECE.

Light Panel

LP02 - SIDEWALL

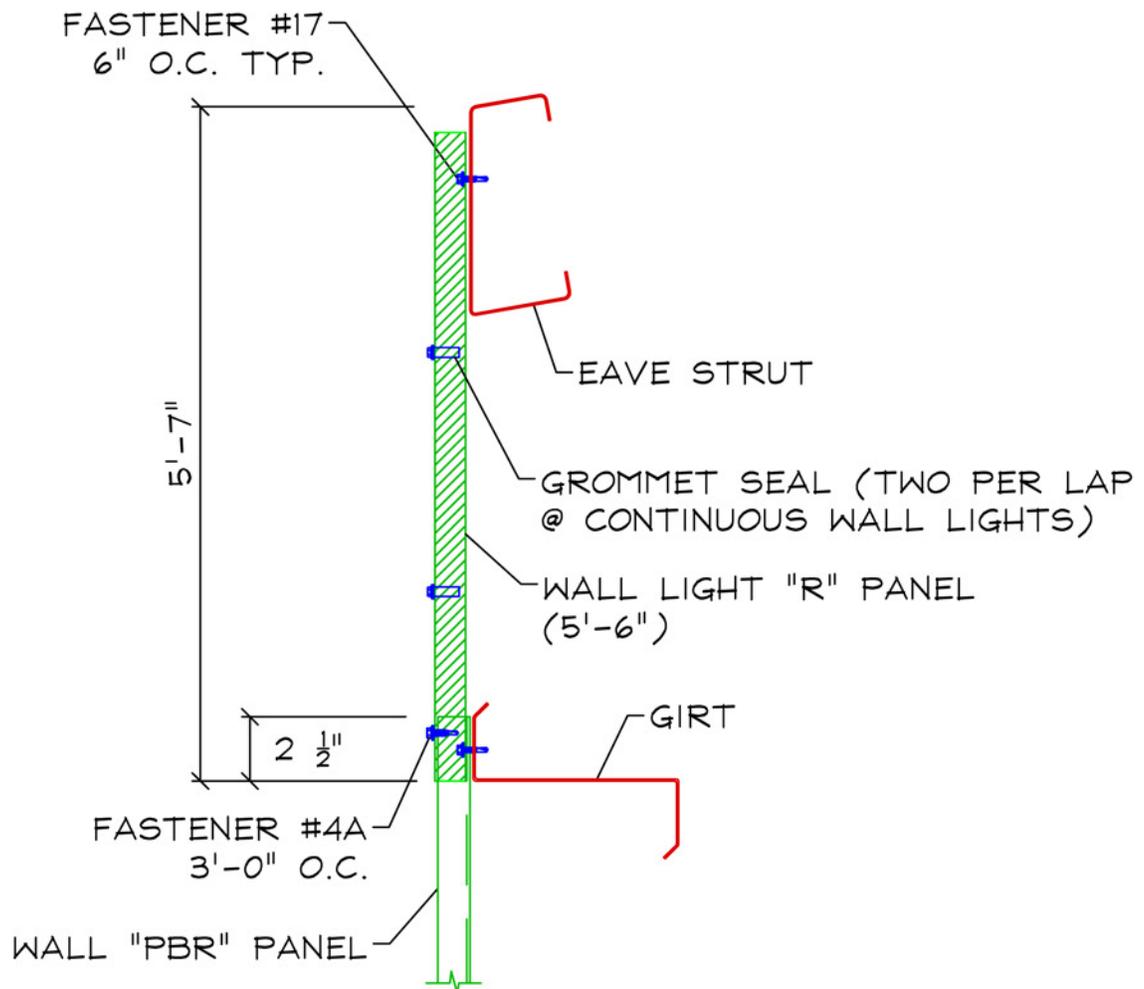


NOTES:

- 1) ALL STRUCTURAL AND LAP SCREWS SHALL BE LIGHT STONE.
- 2) USE (2) GROMMET SEAL FOR ALL CONTINUOUS WALL LIGHT LAP CONNECTIONS. GROMMETS WILL REQUIRE 3/8" DIA. FIELD DRILLED HOLES.

Light Panel

LP03 - ENDWALL

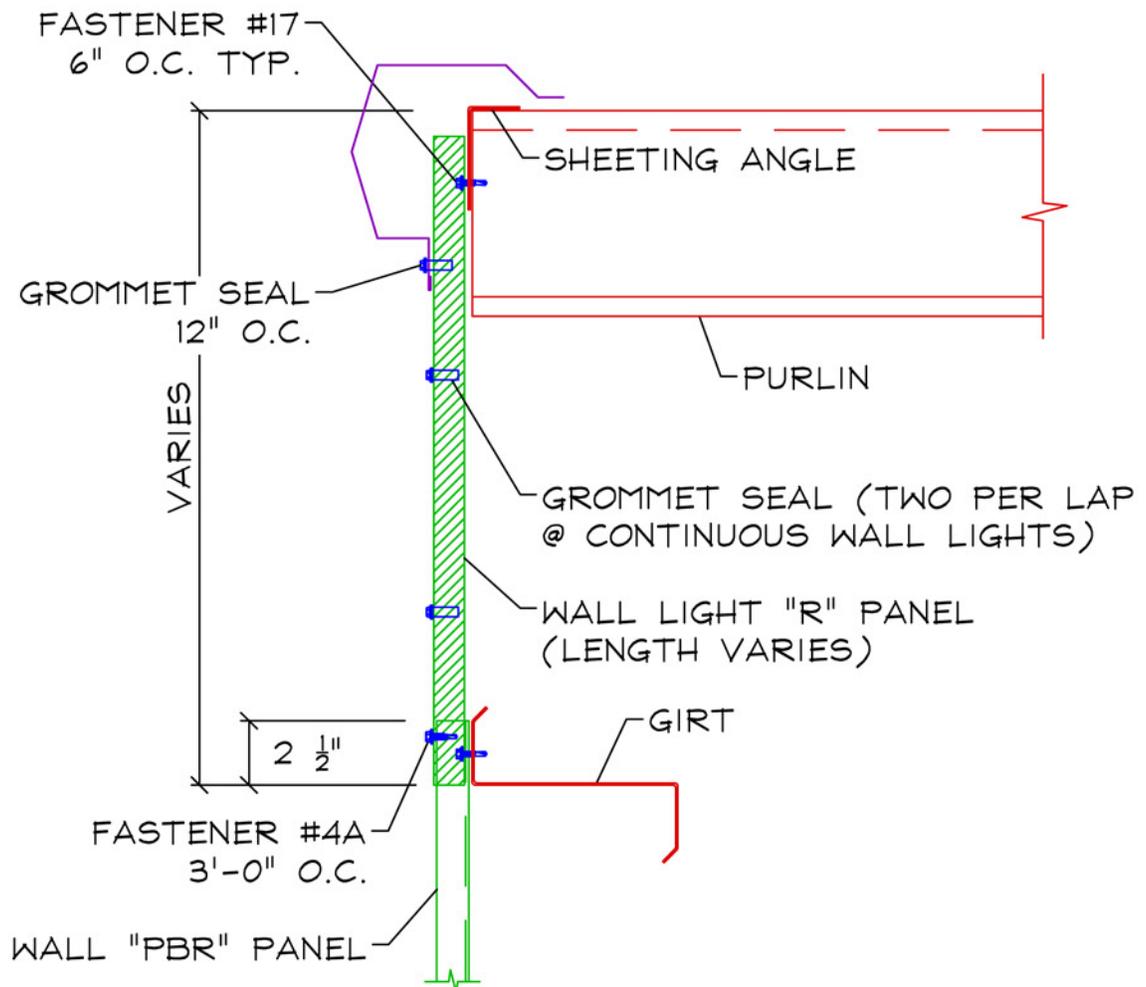


NOTES:

- 1) ALL STRUCTURAL AND LAP SCREWS SHALL BE LIGHT STONE.
- 2) USE (2) GROMMET SEAL FOR ALL CONTINUOUS WALL LIGHT LAP CONNECTIONS. GROMMETS WILL REQUIRE 3/8" DIA. FIELD DRILLED HOLES.

Light Panel

LP04 - SIDEWALL

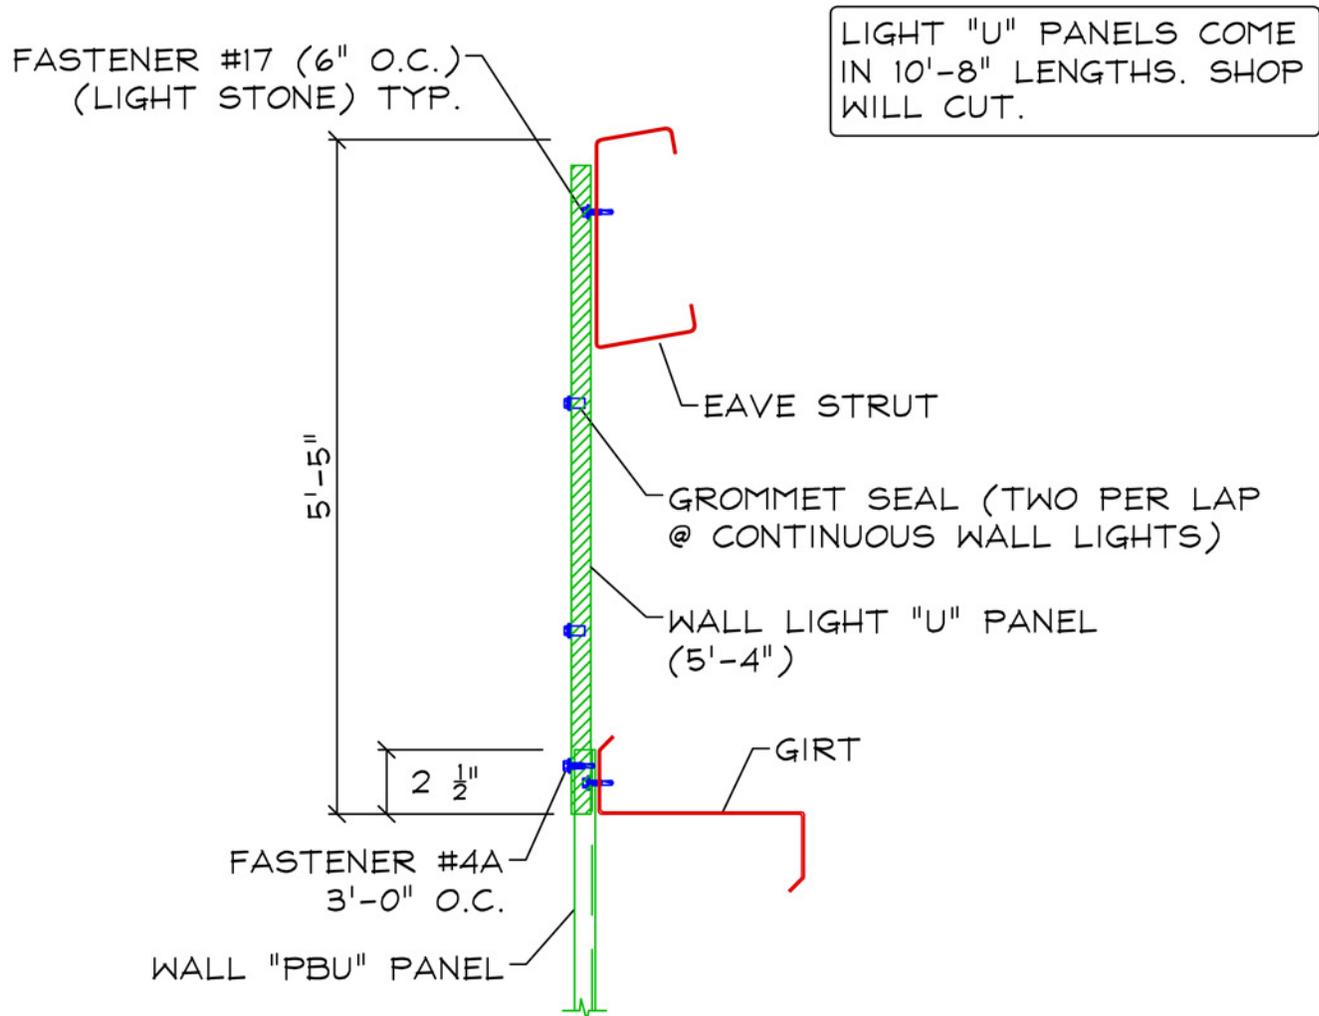


NOTES:

- 1) ALL STRUCTURAL AND LAP SCREWS SHALL BE LIGHT STONE.
- 2) USE (2) GROMMET SEAL FOR ALL CONTINUOUS WALL LIGHT LAP CONNECTIONS. GROMMETS WILL REQUIRE 3/8" DIA. FIELD DRILLED HOLES.


Strapping

S01 - GABLE ROOF

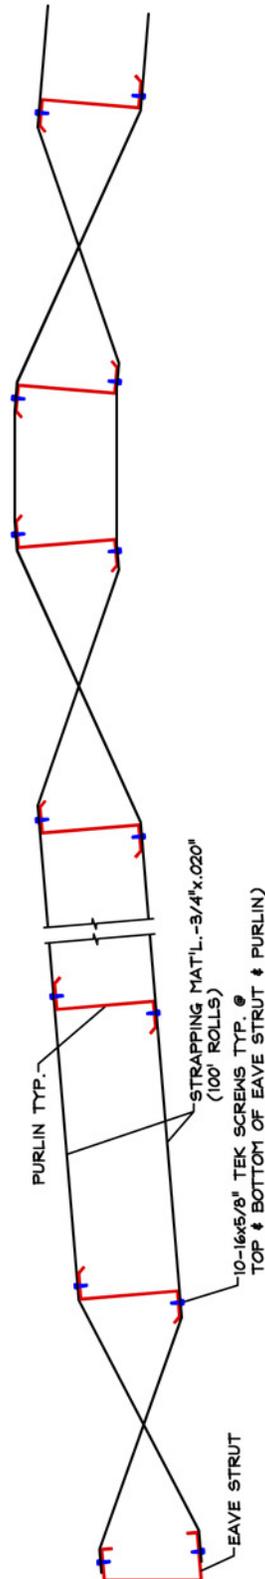


Strapping

S10 - ENDWALL (PARTIAL WALL)

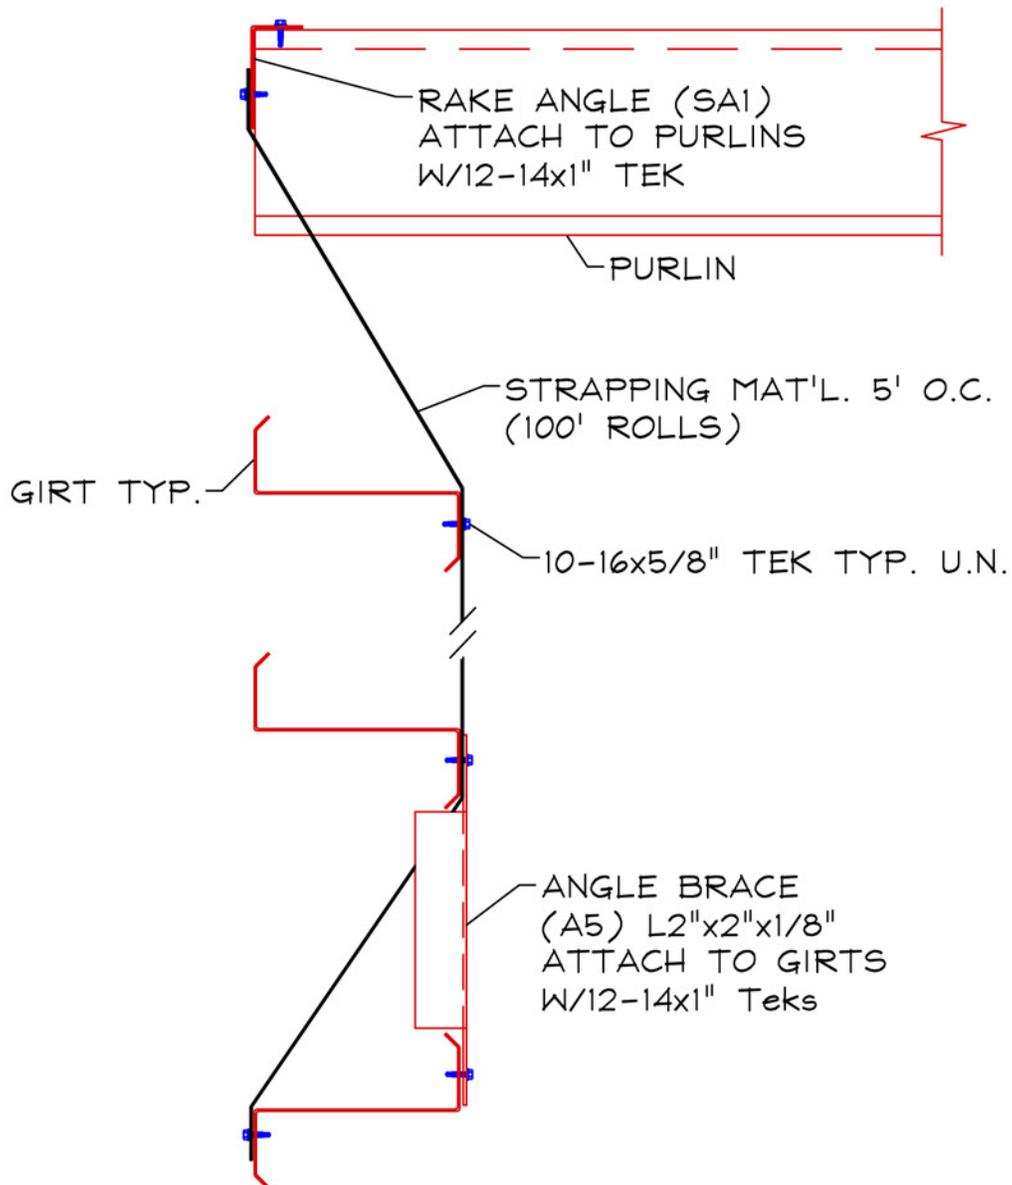


Strapping

S11 - SIDEWALL (PARTIAL WALL)

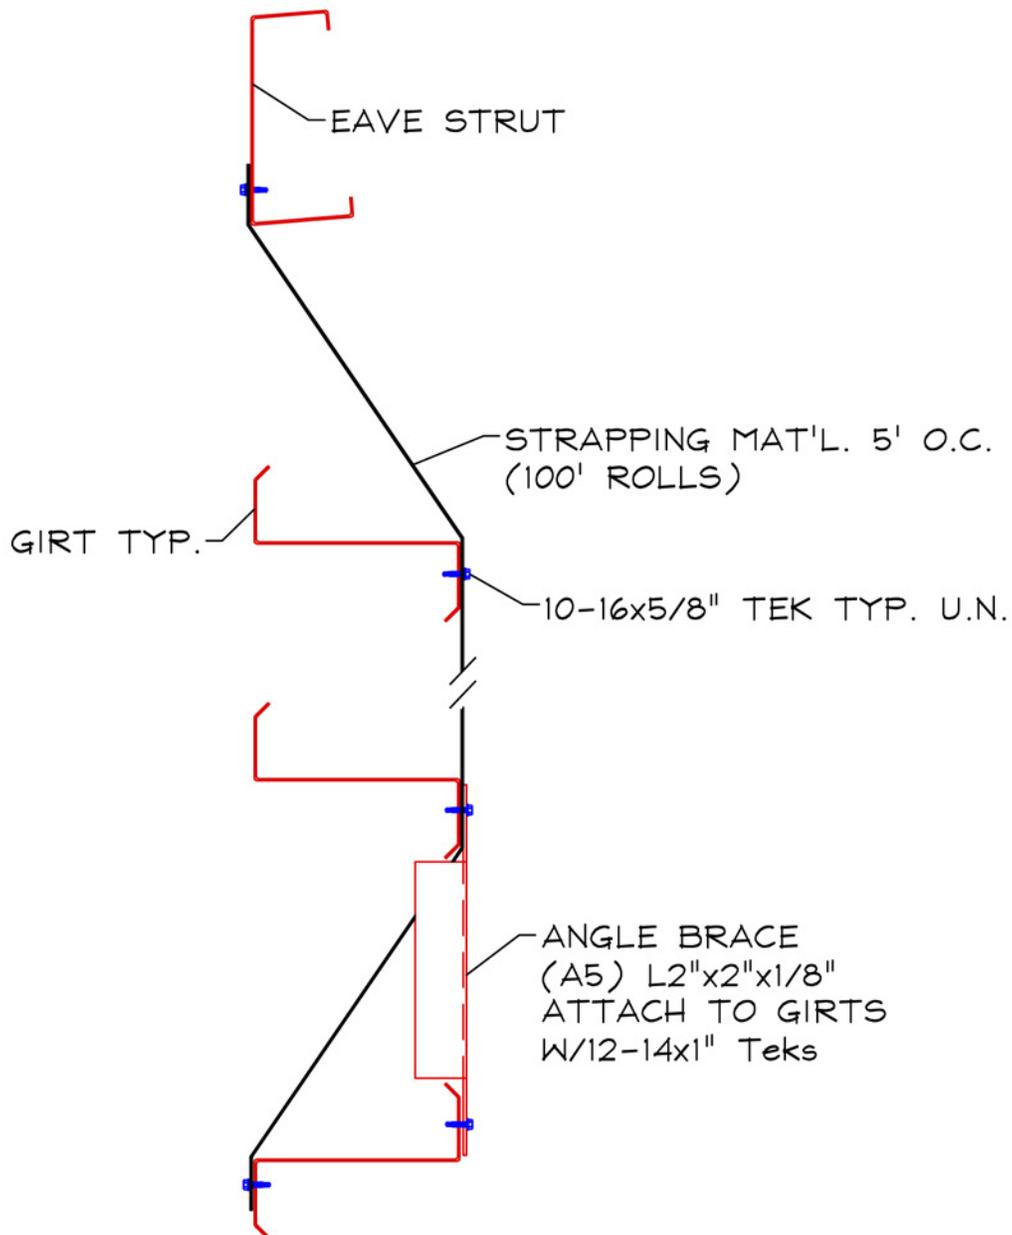


Strapping

S12 - GABLE ROOF "INSUL-BANDING SYSTEM"

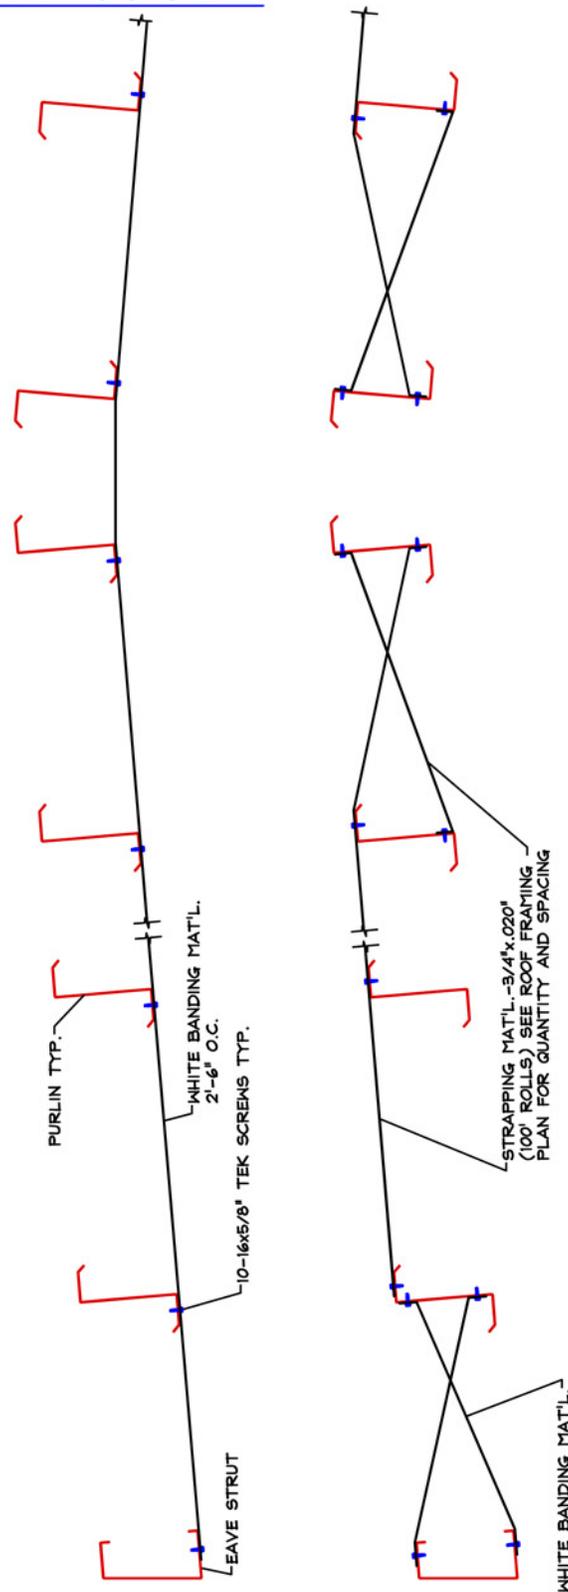


Strapping

S02 - SINGLE SLOPE

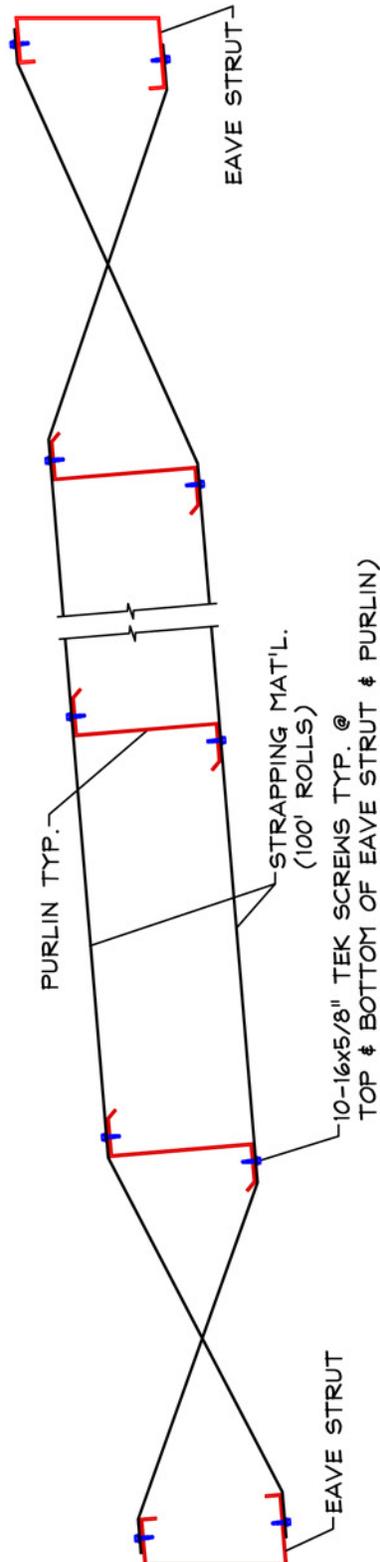


Strapping

S03 - LEAN-TO

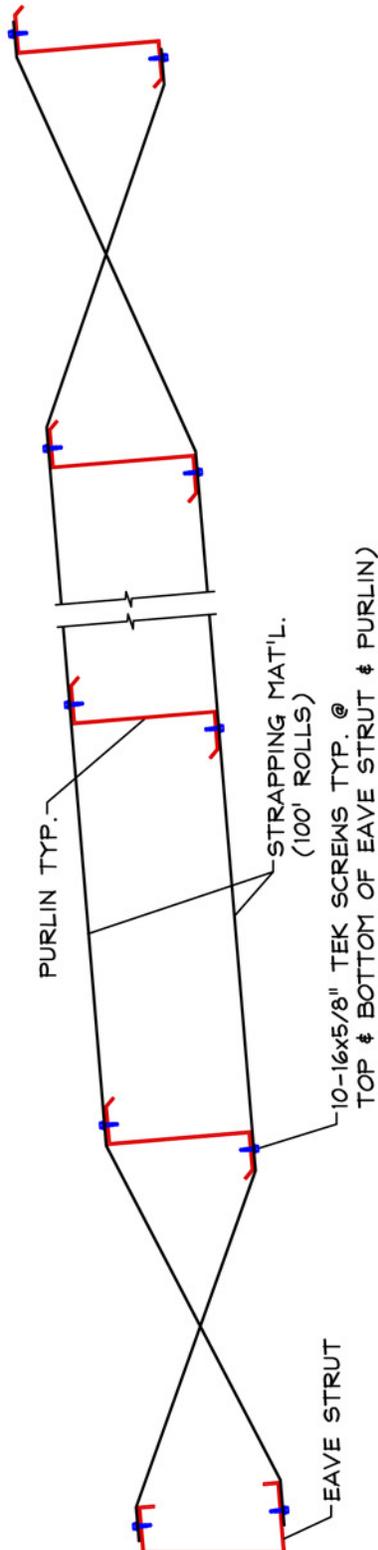


Strapping

S04 - ENDWALL

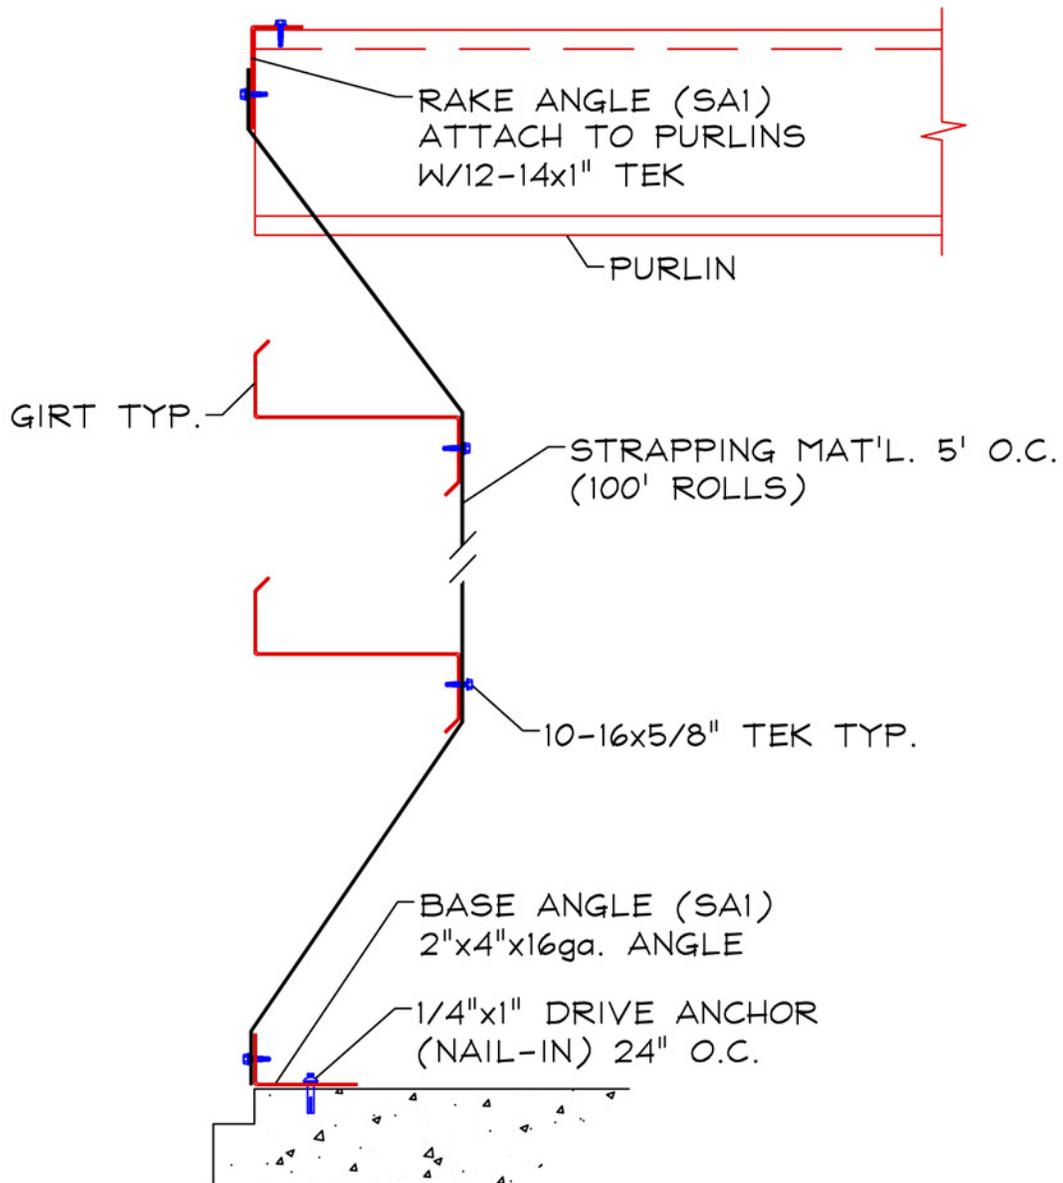


Strapping

S05 - SIDEWALL

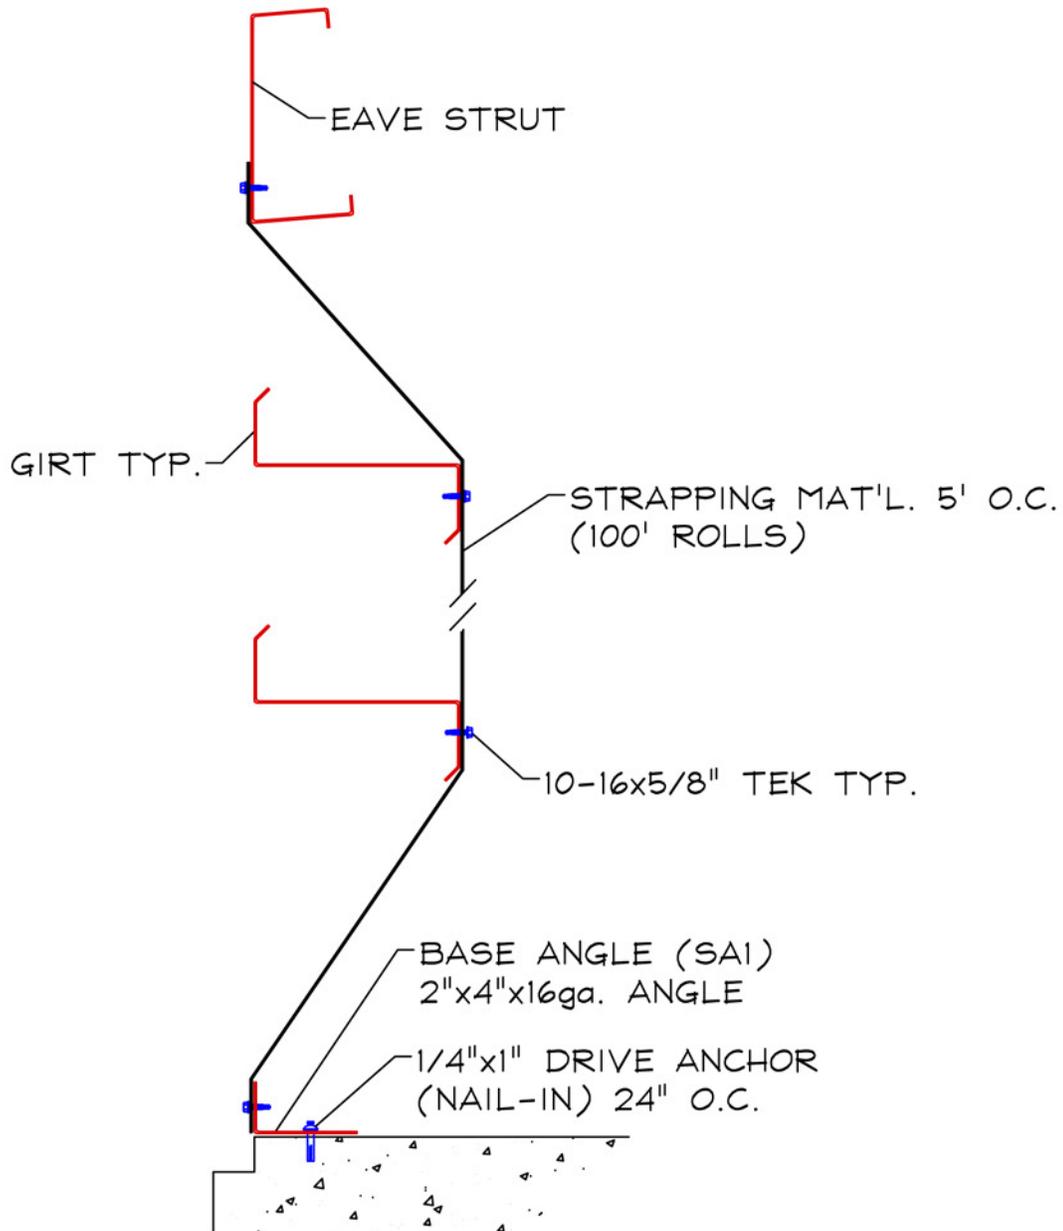


Strapping

S06 - ENDWALL (BASE GIRT)

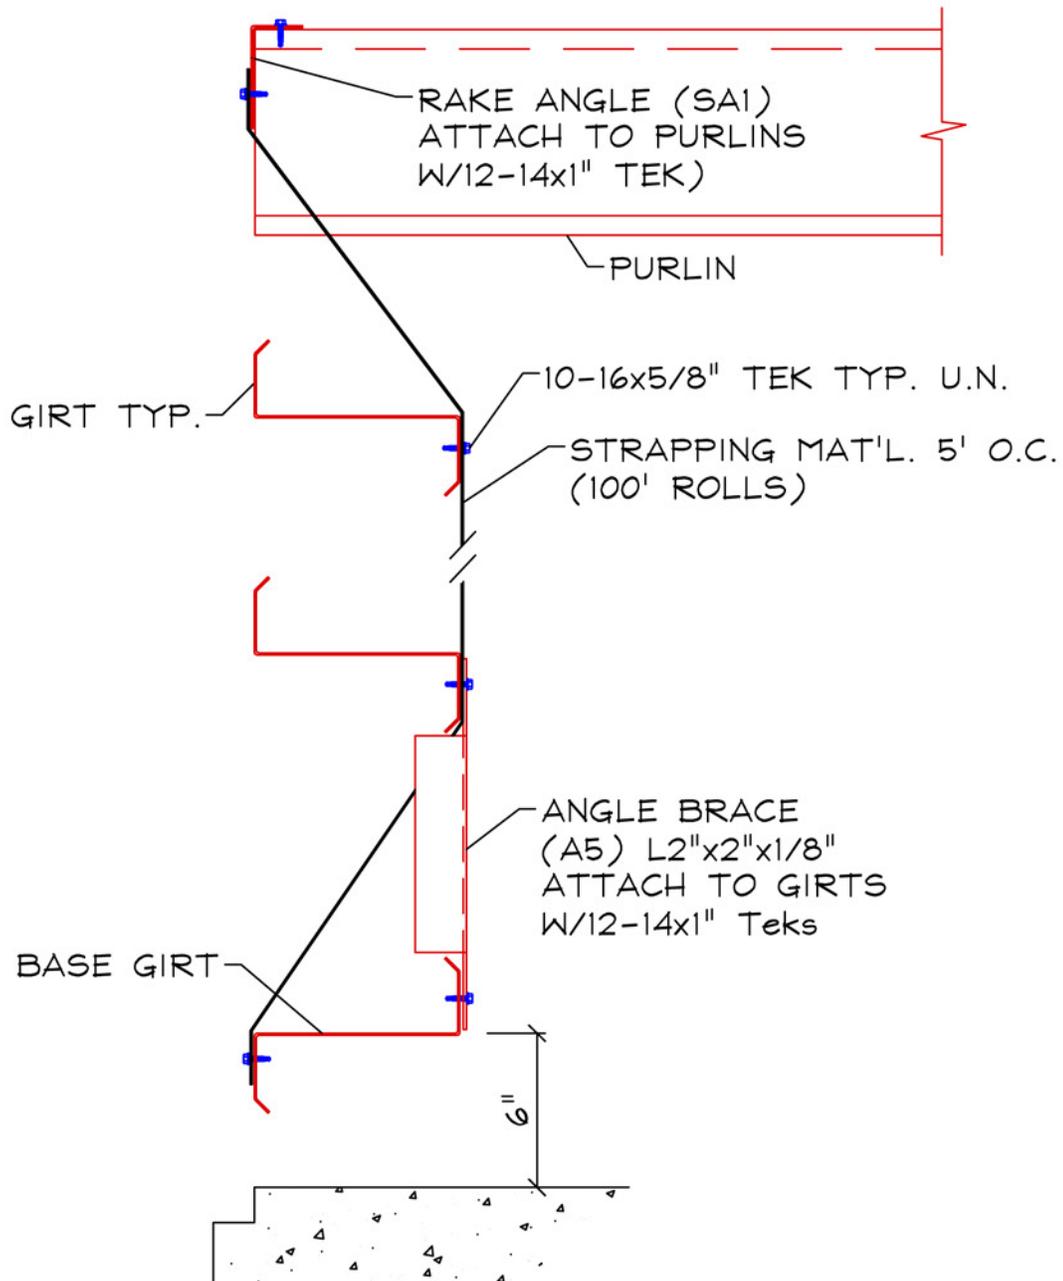


Strapping

S07 - SIDEWALL (BASE GIRT)

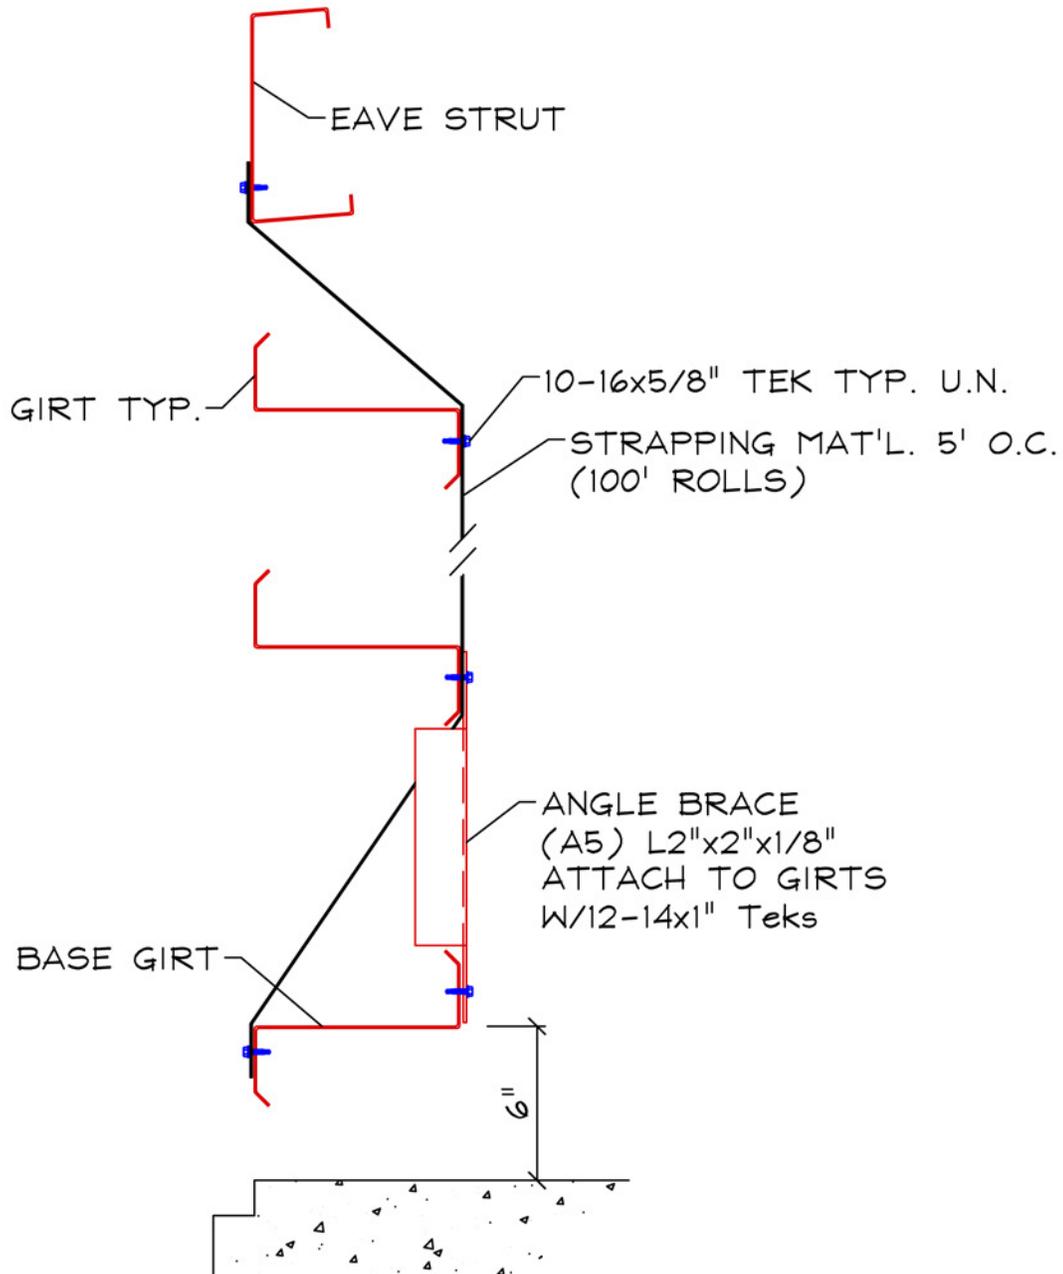

Strapping

S08 - ENDWALL (PARTIAL WALL)

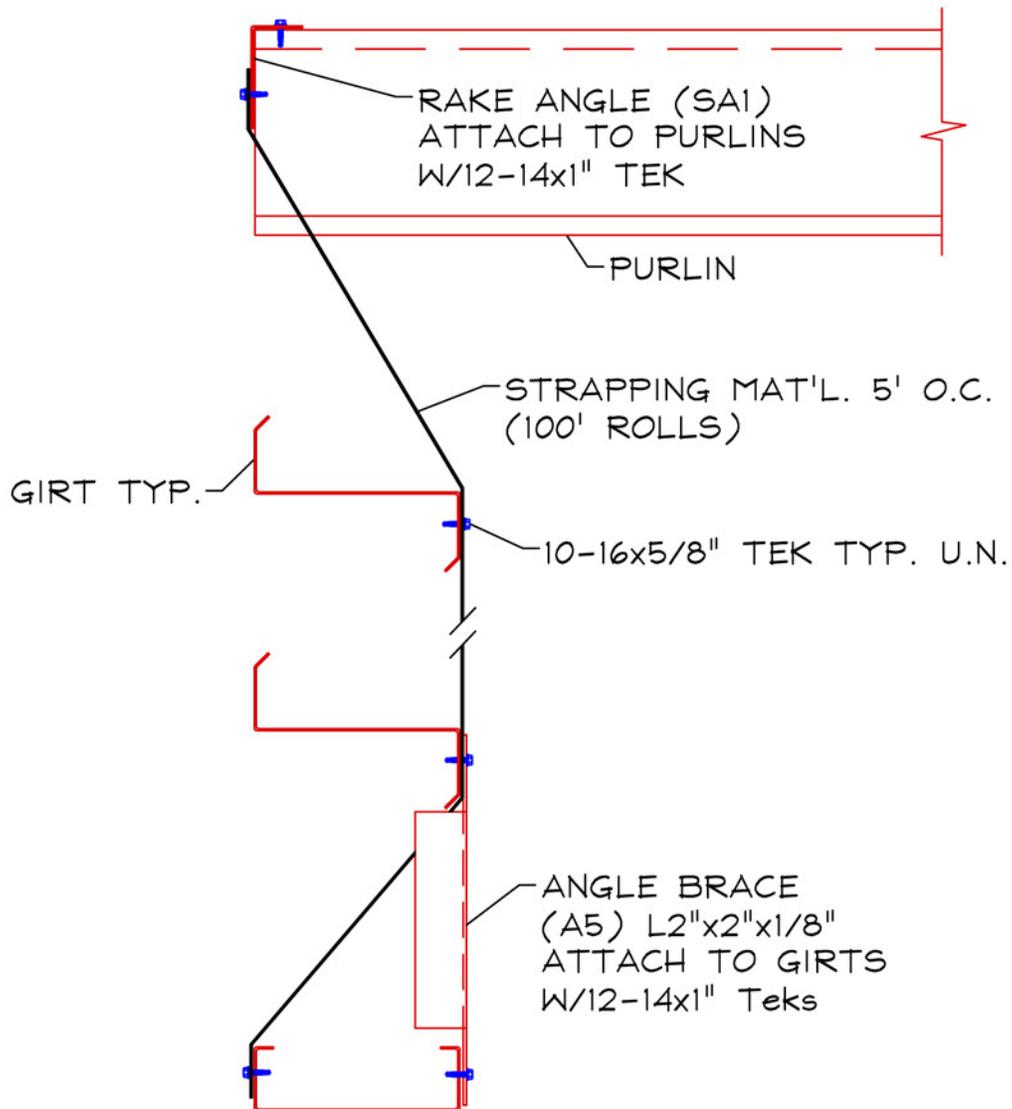

Strapping

S09 - SIDEWALL (PARTIAL WALL)

